




Sony Vaio Pro 13 Trackpad Replacement

Replacement of trackpad assembly

Written By: Alex R

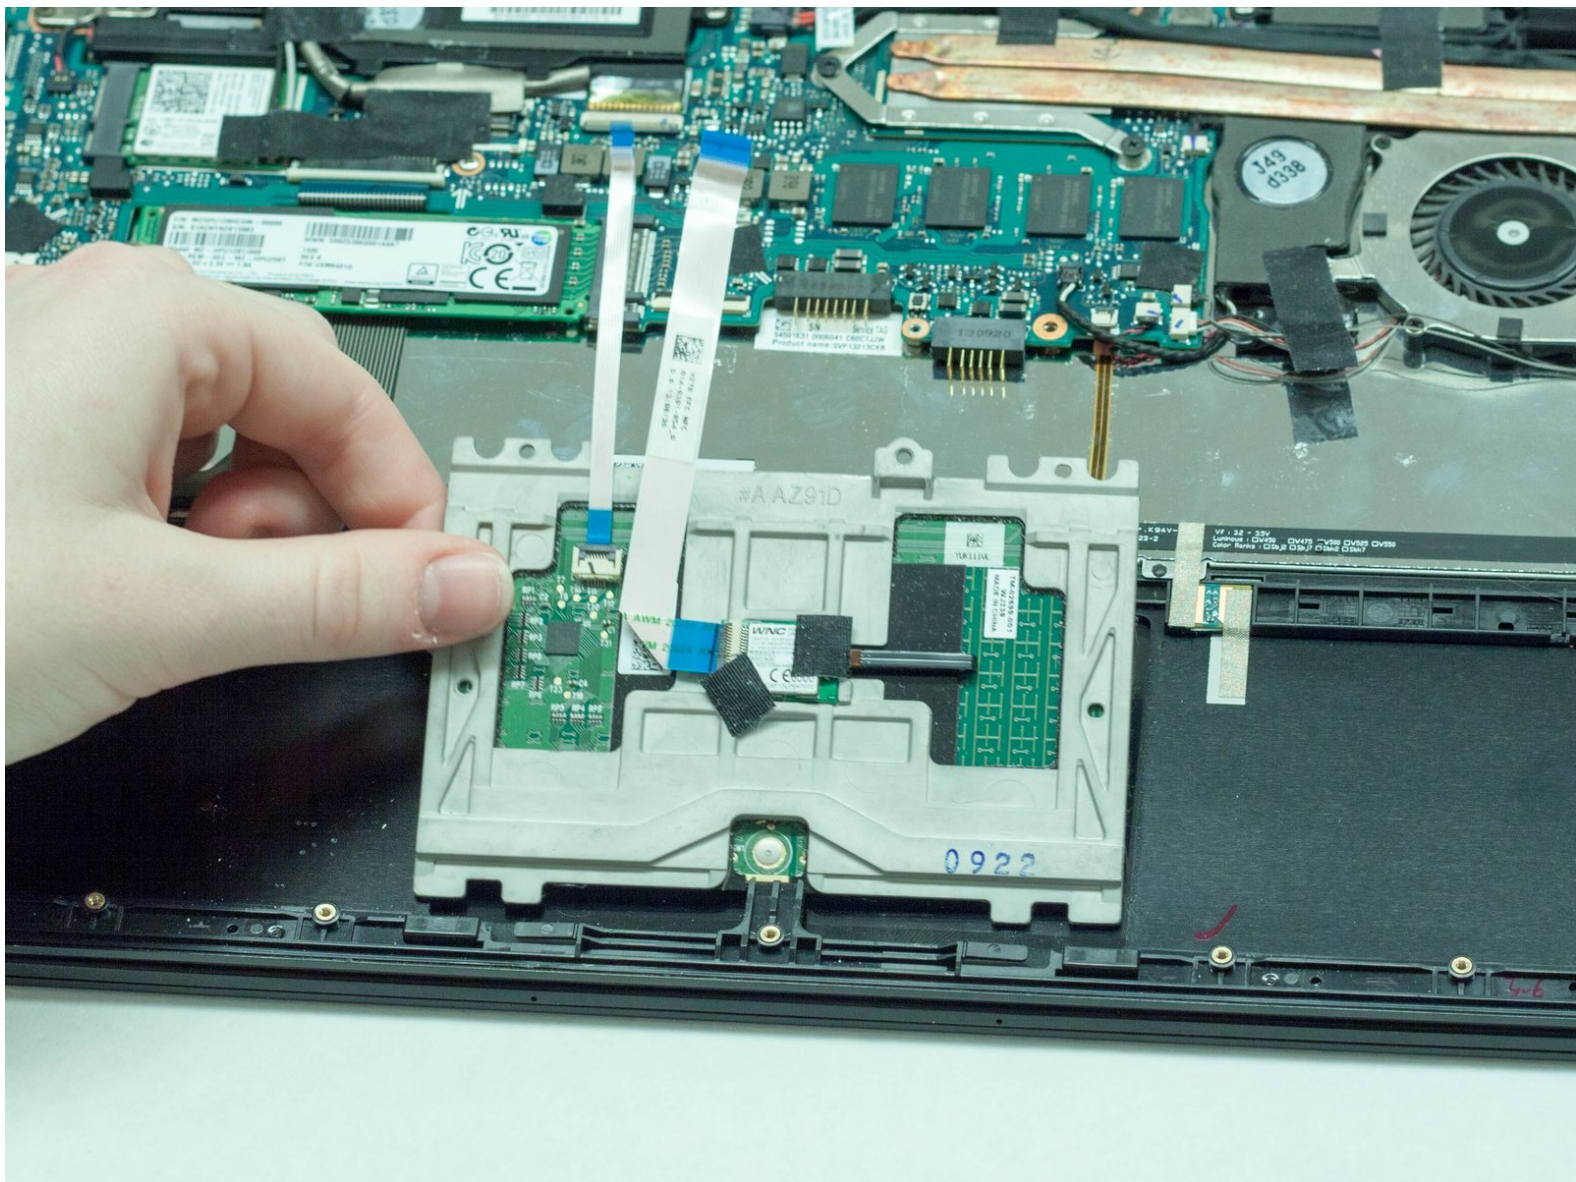

INTRODUCTION

Trackpad replacement



TOOLS:



- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Bottom Cover





- Remove cover for the extended battery connector. Use your finger nail or a plastic opening tool to remove it.
- Remove the two rubber feet at the back of the computer, these can be removed in the same way.

Step 2

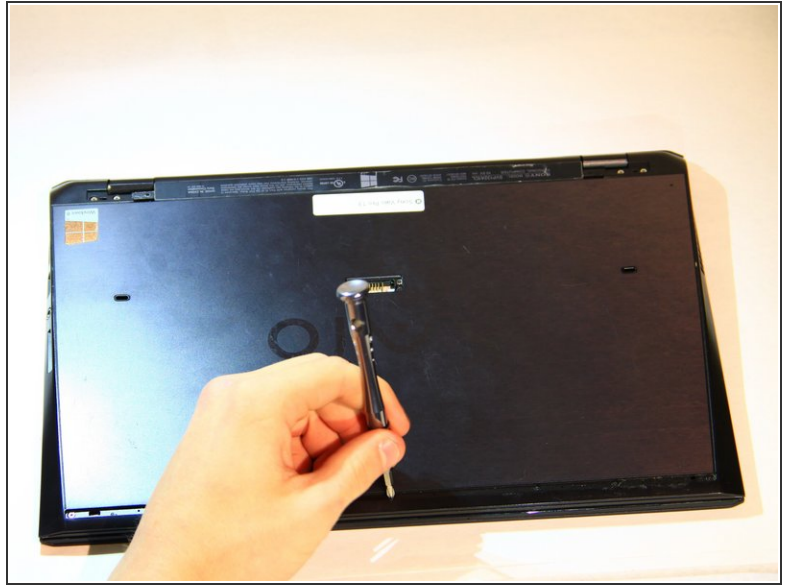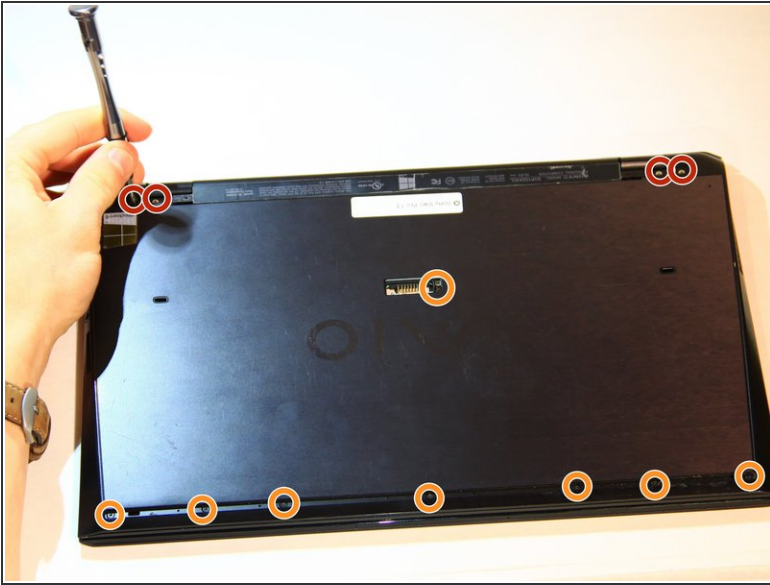


- Remove the four 5.6mm Philips #00 screws located at the top of the computer.
- Remove the eight 3.6mm Philips #00 screws on the base of the computer.

Step 3

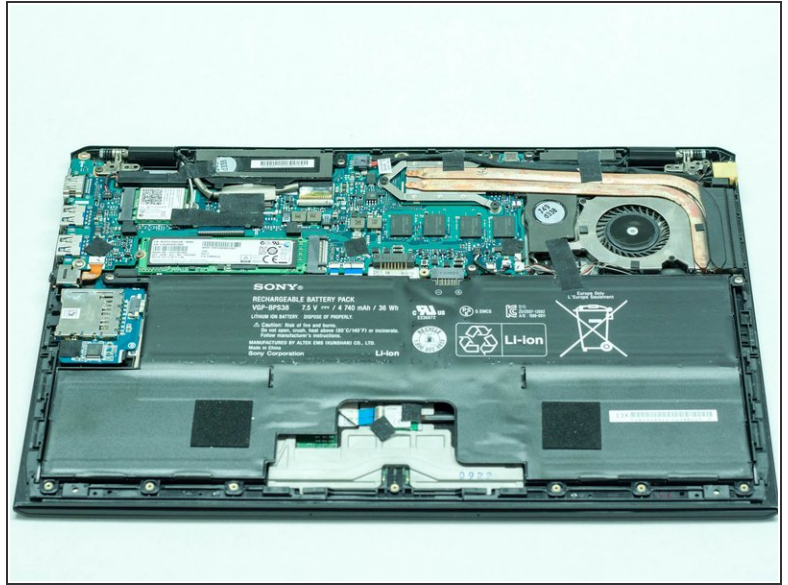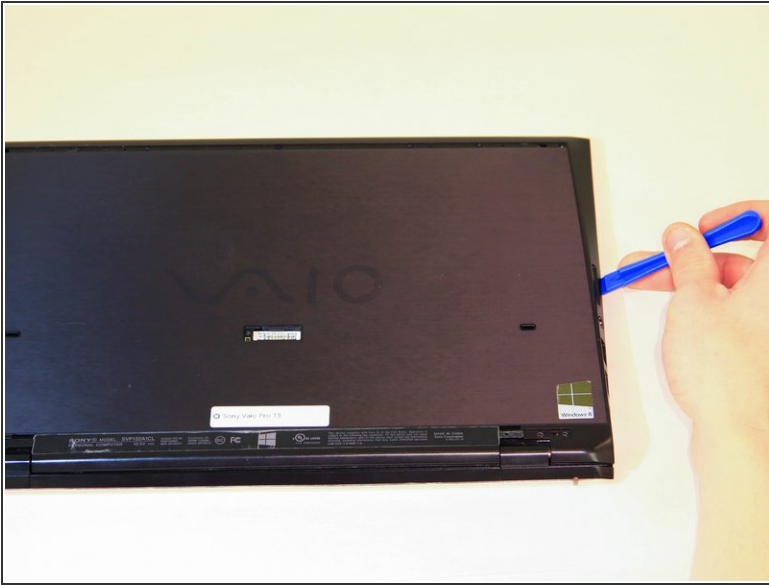


- Using a plastic opening tool, pry the plastic casing away from the base of the computer, the remaining clips around the edges can be released using your hands.
- ⓘ Leave the side with the USB and audio port until last, then slide the case out and off, so the audio port doesn't get caught.

Step 4 — Internal Battery

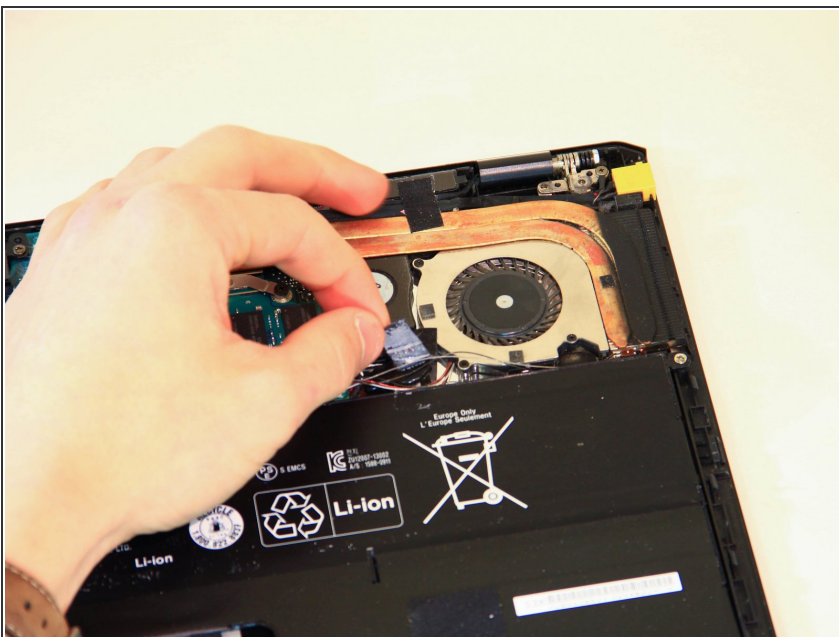



- Once the bottom cover is removed, peel away the piece of tape located near the fan and heat sink assembly.

Step 5

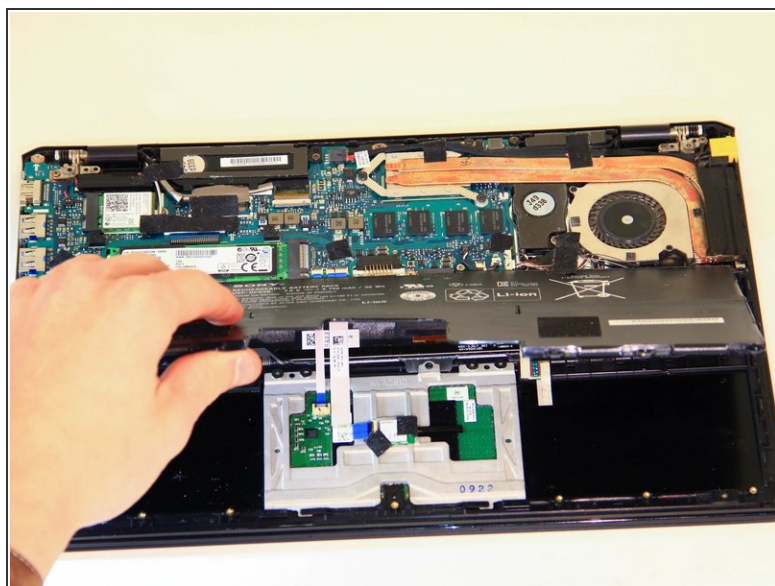



- Remove the three 4.2mm Philips #0 screws located at the top of the battery.
- Simply lift the battery away from the computer.

Step 6 — Trackpad

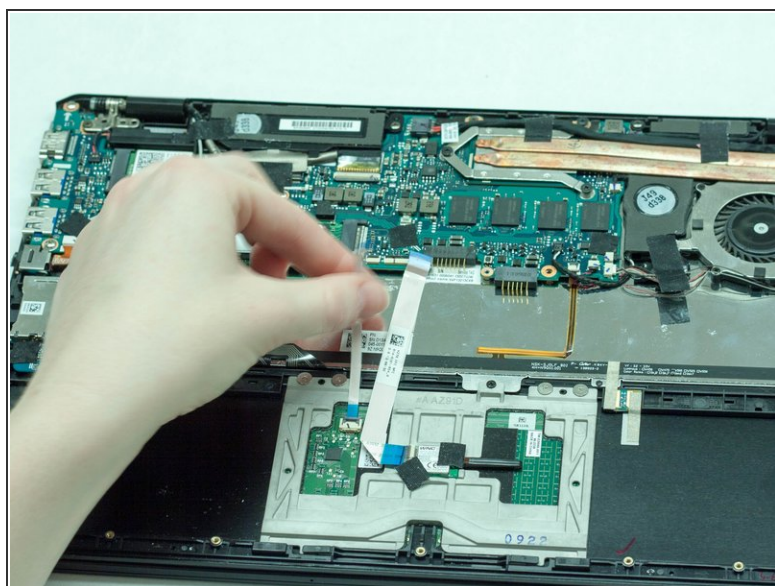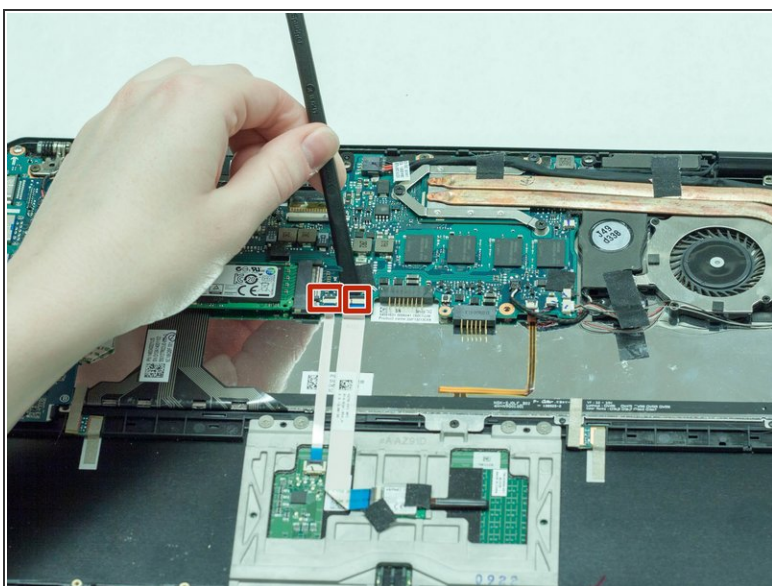



- Use the nylon spudger to lift up on both of the white wire strips.
- Then use your fingers to lift them up.

Step 7

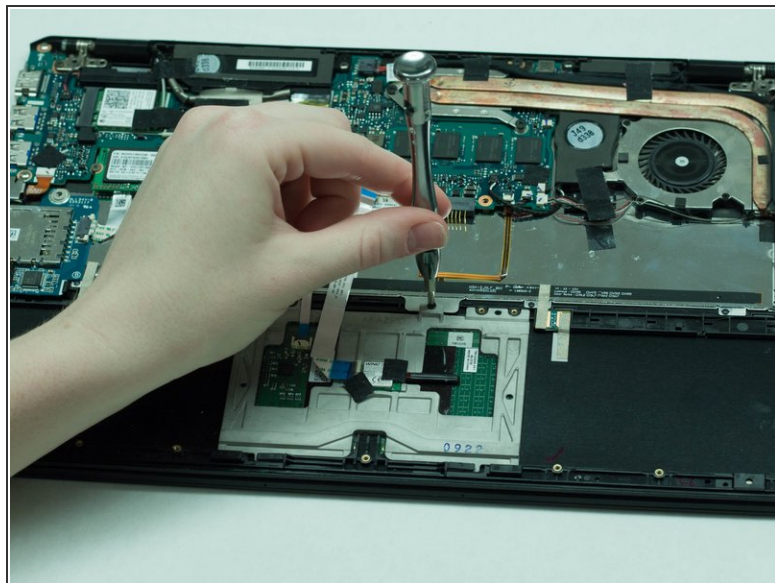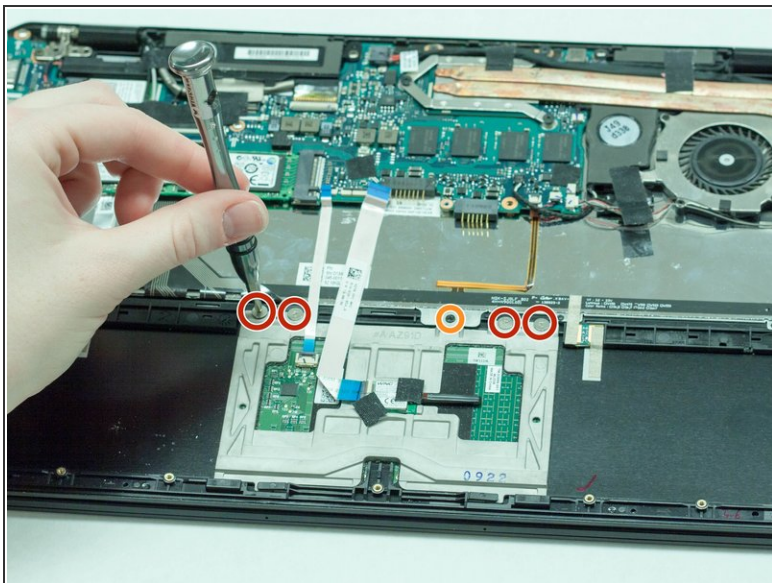

- Using the Phillips head screwdriver, remove the four screws holding the track pad in.
- Use the Phillips head again and remove the final black screw.

Step 8

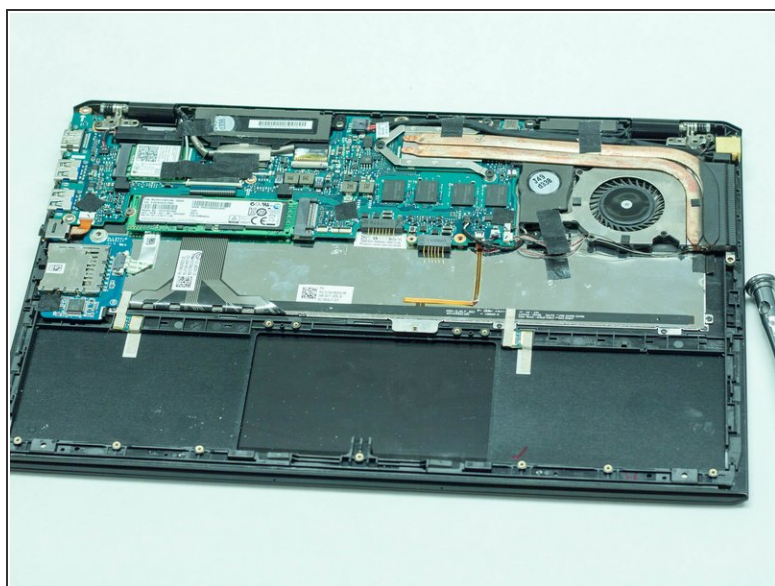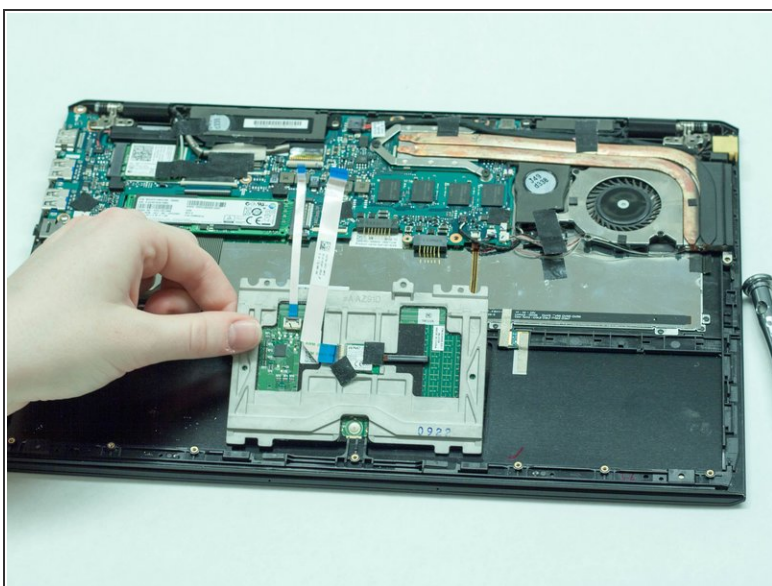

- Finally, remove the track pad from the computer.

To reassemble your device, follow these instructions in reverse order.