



# Sony Vaio Pro 13 Bottom Cover Replacement

Removing or replacing the bottom cover in order to get to the battery and other internal parts of the laptop.

Written By: Catherine Linton





## TOOLS:



- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Bottom Cover




- Remove cover for the extended battery connector. Use your finger nail or a plastic opening tool to remove it.
- Remove the two rubber feet at the back of the computer, these can be removed in the same way.

## Step 2

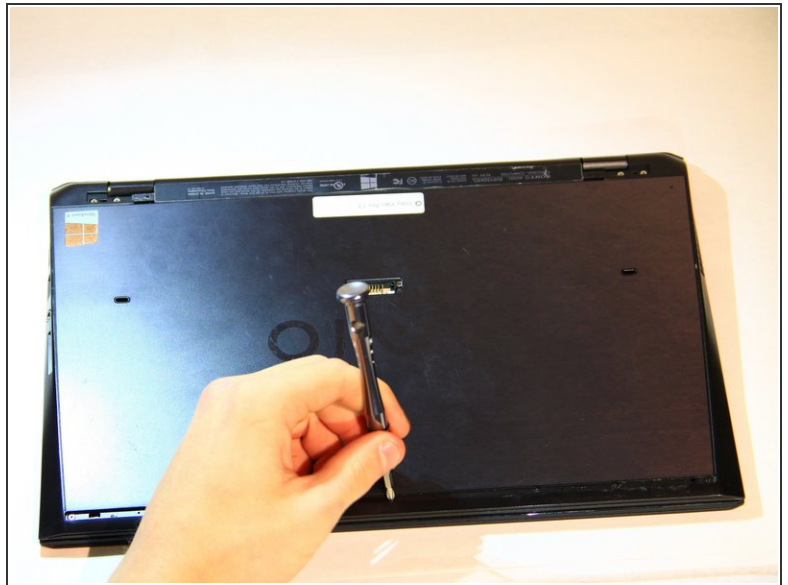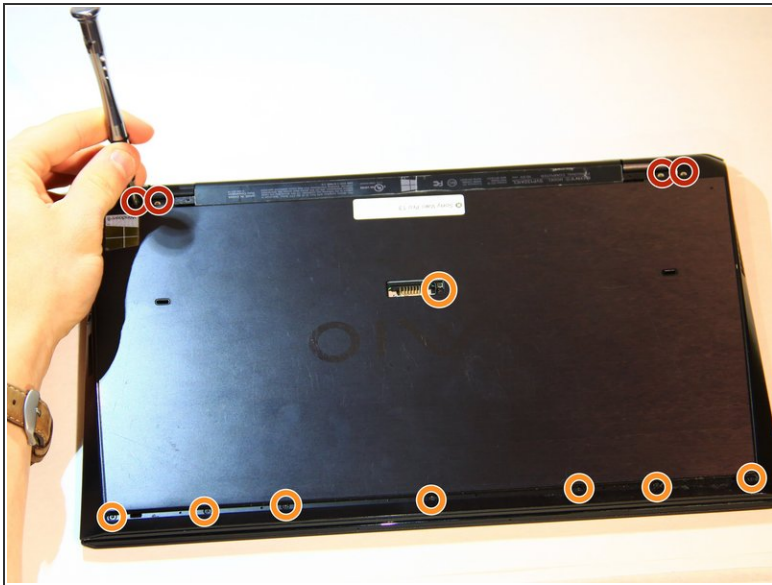

- Remove the four 5.6mm Philips #00 screws located at the top of the computer.
- Remove the eight 3.6mm Philips #00 screws on the base of the computer.

## Step 3

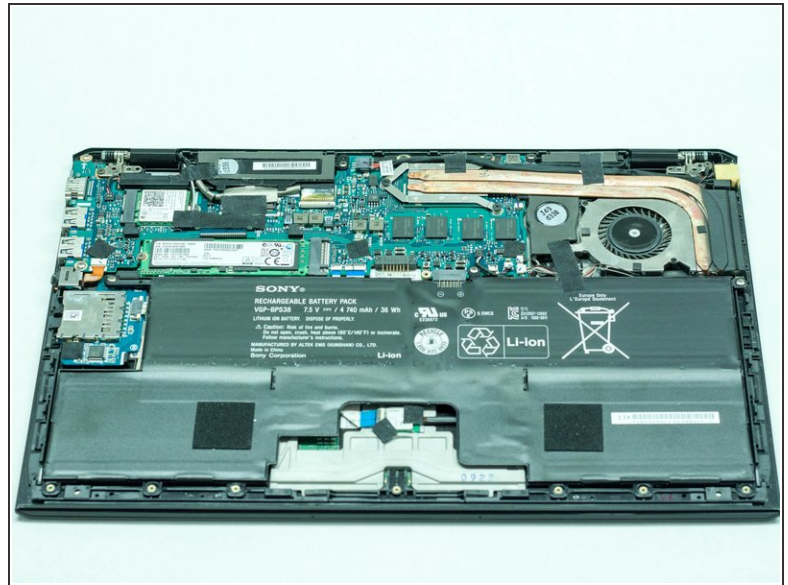

- Using a plastic opening tool, pry the plastic casing away from the base of the computer, the remaining clips around the edges can be released using your hands.
- ⓘ Leave the side with the USB and audio port until last, then slide the case out and off, so the audio port doesn't get caught.

To reassemble your device, follow these instructions in reverse order.