


MacBook Air 13" Mid 2011 Battery Replacement

Internal Prerequisite. Removing the battery after the fan is gone.

Written By: Andrew Bookholt

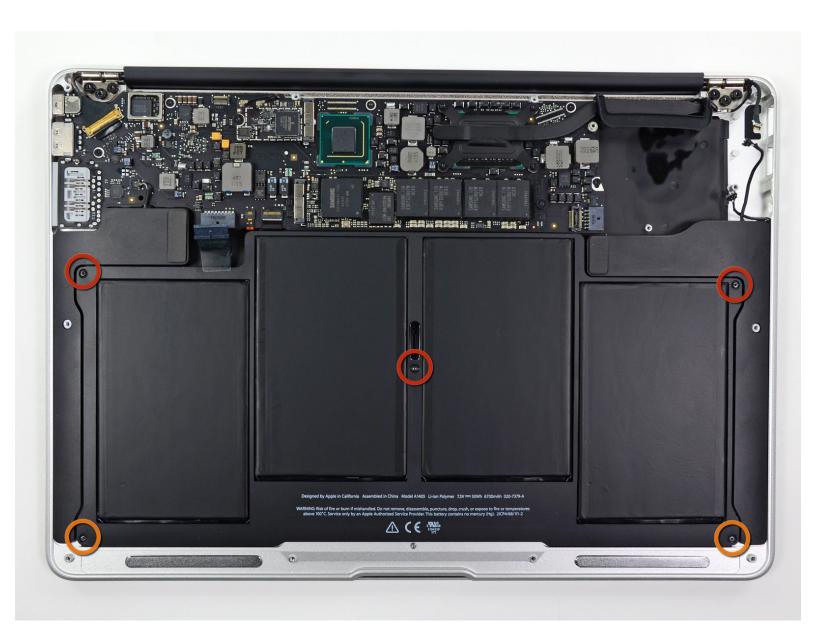

INTRODUCTION


Internal Prerequisite. Removing the battery after the fan is gone.



TOOLS:

• T5 Torx Screwdriver (1)

Step 1 — Battery

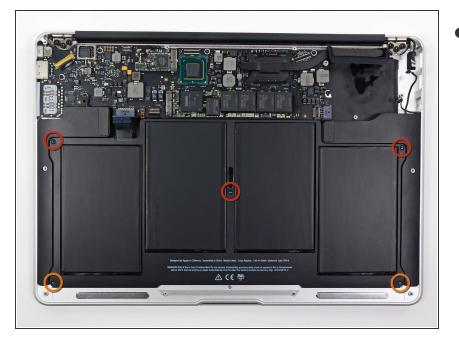

- Remove the following five screws securing the battery to the upper case:
 - Three 6.3 mm T5 Torx screws
 - Two 2.4 mm T5 Torx screws

Step 2



- When handling the battery, avoid squeezing or touching the four exposed lithium polymer cells.
 - Lift the battery from its edge nearest the logic board and remove it from the upper case.