




TiVo Series 2 TCD24008A Fan Replacement

This guide will show how to remove the fan.

Written By: Talha

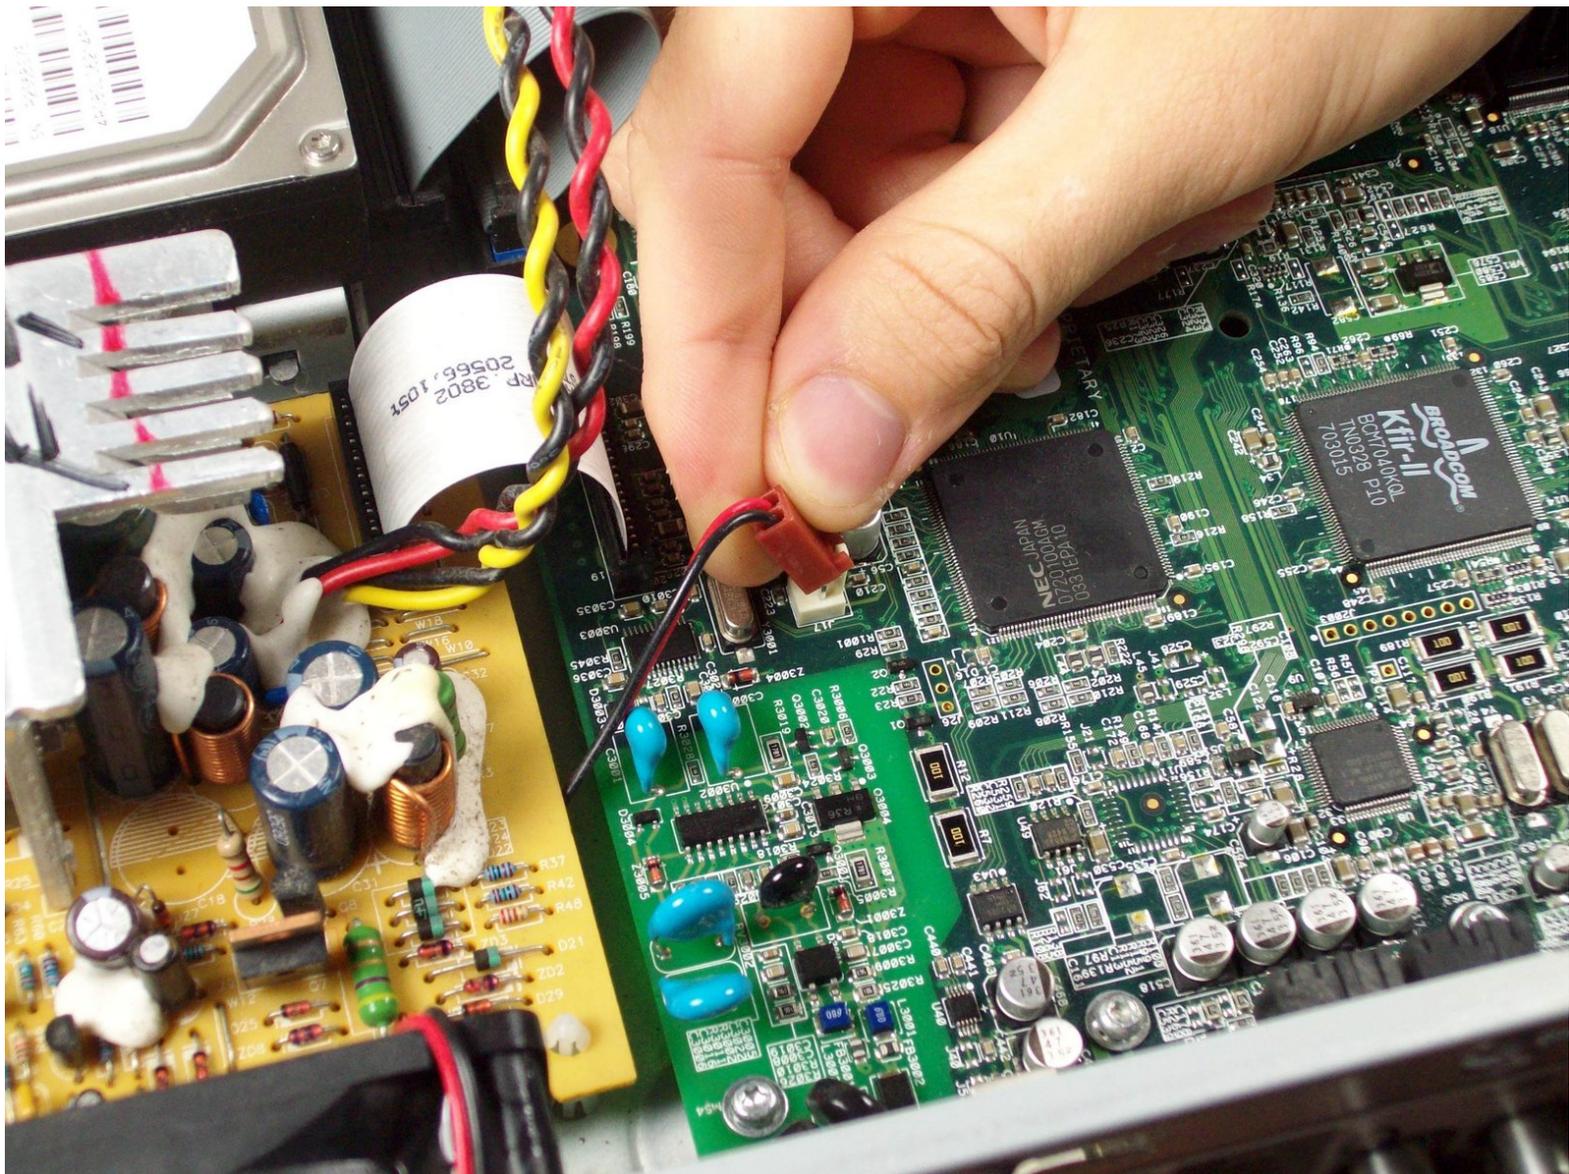

INTRODUCTION

This guide will show how to remove the fan.

TOOLS:

- [T9 Torx Screwdriver](#) (1)
-

Step 1 — Cover



- Unscrew the five 0.31 inch T-9 screws on the back cover.

Step 2




- Slide the cover towards the back until it is no longer under the front cover.

Step 3




- Lift the cover up and off the device.

Step 4 — Fan

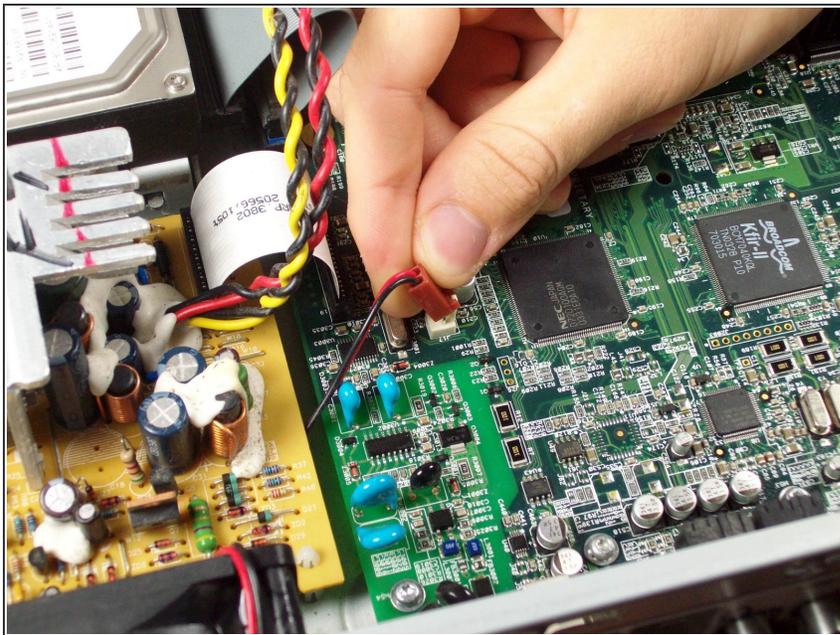

- Remove power cable to fan from motherboard.

Step 5

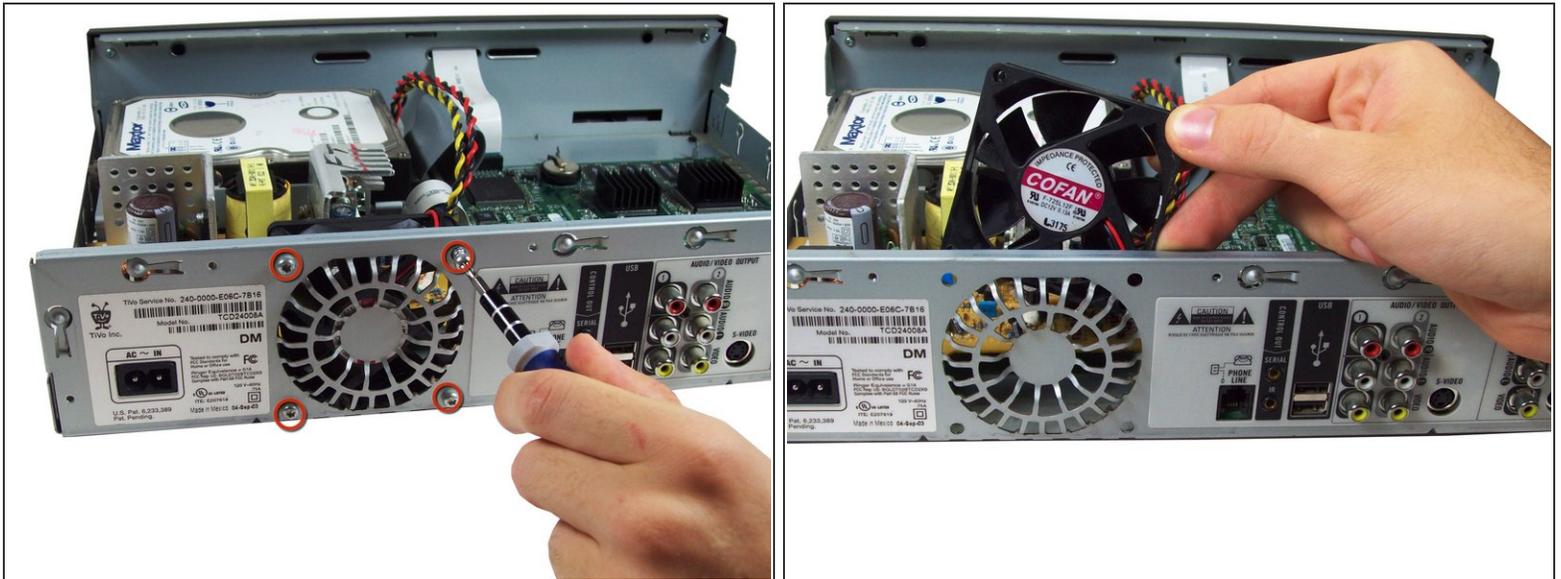

- Remove the four 0.31 inch T-9 screws and gently pull fan out.

To reassemble your device, follow these instructions in reverse order.