



Disassembling iPhone 4S Battery

Written By: Chandler Skinner



INTRODUCTION

This guide has been updated by iFixit staff! Read the new, official guide [here](#).



TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [iPhone 4S Replacement Battery](#) (1)

Step 1 — Disassembling iPhone 4S Battery




- Using a 5-point pentalobe screwdriver, unscrew the 2 pentalobe on the bottom of the phone near the dock connector.

Step 2





- Push the back glass towards the top of the phone.

Step 3

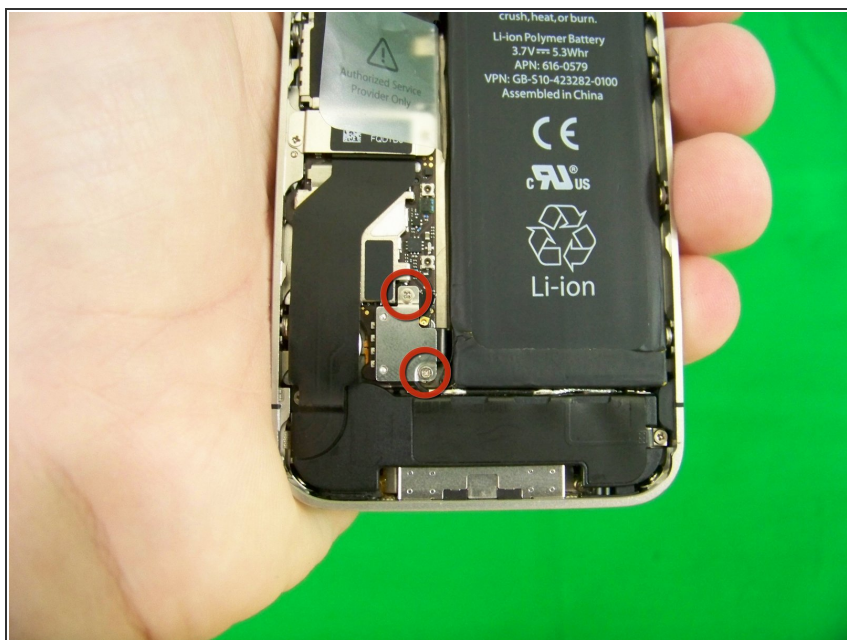

- Using a #000 Phillips screwdriver, unscrew the 2 very small Phillips screws.

Step 4

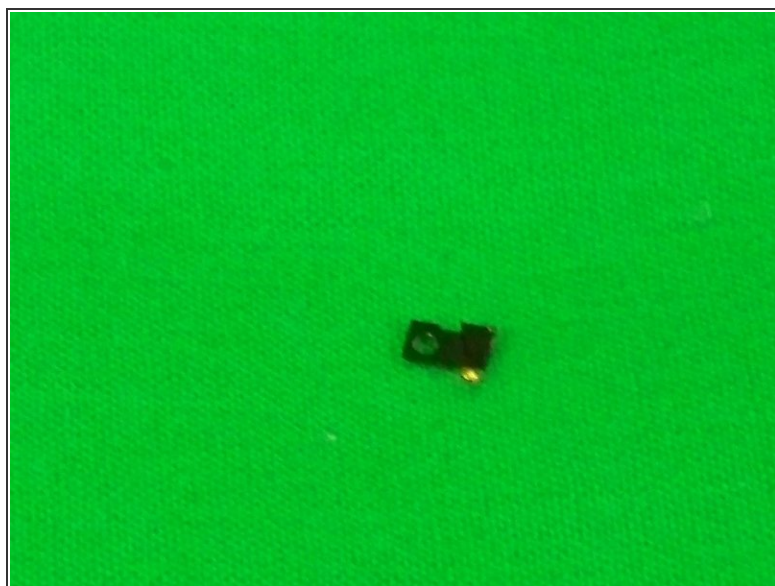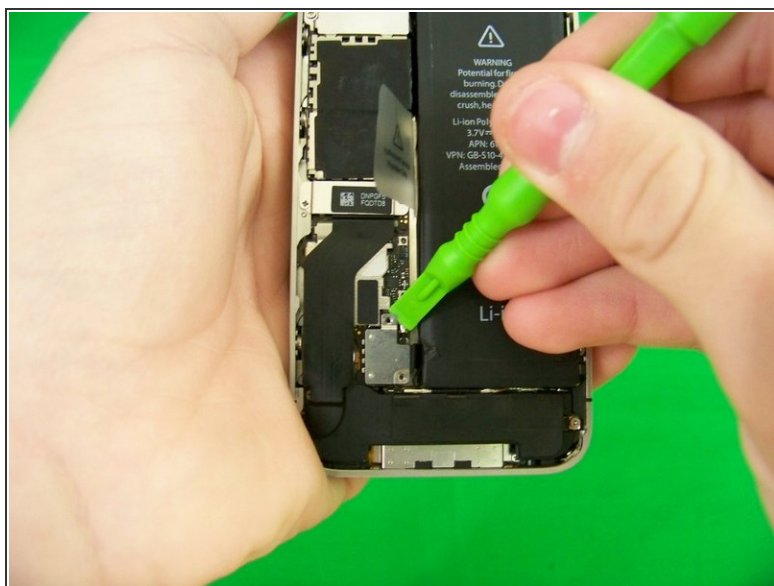

- Using a plastic opener tool, pry up the battery connector shield. Be careful not to lose the smaller antenna connector shield **under** the top connector shield.

- ☞ Using a plastic opener tool, pry up the battery connector.

Step 5



- Pull upwards on the plastic tab. If it's the first time, you may have to use the plastic pry tool on the outside (right) edge of the battery to loosen battery first.
- Then, out pops the battery.

To reassemble your device, follow these instructions in reverse order.