



# LG Voyager Keypad Replacement

How to replace an LG Voyager keypad.

Written By: Faizah Butt



## INTRODUCTION

If you are having issues texting or navigating with your keypad, it might be necessary to replace your old keypad with a new one.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)



### PARTS:

- [LG Voyager Keypad](#) (1)

## Step 1 — Keypad



- Power off your phone.
- Turn your phone so that the bottom is facing upwards.
- Remove all four screw covers and screws from the back of the phone with the Phillips #00 screwdriver.


## Step 2



- Gently pry open the back of the keyboard.



## Step 3

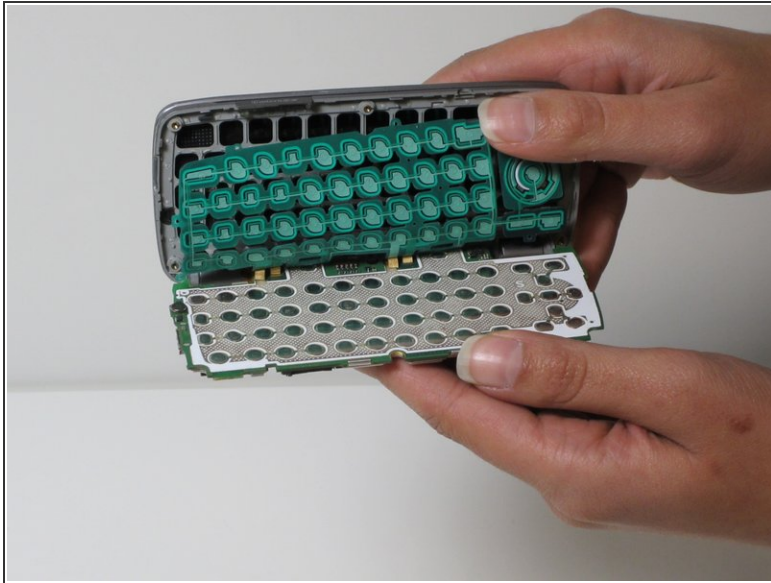

- Pull the rubber keyboard off carefully.
- ⚠ Be sure not to remove the silver button panel below the keyboard.

To reassemble your device, follow these instructions in reverse order.