



HP Pavilion ze4530US Keyboard Replacement

Replacing a faulty or unresponsive keyboard.

Written By: Sonny Sem



INTRODUCTION

Don't know how to remove your HP's keyboard? This guide shows you the steps to successfully remove your HP's keyboard to allow you to replace it.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Keyboard



- Unscrew all screws on the back of the laptop.
- ⓘ There should be a total of 22 screws.

Step 2




- Remove all the protective covers such as the RAM protective cover.
- Then remove the battery by pushing up on the battery release switch and pull the battery out.

Step 3



- Wedge open the top panel located above the keyboard.
- ⓘ This piece will not come off.
- 5 screws should be visible under the lifted panel. Unscrew all screws attaching the keyboard to the laptop.

Step 4

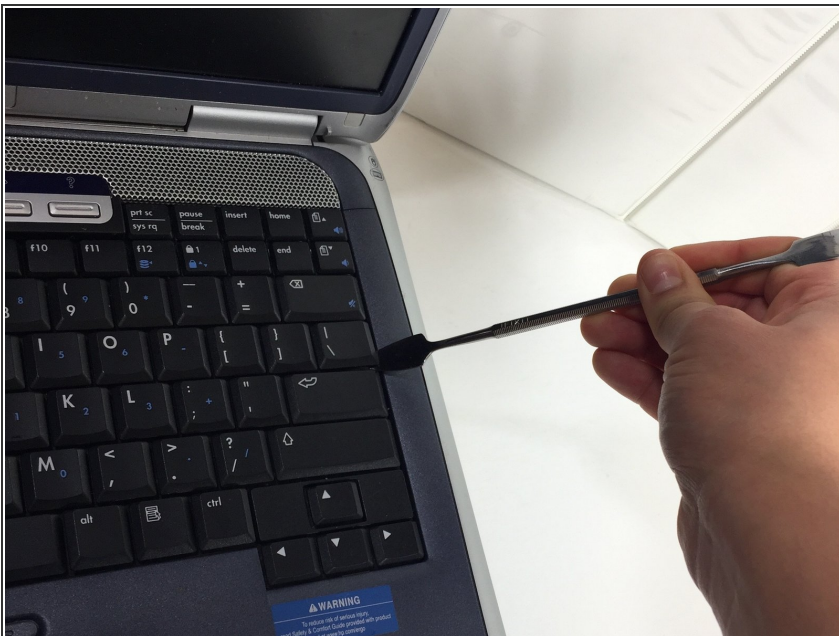

- Once all the screws are taken out of the top portion of the keyboard, wedge open the keyboard on all sides of the keyboard.

Step 5



- Lift the keyboard and unplug it out of the socket.

Step 6



- You have successfully removed the keyboard.

To reassemble your device, follow these instructions in reverse order.