



# DualShock 4 buttons Replacement

I will be taking apart the PS4 controller and I will take some of the buttons out and then I will put them back.

Written By: Michael



---

## INTRODUCTION

Outline what you are going to teach someone how to do.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — buttons




- This is how the controller looks like. You will first need to flip it over and unscrew the screws.

## Step 2




- Then you will get a plastic open tool to push against the lines to make the controller come apart.

### Step 3

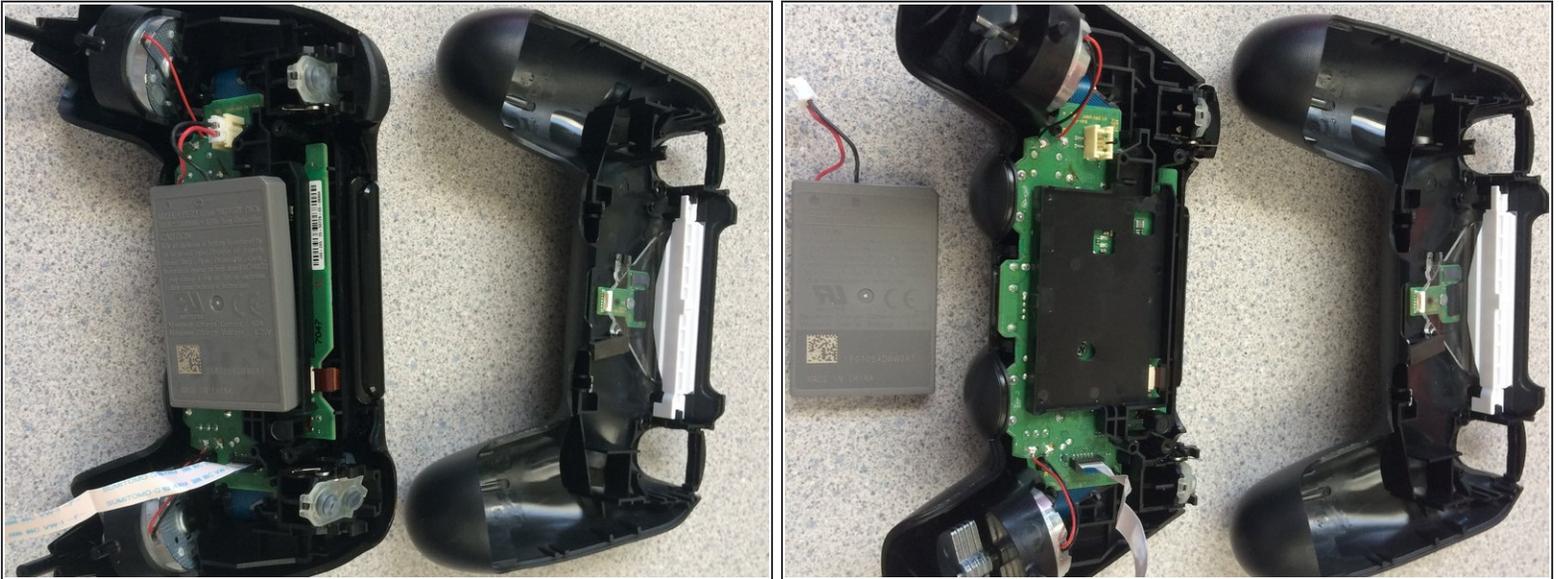


- Now with the tool you will make the controller come apart again by pushing against the buttons share and options.

### Step 4

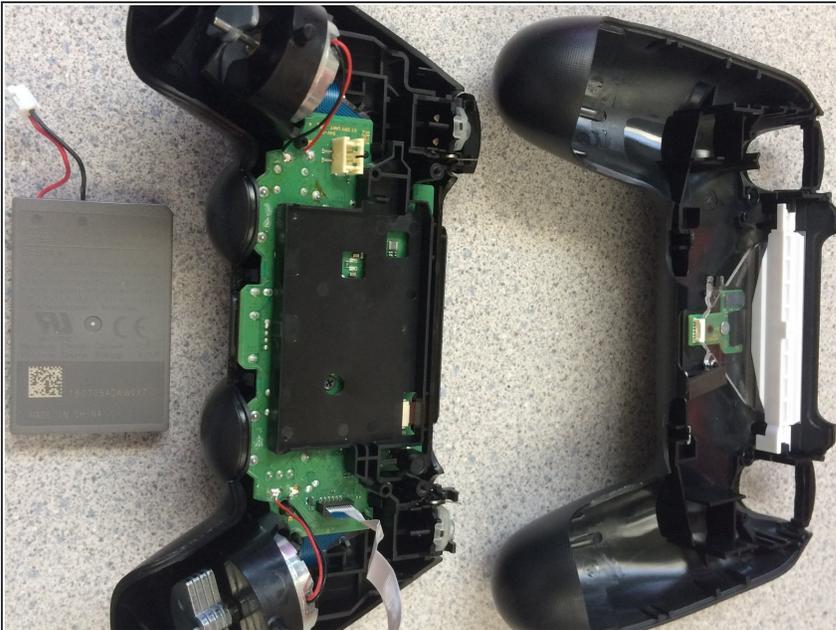

- Now you will be taking apart the battery from the controller with tweezers from the little white block.

## Step 5

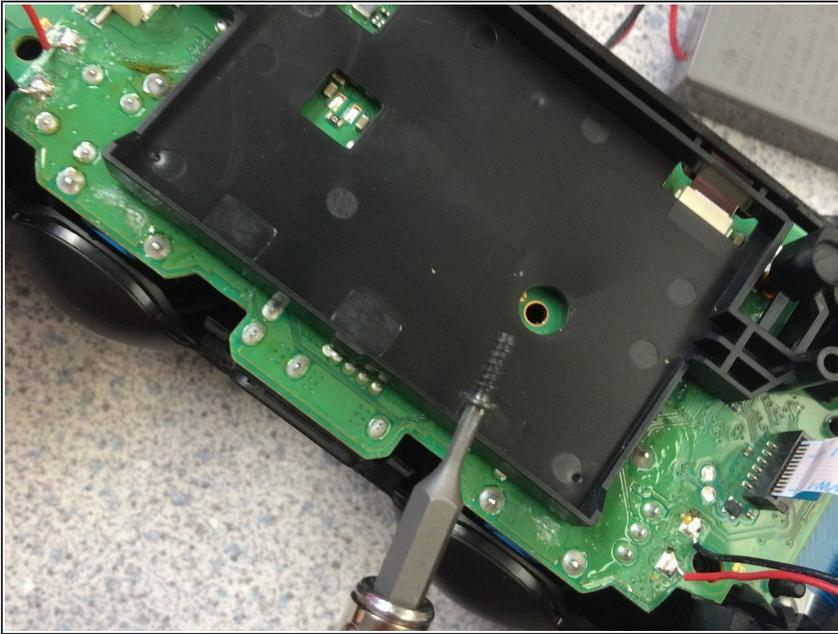

- Now that the battery is gone you will be able to see a little screw and you will need to take it apart.

To reassemble your device, follow these instructions in reverse order.