



Hitachi HB-B102 Automatic Home Bakery II Control Panel Replacement

This guide will demonstrate how to disconnect and replace the Hitachi HB-B102 main control panel.

Written By: Mike



This document was generated on 2020-11-28 05:38:27 AM (MST).

INTRODUCTION

This guide will demonstrate how to disconnect and replace the Hitachi HB-B102 main control panel. The control panel contains the motherboard and the plastic housing which surrounds the motherboard.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Control Panel




- Begin by using a # 2 Phillips head screwdriver to remove the two 1.3 cm screws that secure the control panel onto the main body.

Step 2



- Now gently pry on the top of the control panel with a metal spudger, it should then pop up.
- ⚠ Be careful when it is being removed that you do not damage the tabs that hold the bottom of the panel in place.

Step 3

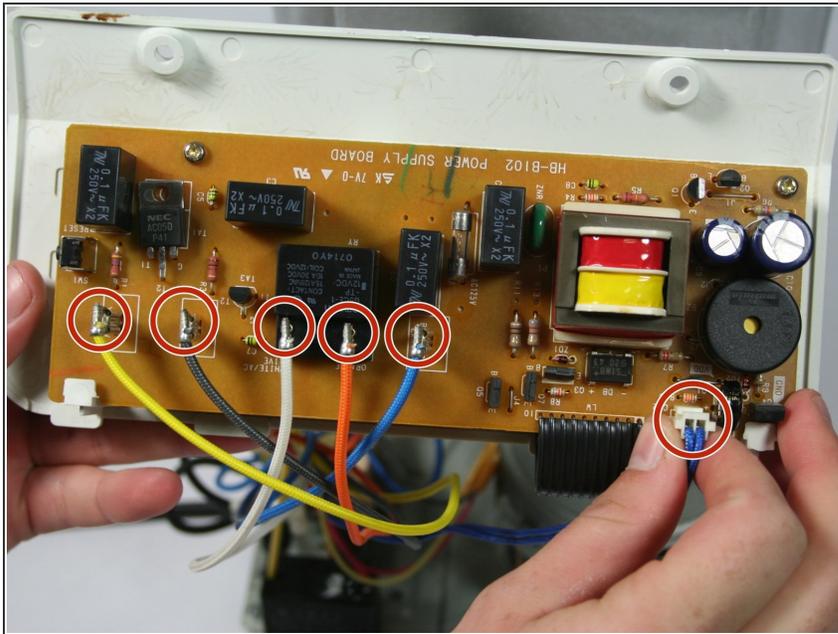

- Now flip the control panel over so that the wire connections are visible.
- All of the wires are easily removed by grabbing the metal connector and pulling straight out from the panel.

To reassemble your device, follow these instructions in reverse order.