



Dell Inspiron 3542 RAM Replacement

Users will be able to replace the RAM on the Dell Inspiron 3542 laptop.

Written By: Rachel lindsey



INTRODUCTION


Users will be able to replace the RAM on their Dell Inspiron 3542 laptop.



TOOLS:



- [Small Phillips Head Screwdriver](#) (1)
-

Step 1 — RAM

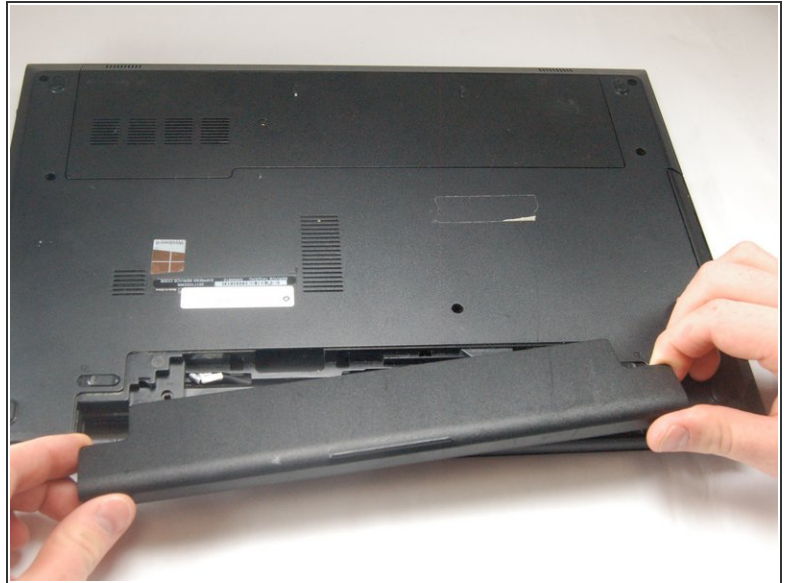

- Slide the latches on both sides of the computer outward to unlock the battery.
- Remove the battery from the computer.

Step 2

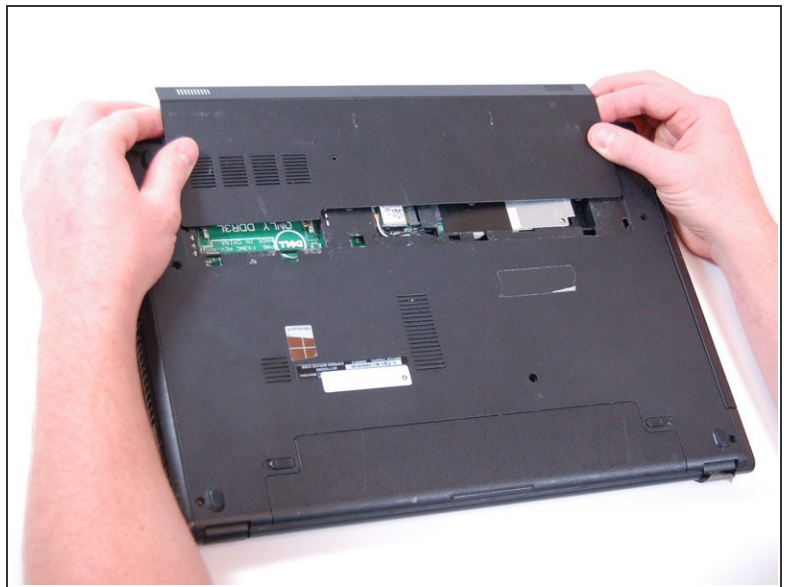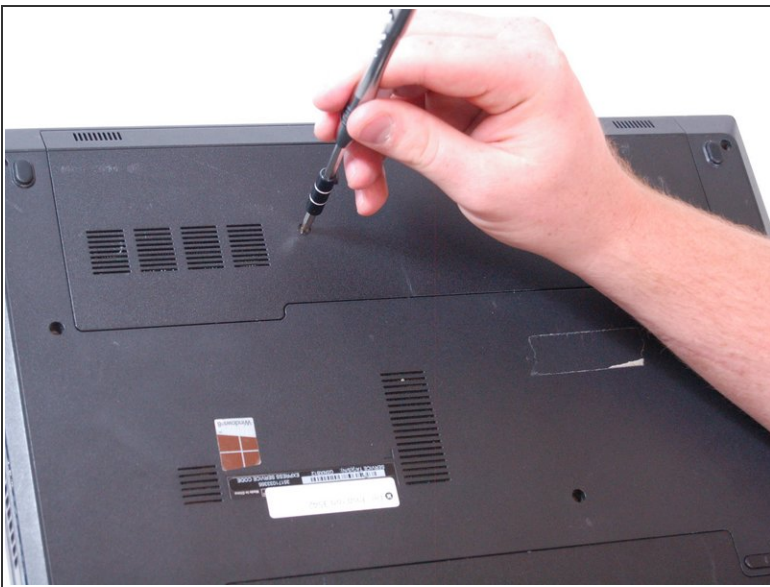

- Remove the screw. (1 x M2 x 3mm)
- Slide the access door upward and remove it

Step 3



- Gently pull out RAM card from the laptop.

To reassemble your device, follow these instructions in reverse order.