



# CD/DVD Drive Replacement

Replacement guide for the CD/DVD/Blu Ray Drive of the HP dv7-4065x laptop. Part of the pavilion series.

Written By: Shahzeb



---

## INTRODUCTION

Use the guide to help you replace the CD/DVD/Blu Ray Drive of the HP Pavilion dv7-4065 laptop.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — CD/DVD Drive




- Remove the battery from the laptop.

## Step 2



- Remove the five Philips #1 screws on the panel located underneath the laptop battery.
- Remove the panel.

## Step 3

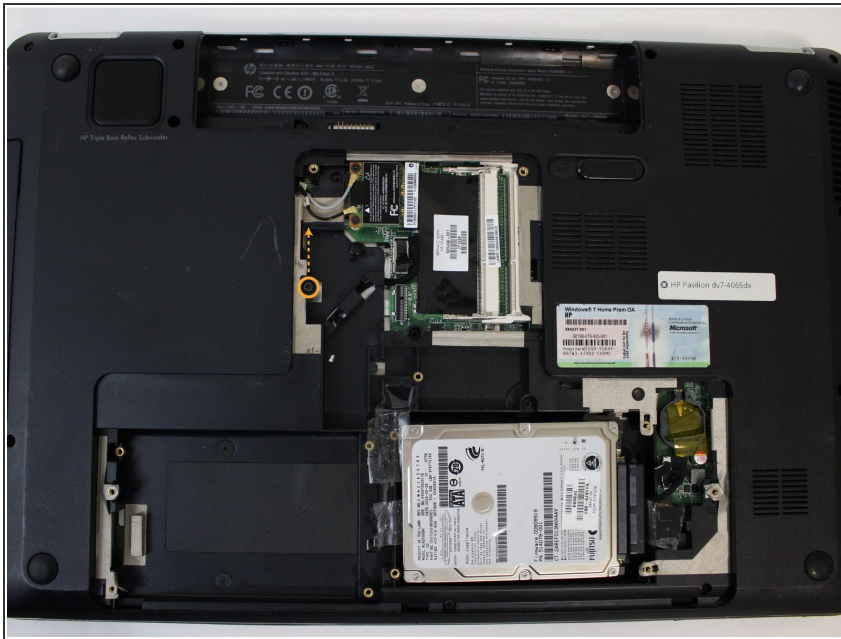

- Remove the single screw underneath the black cable.

## Step 4



- Gently slide the drive out of the laptop.



## Step 5



- Remove the drive from laptop.

To reassemble your device, follow these instructions in reverse order.