



MacBook Pro 17" Unibody Clutch Cover Replacement

Removing the Clutch Cover with the Front Glass removed

Written By: Brett Hartt




Step 1 — Clutch Cover



- Holding the clutch cover firmly, slide it towards the right display hinge.
- ⓘ The clutch cover will move approximately 1 cm to the right. Do not force it pass this point.

Step 2

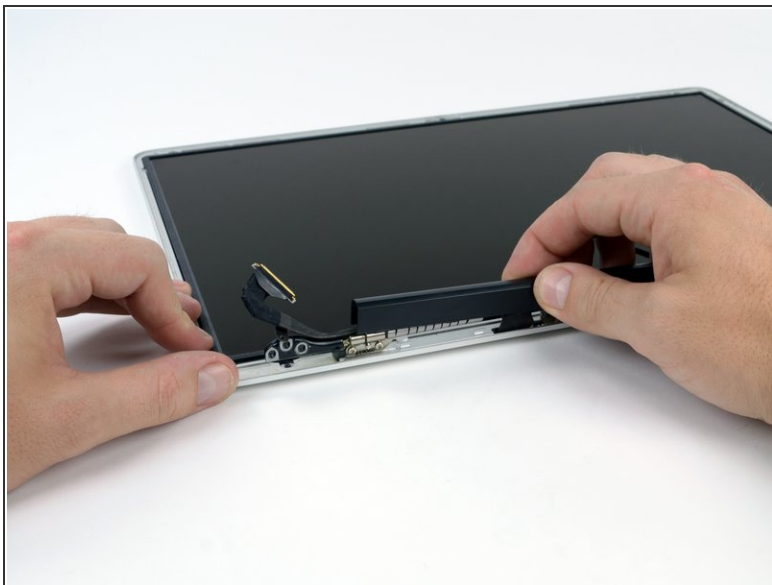

- Lifting the left edge of the clutch cover, gently rock it back and forth on its long axis while pulling it away from the display.
- Remove the clutch cover from the display, minding any cables that may get caught.

To reassemble your device, follow these instructions in reverse order.