




P775DM3 RAM Replacement

Written By: Felice Suglia

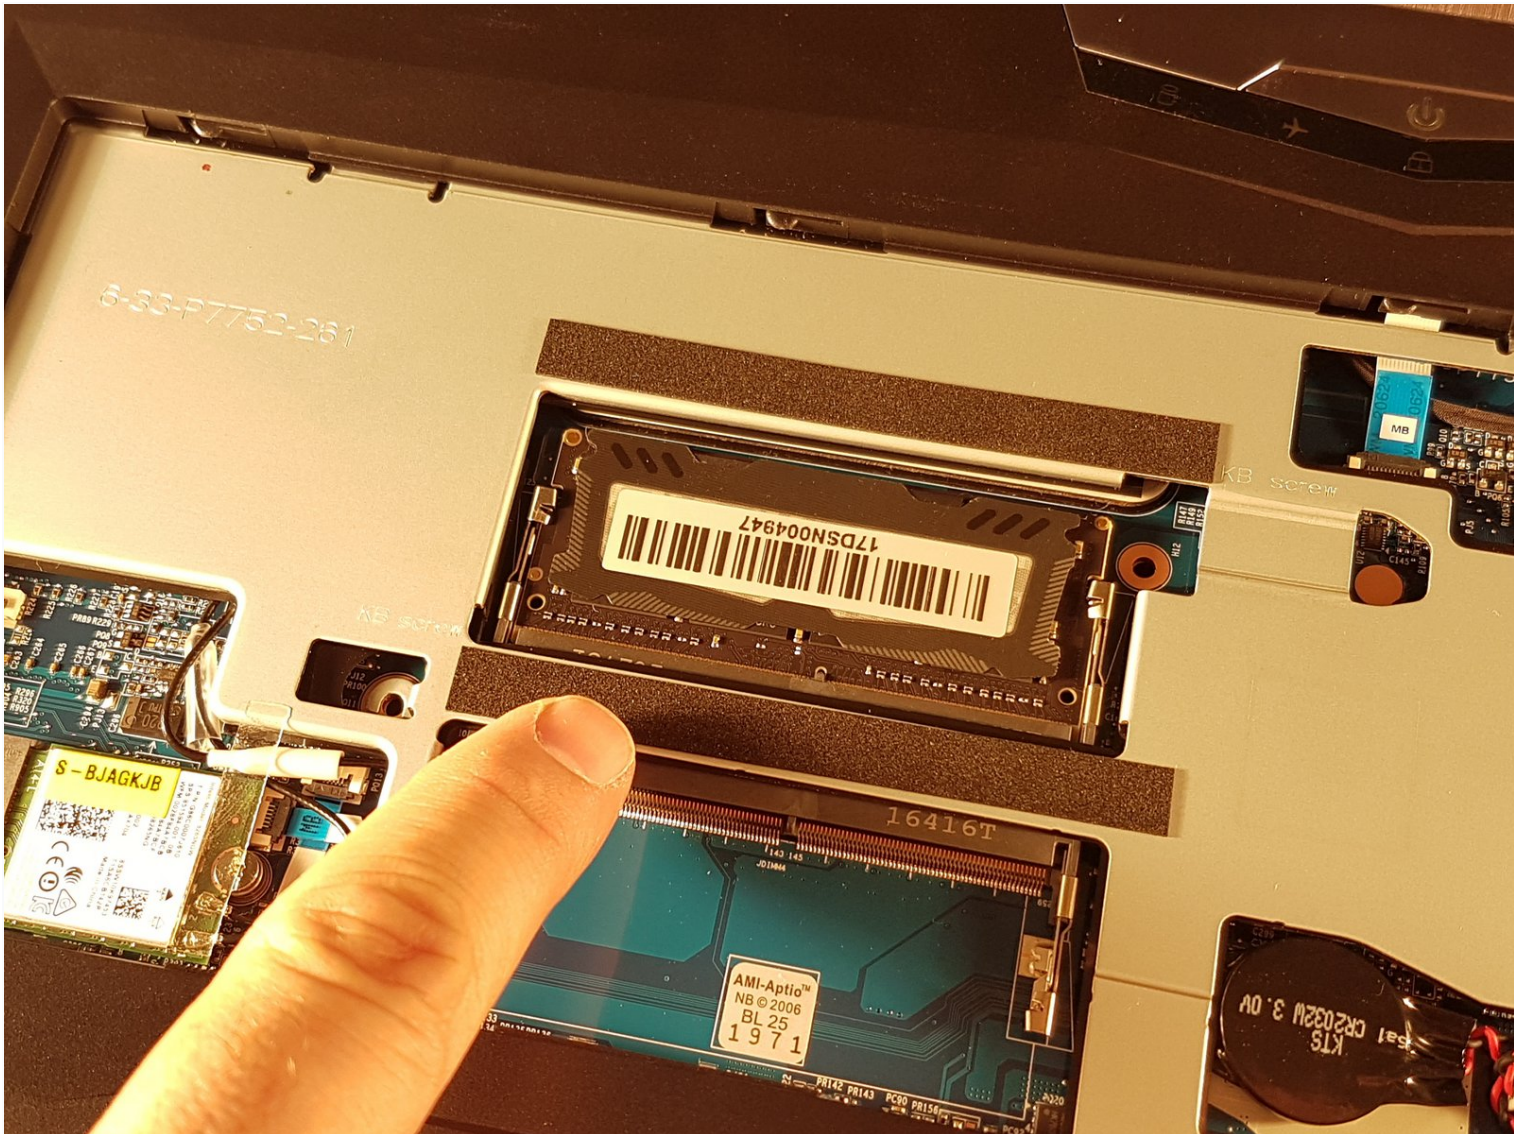



TOOLS:

Tournevis cruciforme #0 (1)

Pincettes de précision (1)





PARTS:

Pièces pour why! P775DM3 CH (1)


Pièces pour why! P775DM3 EU (1)

Step 1 — Battery

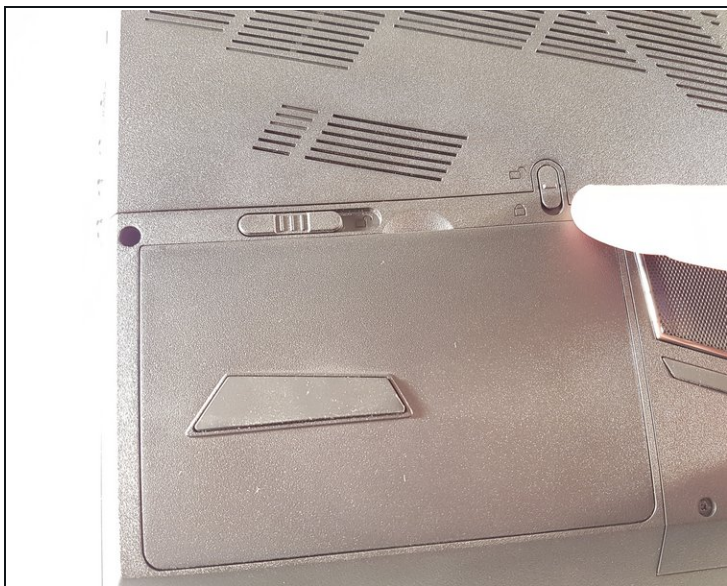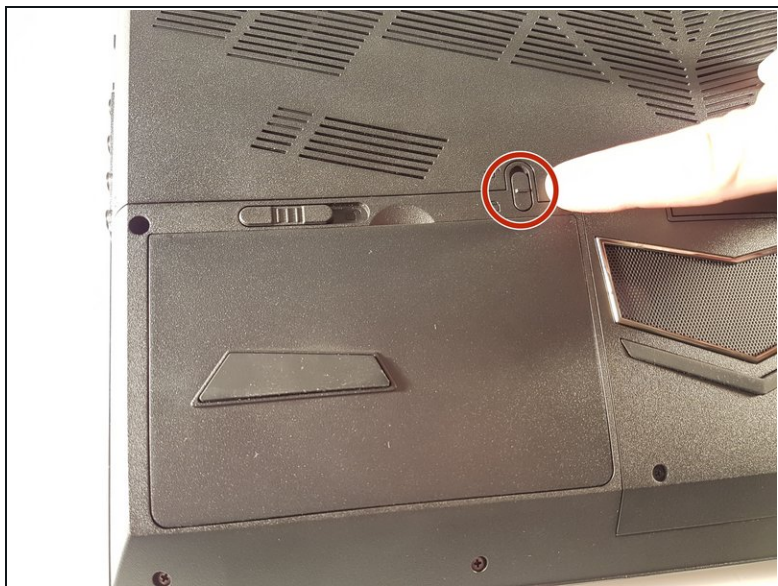

- Unlock the lock circled in red.

Step 2

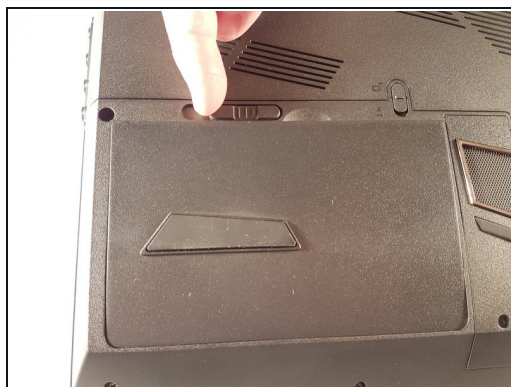


- Lift the battery while unlocking the lock circled in red.

Step 3 — Access to major components





- Unscrew the five screws circled in red.

Step 4

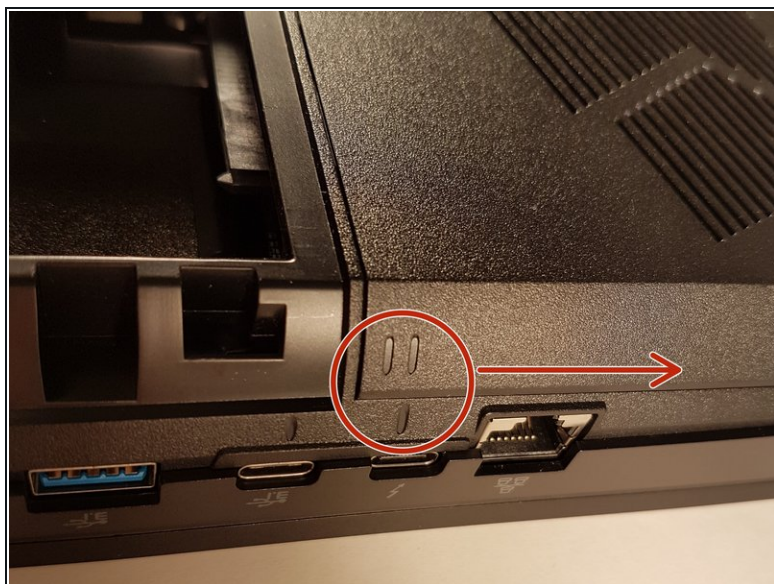



- Slide the plate in the direction of the red arrow.

Step 5

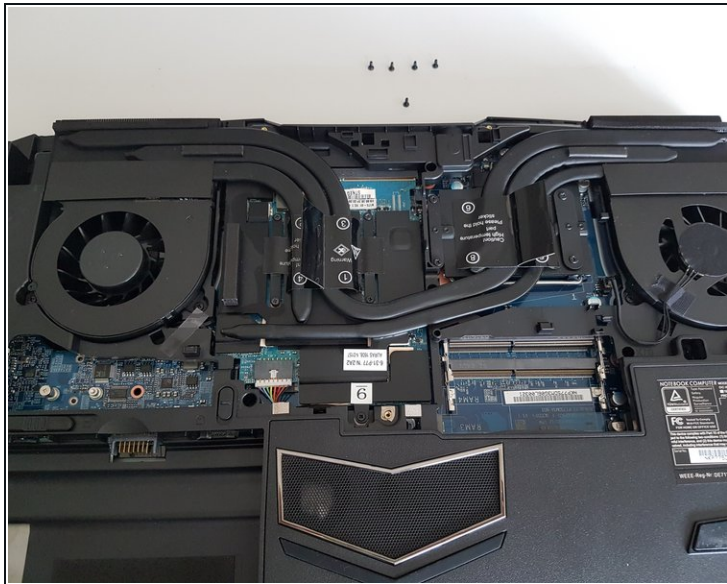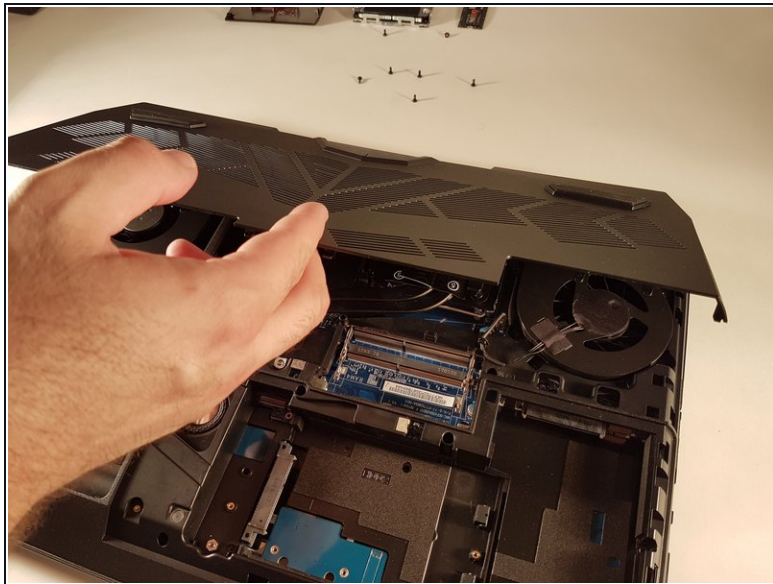




- Lift the plate.

Step 6 — Keyboard

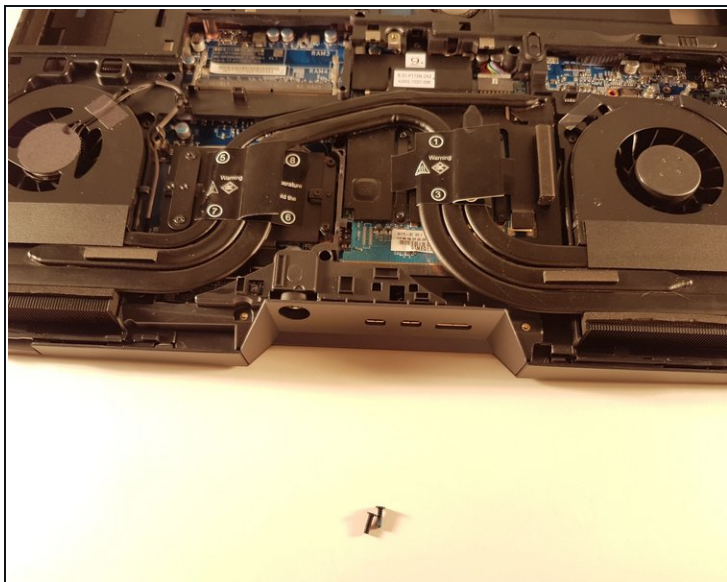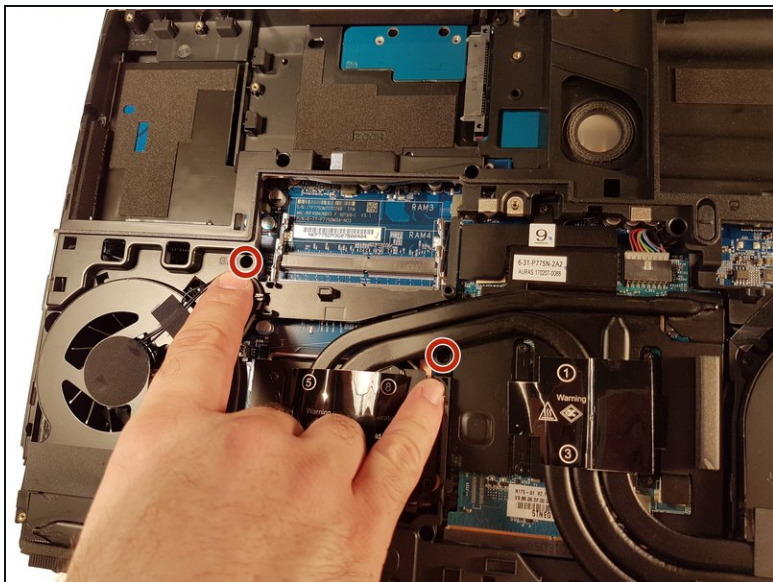



- Unscrew the two screws circled in red

Step 7

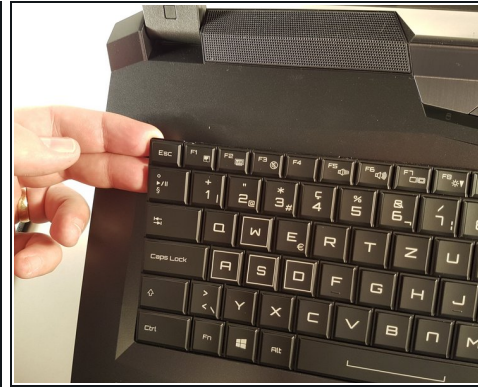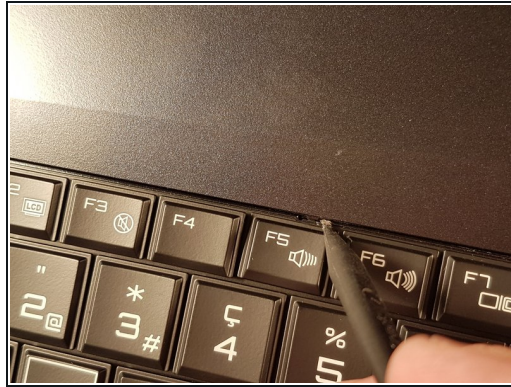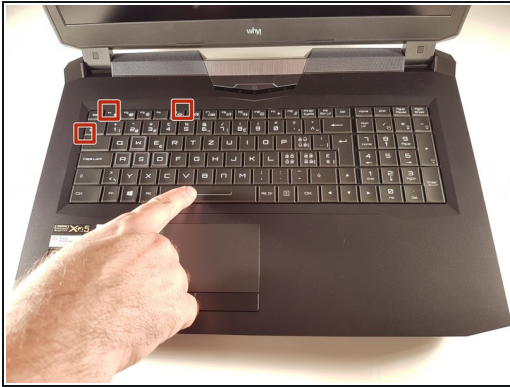



- Press a paper clip in the three places marked in red
- Lift the keyboard and feel free to put some strength

Step 8

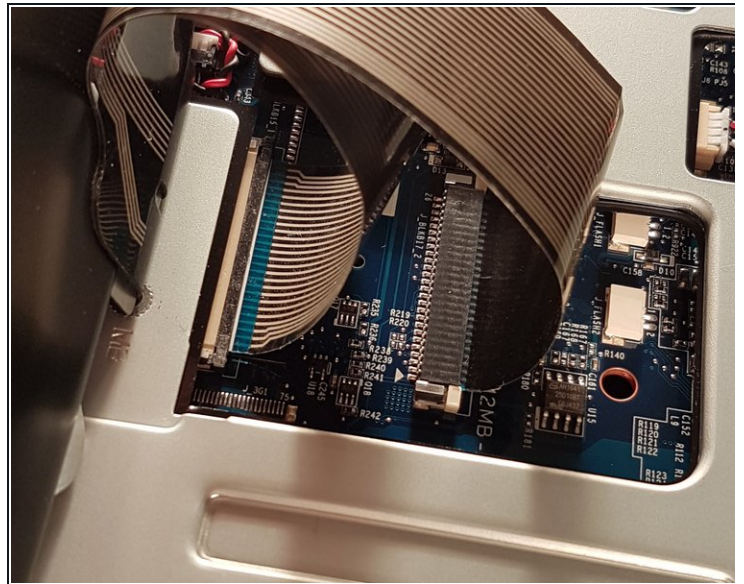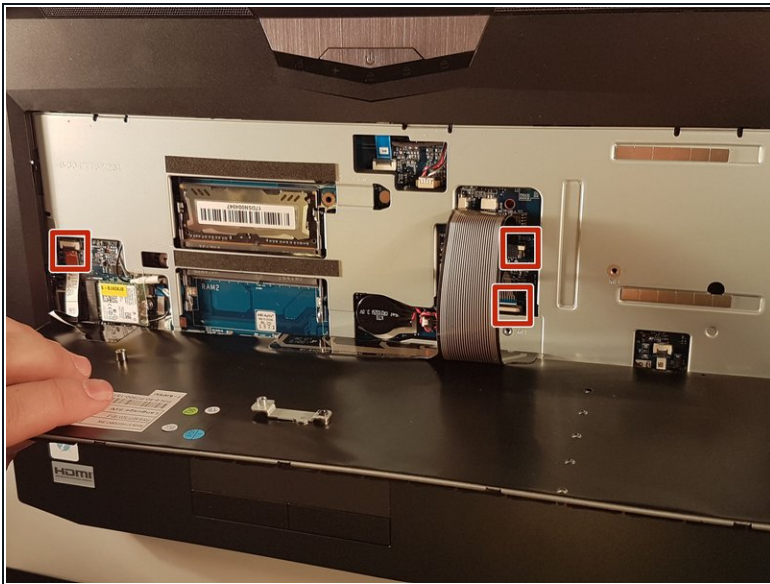



- Disconnect the three framed connectors in red

Step 9

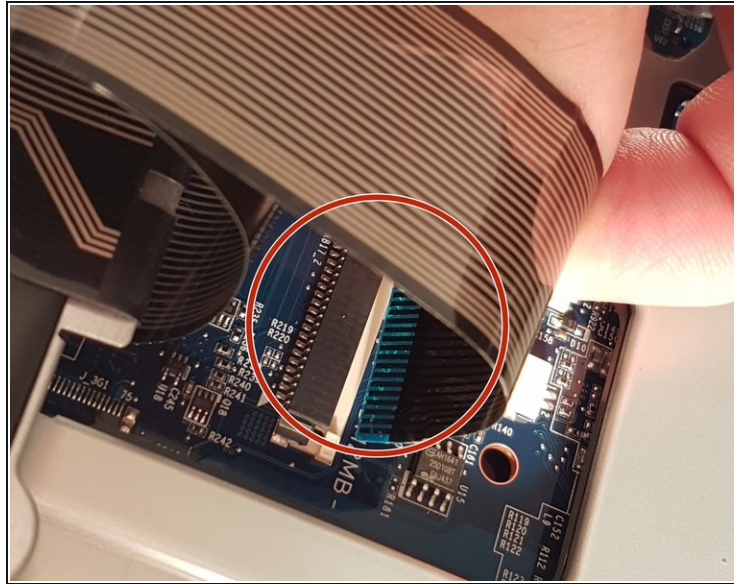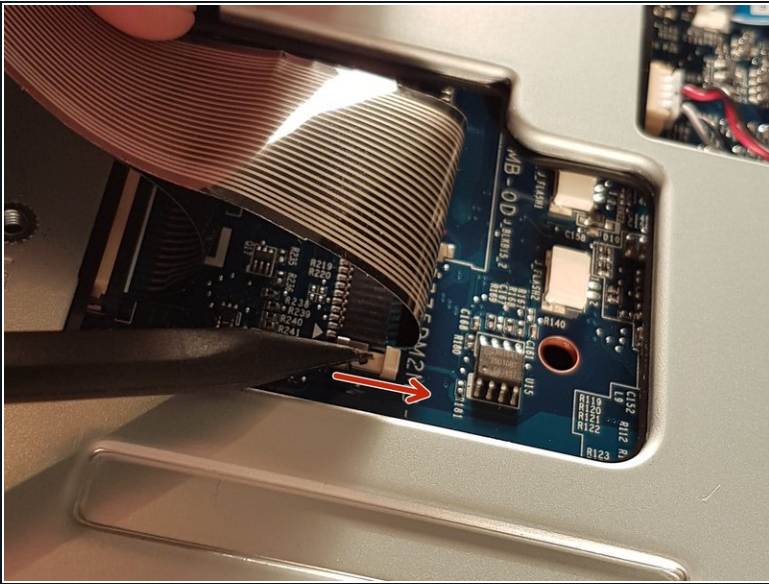



- Pull the white drawer in the direction of the arrow to unlock the connector
- Disconnect the red circled connector

Step 10

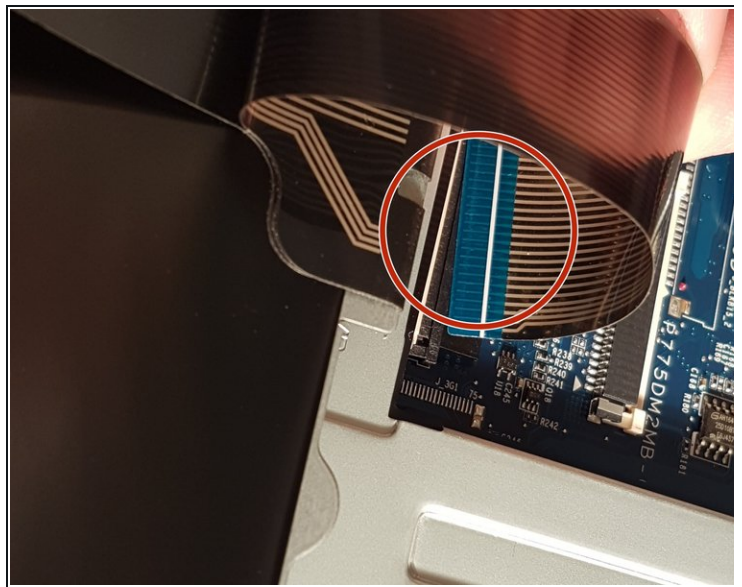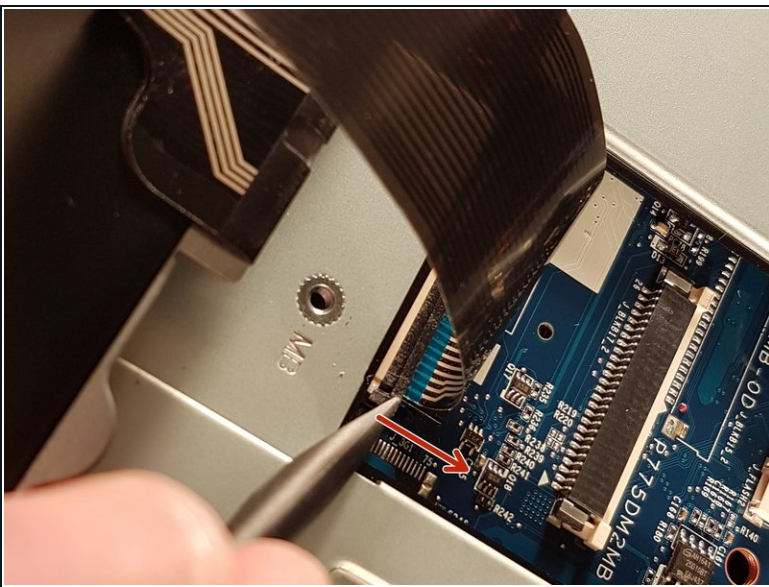




- Pull the black drawer in the direction of the arrow to unlock the connector
- Disconnect the red circled connector

Step 11

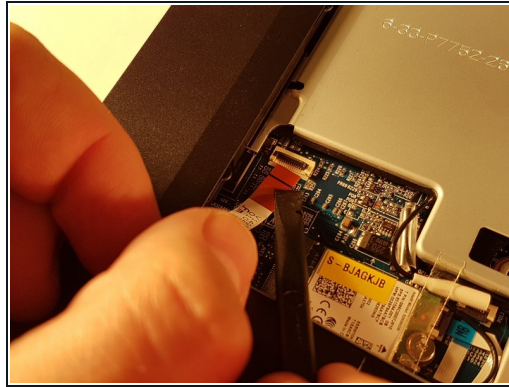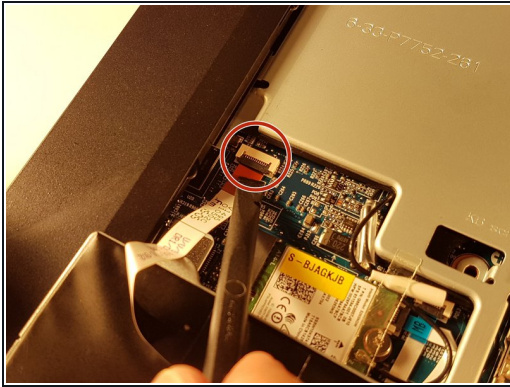

- Lift the flap that holds the connector circled in red
- Disconnect the red circled connector
- Remove the keyboard

Step 12 — RAM

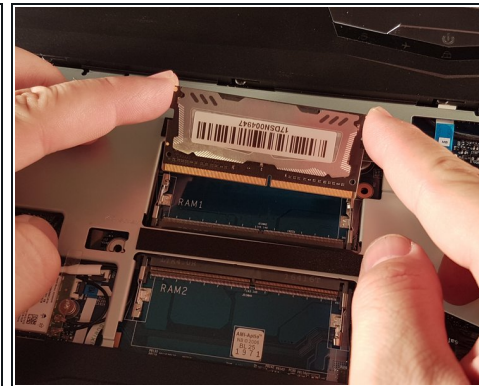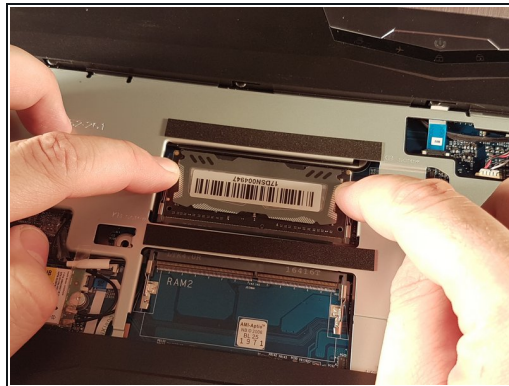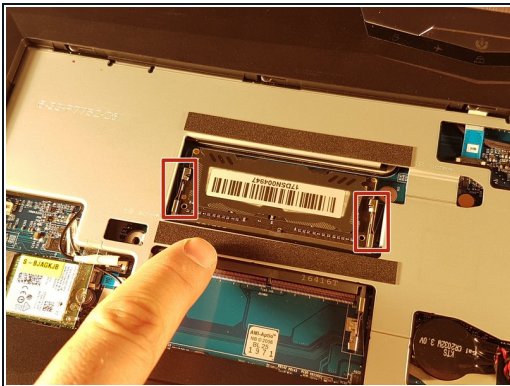

- Spread the two clips in red.
- Remove the RAM card.

To reassemble your device, follow these instructions in reverse order.