



Bissell SmartClean 1605 Roller Brush Replacement

Step by step instructions on removing the roller brush component.

Written By: Austin Maranville



INTRODUCTION

If your device has stopped vacuuming or has weak suction, the roller brush might need to be cleaned or replaced. This replacement guide will outline the necessary steps to remove the roller brush component so it can be cleaned.



PARTS:

- [Roller Brush](#) (1)
-

Step 1 — Roller Brush



- Make sure your device is powered off.

Step 2




- Gently flip device over.

Step 3



- Remove plastic plate cover to reveal brush roller.

Step 4

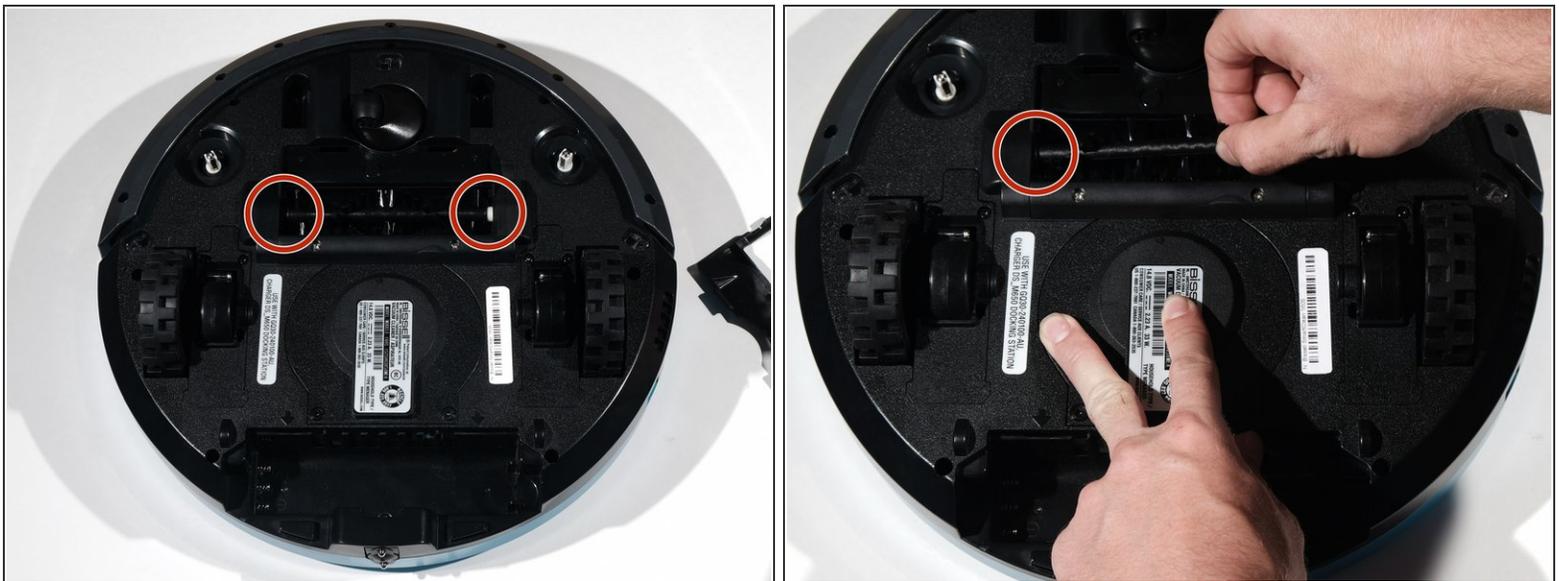

- Remove brush roller from its slots on either side.
- Apply pressure to one side and pull the roller out of its opposite slot.
- ⓘ It's like taking out a spring loaded toilet paper holder.

To reassemble your device, follow these instructions in reverse order.