



Asus MeMO Pad 7 ME176C Speaker Replacement

Learn how to disassemble your malfunctioning speakers on the ASUS MeMo Pad and replace them

Written By: Maxime




INTRODUCTION

This guide will take you through the necessary steps to replace the speakers in your Asus MeMO Pad 7 ME176C.

TOOLS:

- [iFixit Opening Tool](#) (1)
 - [Metal Spudger](#) (1)
 - [Phillips PH000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Speakers

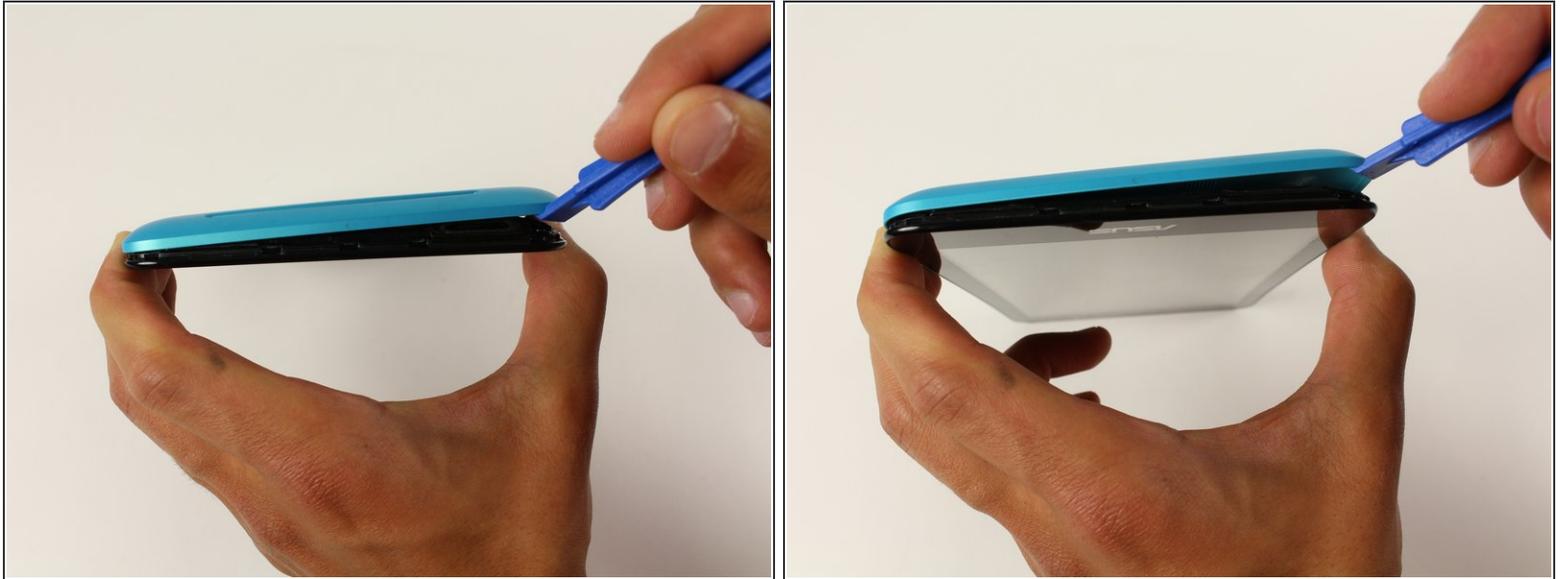

- Make sure the device is turned off.
- Carefully insert the [opening tool](#) on the edge of the phone.
- Slowly lift up the panel from the device and repeat the process on the other side.

Step 2



- To disconnect the ZIF connectors. Place the [metal spudger](#) underneath the ZIF cable and gently pull it outward.


⚠ ZIF connectors are fragile, so work with caution.

Step 3




- i The battery connector is located on the right-hand side of the device
 - To disconnect the battery connector. Use [tweezers](#), and carefully lift up the wire.
 - Remove the battery.

Step 4

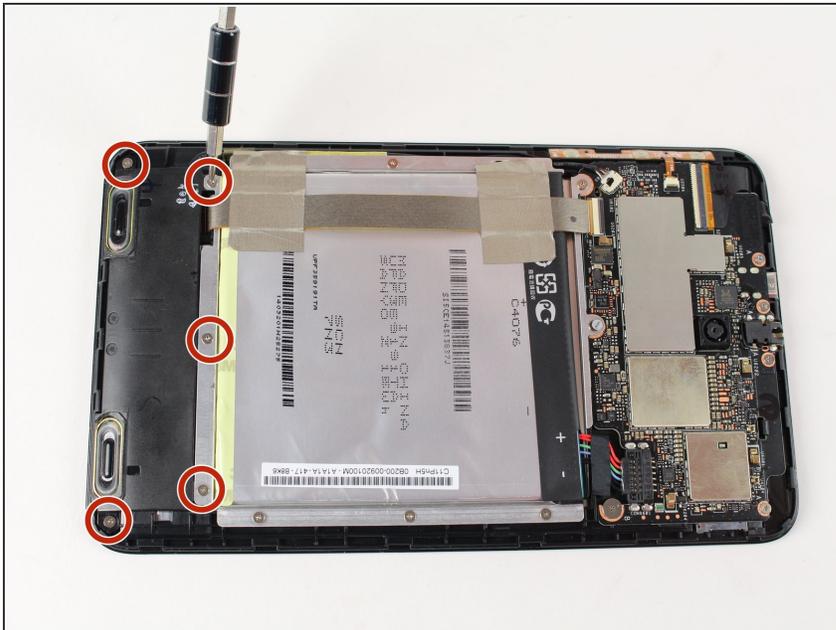

- Using a [Philips Head Screwdriver PH000](#), locate the 2.6mm screws and gently unscrew them .
- i Place these screws somewhere you will remember.
- ⚠ Applying too much pressure onto the screen may cause it to break.

Step 5

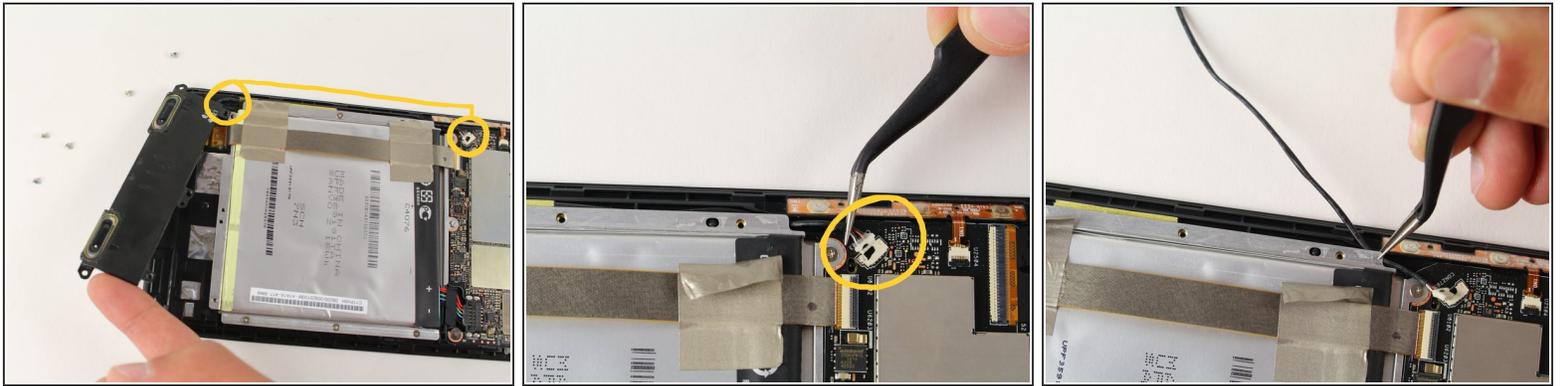

- Using [tweezers](#), disconnect the speaker cable connected to the motherboard.

⚠ Be sure not to damage other components on the motherboard.

- After that remove the speaker system completely.

Step 6



- Now you can attach a new speaker!

To reassemble your device, follow these instructions in reverse order.