




Acer Aspire One Cloudbook AO1-132-C3T3

USB Port Replacement

This guide will help you remove and replace the USB Port on your device.

Written By: Brian Villa

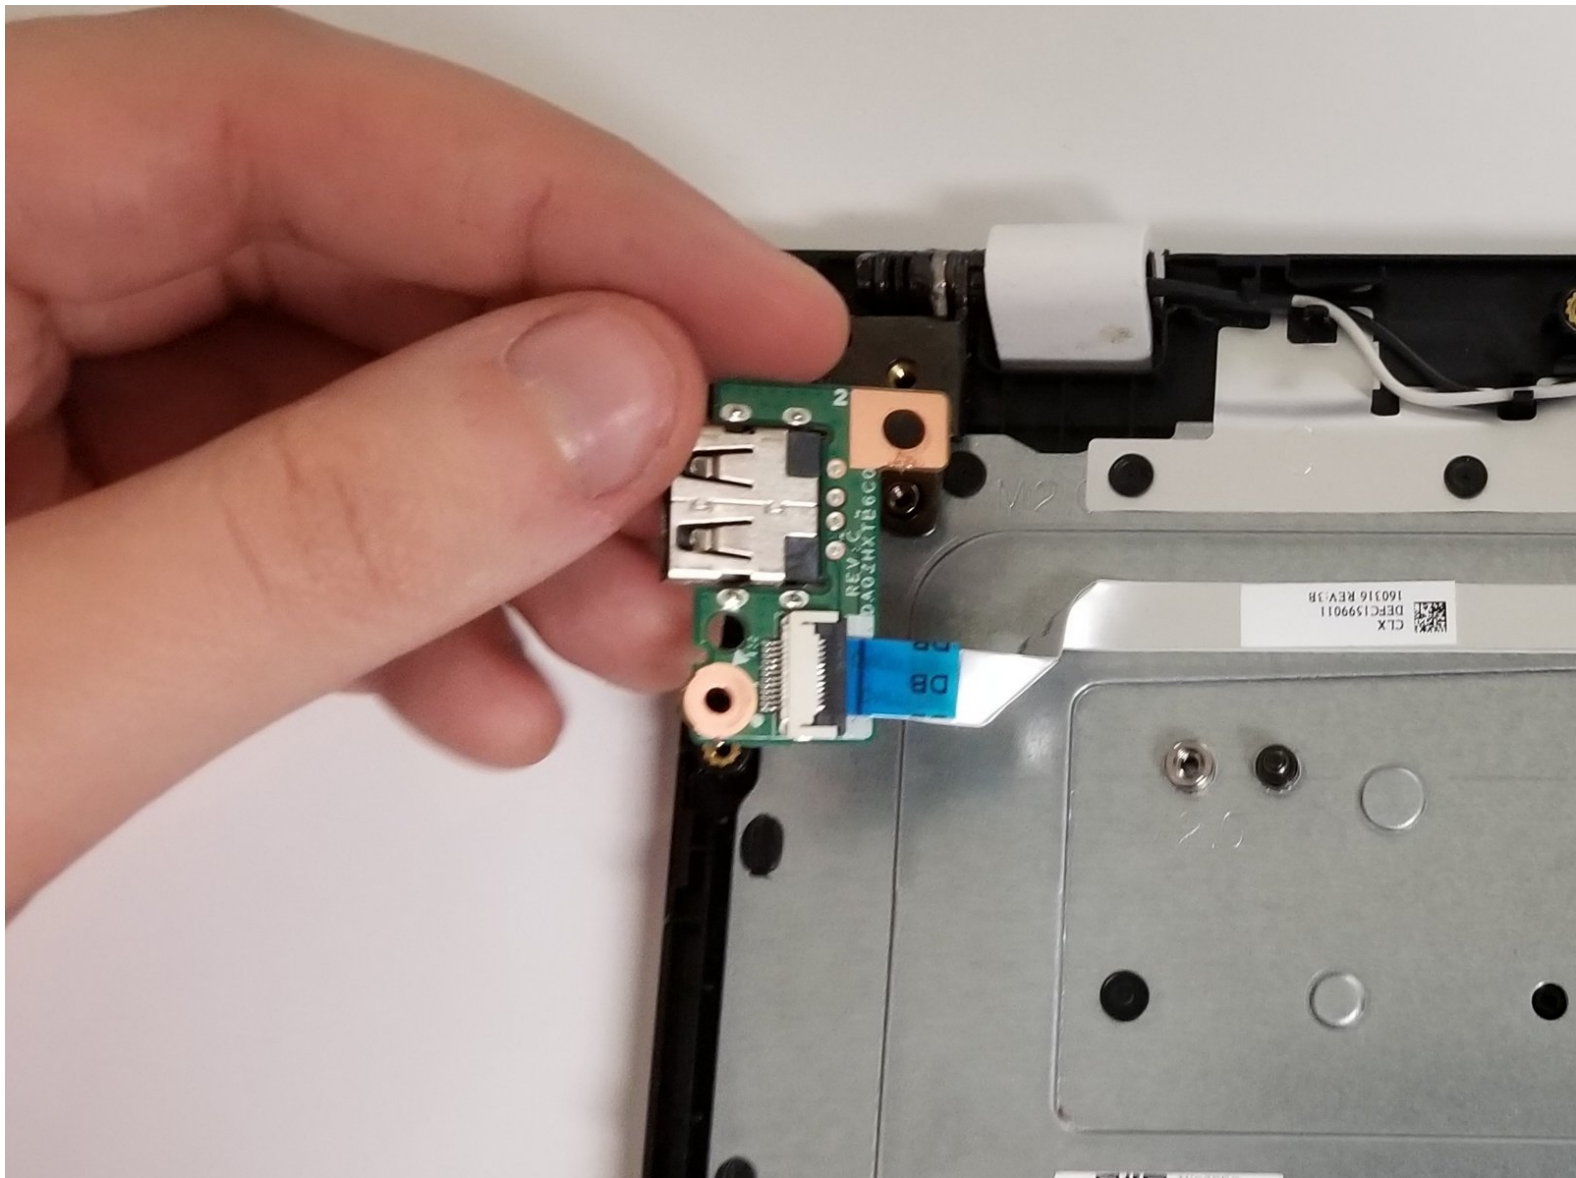

INTRODUCTION


In this guide, you will remove the USB Port from the device by removing two screws and disconnecting the ribbon cable connecting it to the motherboard.



TOOLS:



- [Phillips Head Screwdriver: Size PH1](#) (1)
-

Step 1 — USB Port

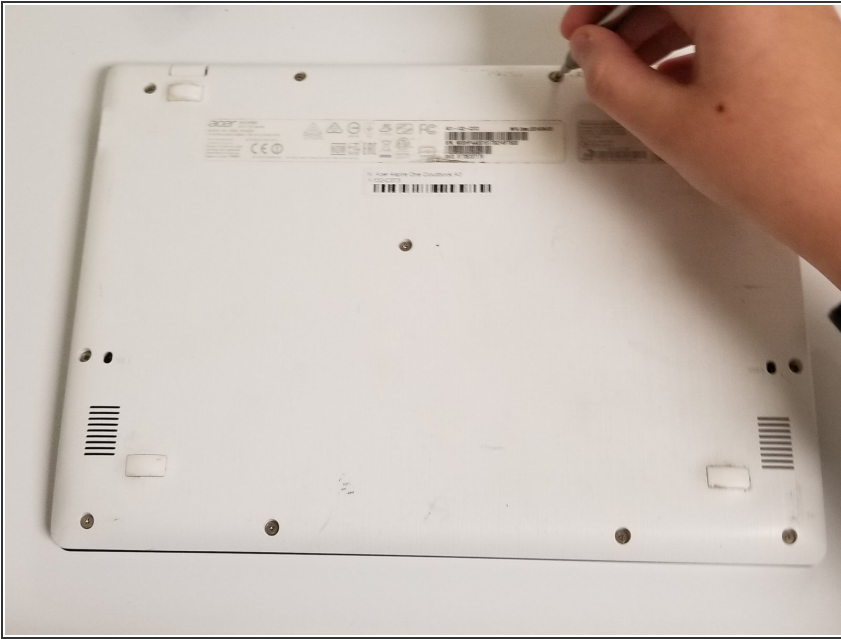



- Remove eleven 4 mm Phillips #1 screws
- Pull the backplate off using your fingers.

Step 2

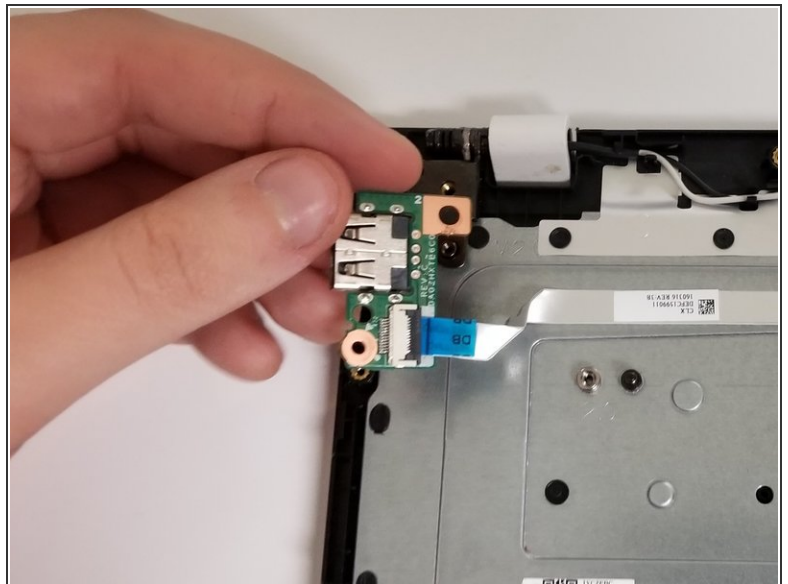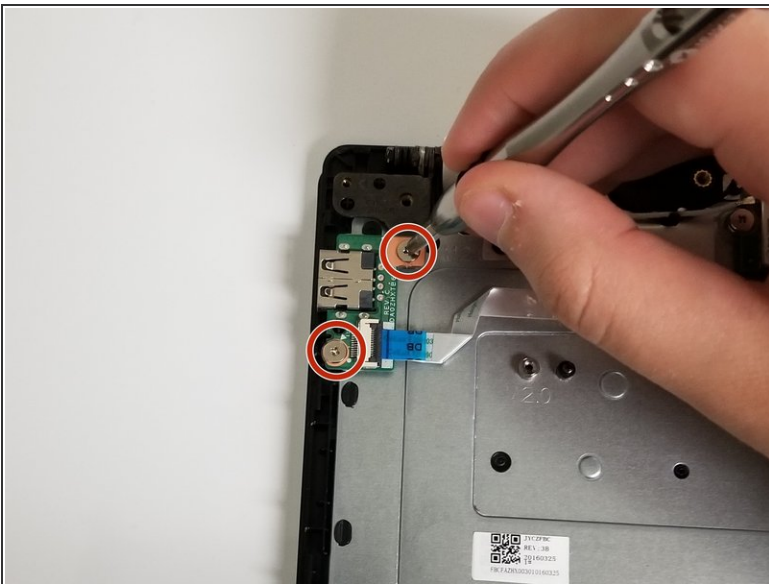

- Remove the two screws holding down the USB Port.

Step 3

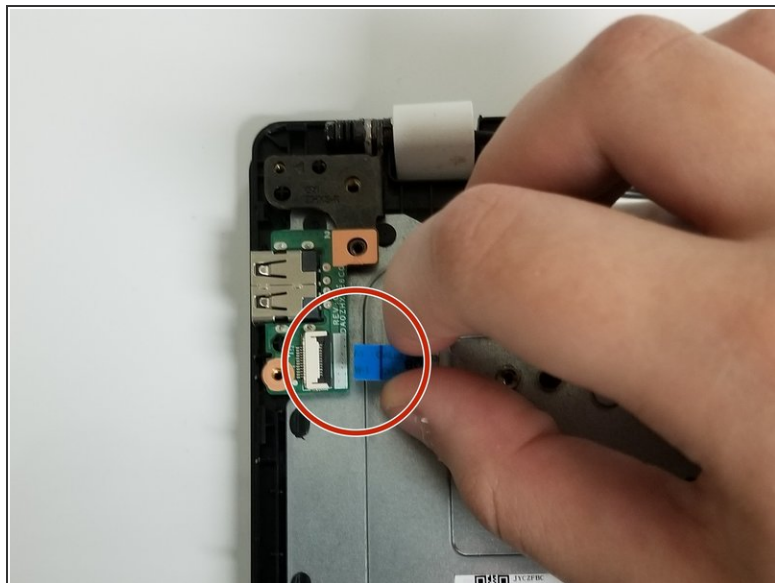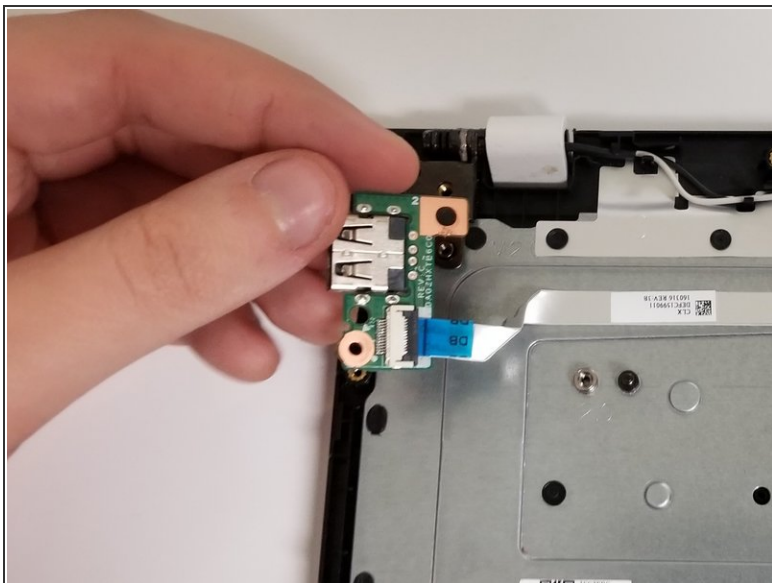

- Now that the port can be lifted up, remove the ribbon cable by using the sticker attached to it.

To reassemble your device, follow these instructions in reverse order.