



Acer Chromebook CB5-312T-K 8Z9 Battery Replacement

This guide will show how to remove and replace the battery.


Written By: Alonso



 **TOOLS:**

- [iFixit Opening Tool](#) (1)
 - [Philips Head Screwdriver: Size J1](#) (1)
-

Step 1 — Acer Chromebook CB5-312T-K 8Z9 Back Cover

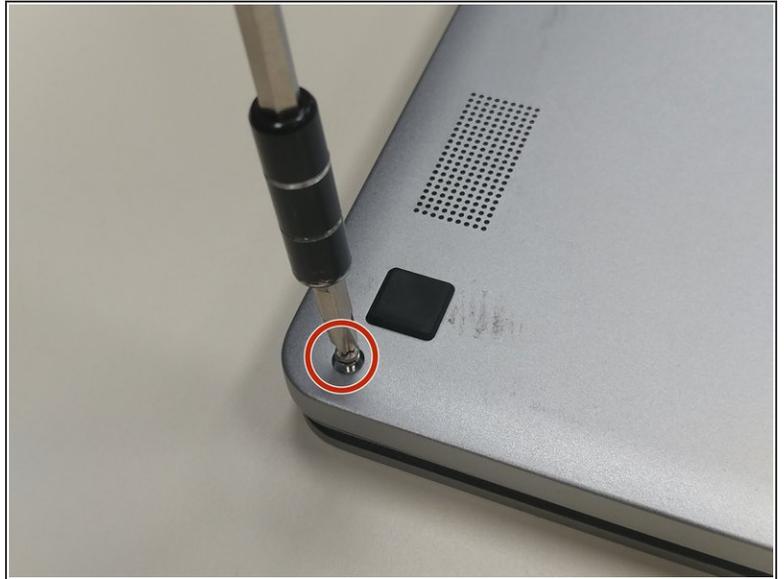

- First begin by flipping the laptop on its back and having the back cover face you directly.
- Then unscrew the ten Phillips head screws that hold down the back cover using a Phillips #0 Screw Driver.

Step 2




- Using a plastic spudger, open the back cover and remove it from the laptop.

Step 3 — Battery



- look for the battery in the bottom half of the computer
- Once you have found the battery, look for the screws that secure the battery, in the upper left and right corners.

Step 4

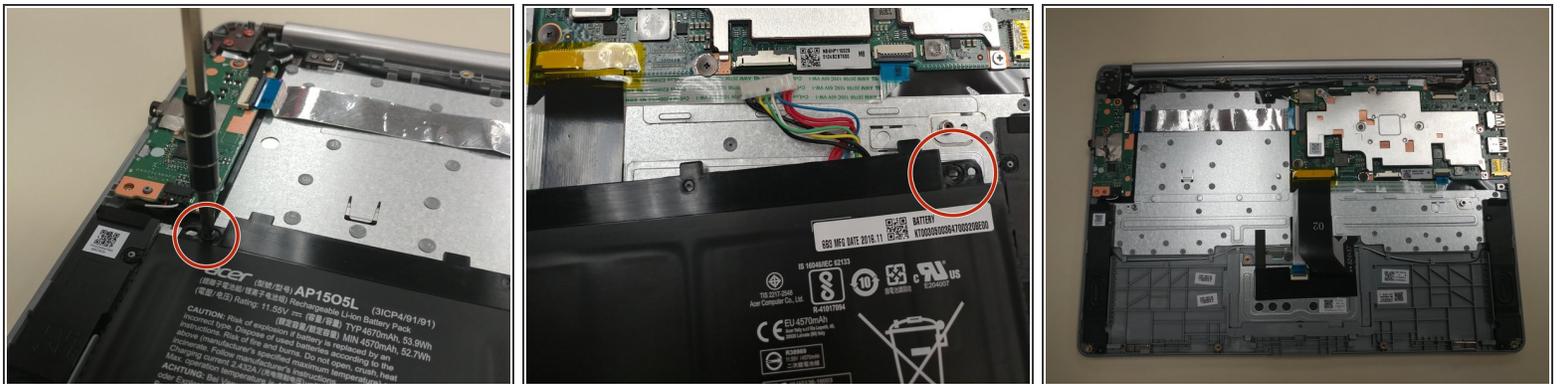

- Begin by unscrewing the two Phillips head screws that hold down the battery using a J1 sized screwdriver.
- Finally remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.