




# Microsoft Surface Laptop 3 13.5" Battery Replacement

Use this guide to replace a worn-out or dead...

Written By: Carsten Frauenheim

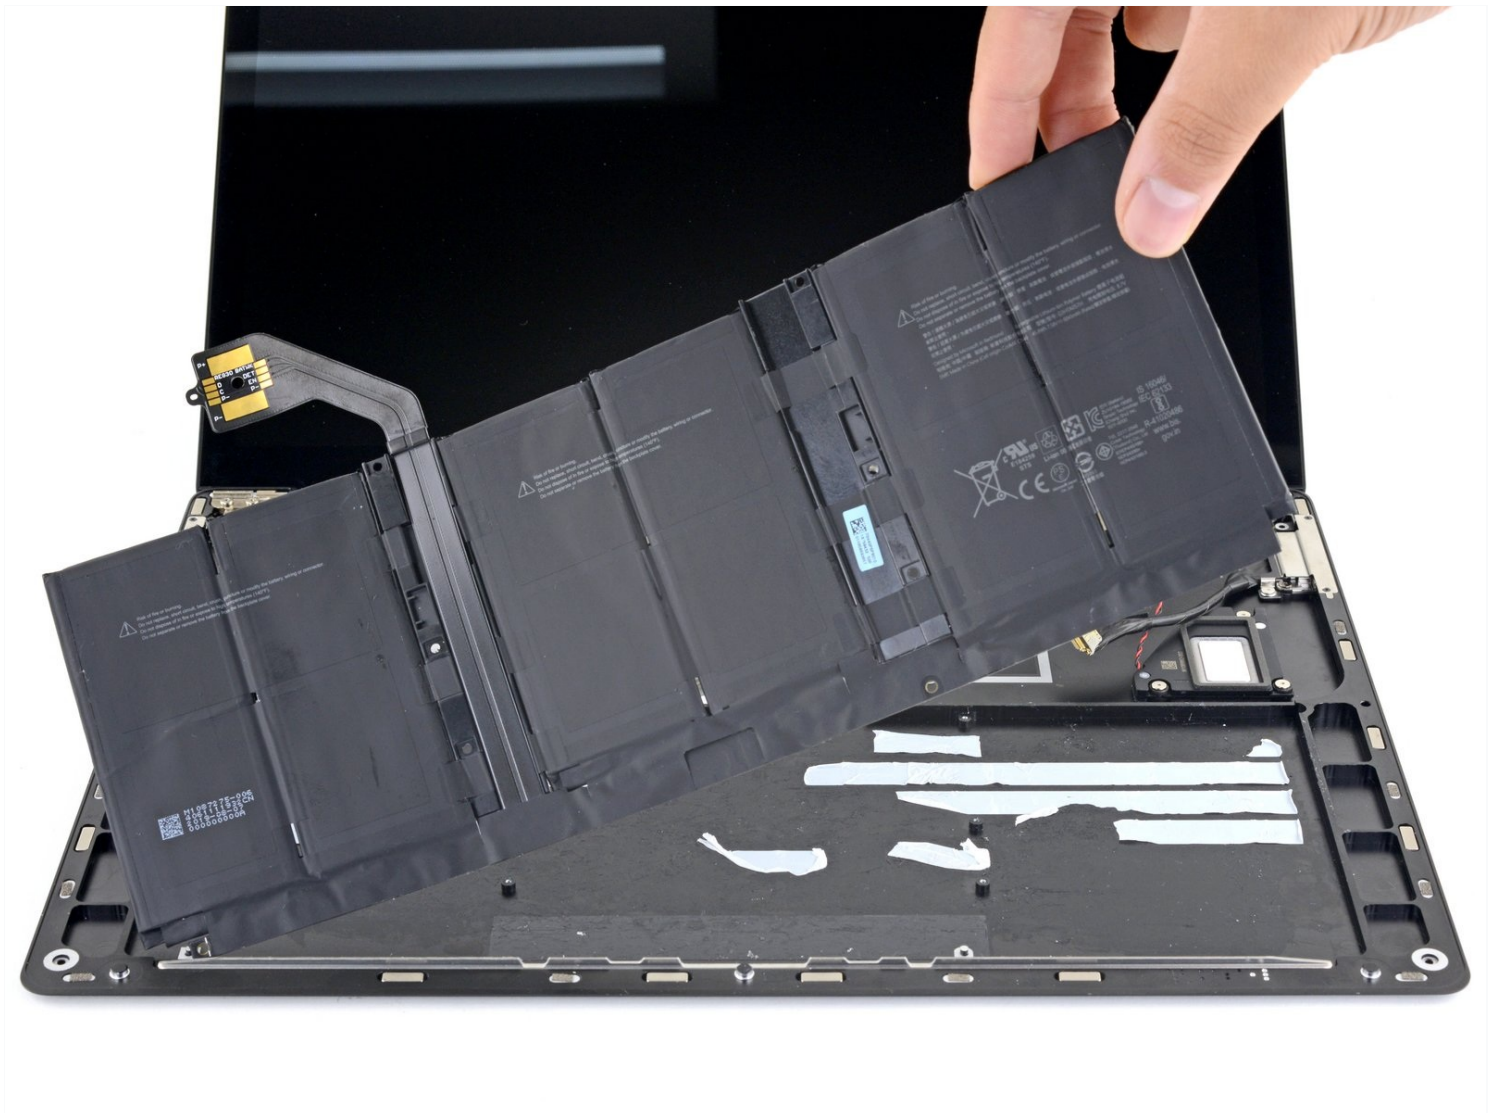

# INTRODUCTION

Use this guide to replace a worn-out or dead battery on a Microsoft Surface Laptop 3 (13.5").

**Note: Some photos in this guide are from the 15" model and may contain slight visual discrepancies, but they won't affect the guide procedure.**

**For your safety, discharge the battery below 25% before disassembling your laptop.** This reduces the risk of a dangerous thermal event if the battery is accidentally damaged during the repair.

If your battery is swollen, [take appropriate precautions](#).

You'll need replacement adhesive for the battery in order to complete this repair. Strong double-sided tape like [Tesa 61395](#) is recommended.



## TOOLS:

[Coffee Filters or a lint-free cloth](#) (1)  
[Thermal Paste](#) (1)  
[iFixit Opening Tool](#) (1)  
[T3 Torx Screwdriver](#) (1)  
[Tweezers](#) (1)  
[iOpener](#) (1)  
[iFixit Opening Picks \(Set of 6\)](#) (1)  
[iFixit Adhesive Remover](#) (1)  
[Plastic Cards](#) (1)  
[Spudger](#) (1)  
[T5 Torx Screwdriver](#) (1)



## PARTS:

[Surface Laptop 3 13.5" Battery](#) (1)

---

## Step 1 — Flip the laptop over



- Flip the laptop over and place it on your work surface, feet facing up.

## Step 2 — Removal tip



- ① The feet on the bottom of the laptop are meant to be removed with the pointed end of a spudger.
  - Each foot has a hidden indent that will simplify removal.
  - To make sure the spudger is in the indent, insert it at the nearest **long edge**, pushing parallel to the short edges of the laptop, as shown.
- ① Note that the two feet near the rear (screen) edge are different than the two front feet.

### Step 3 — Remove the rear feet



- Insert the pointed end of a spudger underneath one of the two rear feet, at its rear edge.
- Push the spudger underneath the foot and pry up to release it.
  - ⓘ The two rear feet are secured with some light adhesive.
- Repeat to remove the second rear foot.


### Step 4 — Remove the front feet



- Insert the pointed end of a spudger underneath one of the two front feet, at its front edge.
- Push the spudger underneath the foot and pry up to release it.
  - ⓘ The two front feet are secured with plastic clips as well as light adhesive.
- Repeat to remove the second front foot.



## Step 5 — Reassembly tip

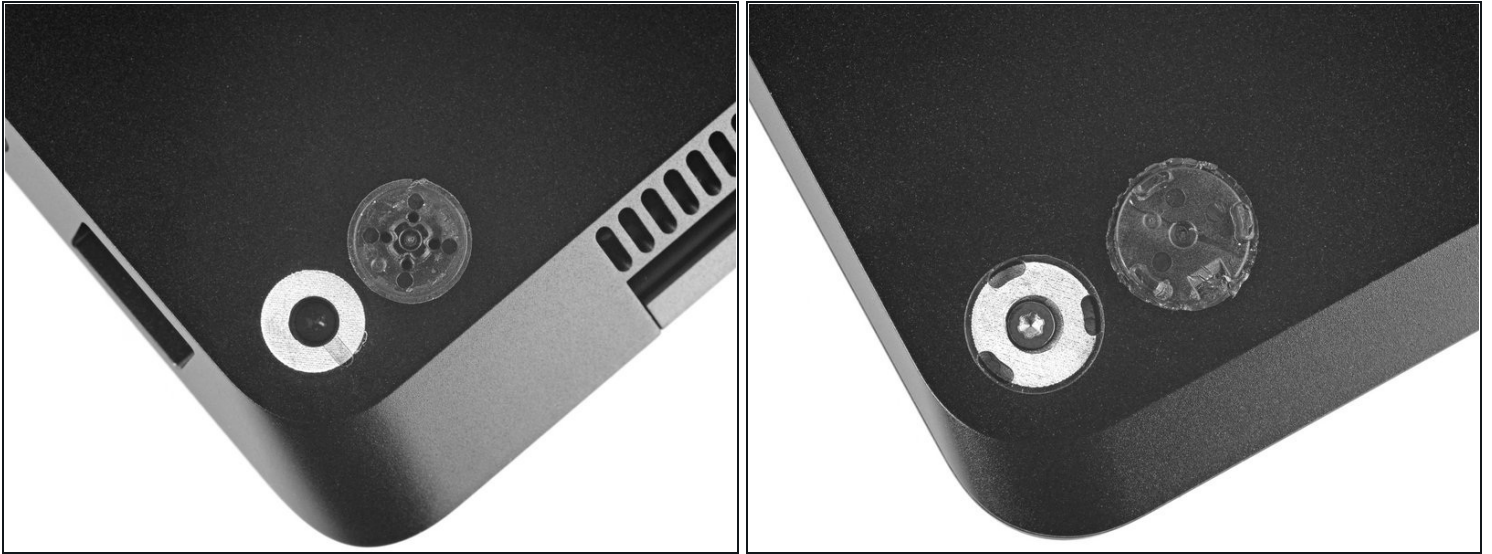

### ★ During reassembly:

- Note that the front and rear feet are different.
- Note that the front feet are directional and only clip in one way.

## Step 6 — Reassembly tip



### ★ In place of reusing old, worn out feet on your device, 8 mm rubber furniture pads can be a good substitute.

- Peel a pad away from its backing, align it over a foot cavity, and press to secure.

## Step 7 — Remove the upper case screws



- Use a T5 Torx driver to remove the four 3 mm screws in the foot cavities securing the upper case to the device.
- ⓘ Throughout this repair, [keep track of each screw](#) and make sure it goes back exactly where it came from to avoid damaging your laptop.
- ★ During reassembly, don't over-tighten these screws—they strip easily.

## Step 8 — Open the display






- Flip the device over.
- Open the display as far as it will go.


## Step 9 — Lift up the upper case



 The upper case is secured in place by magnets.


- Grip the top edge of upper case above the keyboard and lift straight up to release it.  
 Don't try to completely remove the upper case just yet, as it's still connected to the rest of the laptop.
- Lift the front edge of the upper case up and away from the laptop, taking care to not strain the keyboard and touchpad ribbon cable underneath.
-  During reassembly, lower the upper case onto the lower case until the magnets snap into place and it lays flat.  
 Check that the upper case sits flush around the entire perimeter. Any gaps between the upper and lower case near the display could cause damage to the display as it closes.

## Step 10 — Disconnect the ribbon cable

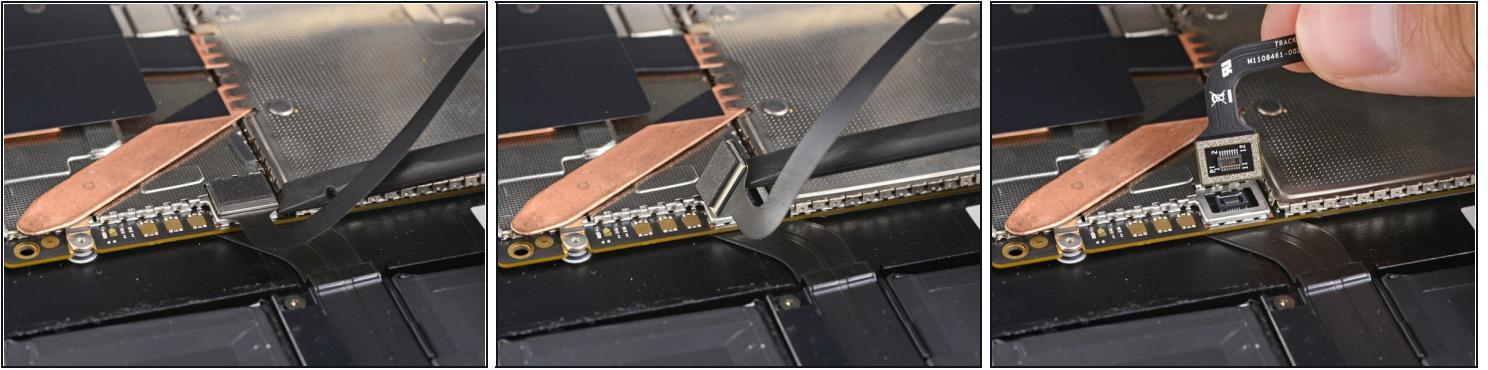

- ❶ The keyboard and touchpad ribbon cable is secured in place by a magnet connector.
- ❶ On some models, this connector is surrounded by black tape.
- Insert the flat end of a spudger underneath one edge of the ribbon cable connector, and pry up to release it.
- Remove the ribbon cable from the motherboard.


## Step 11 — Remove the upper case

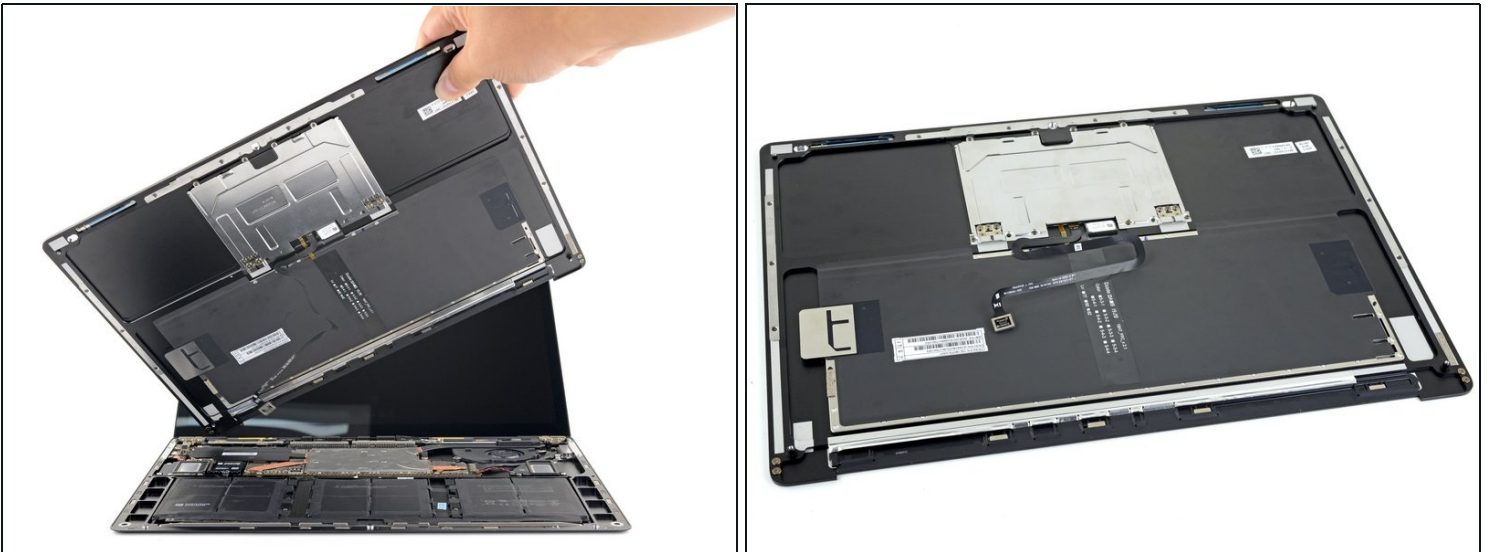

- Remove the upper case.
- Set the upper case onto a clean surface, keyboard-side down.
- ⚠ Ensure the ribbon cable lays flat, and isn't twisted or stressed.




## Step 12 — Remove the SSD screw

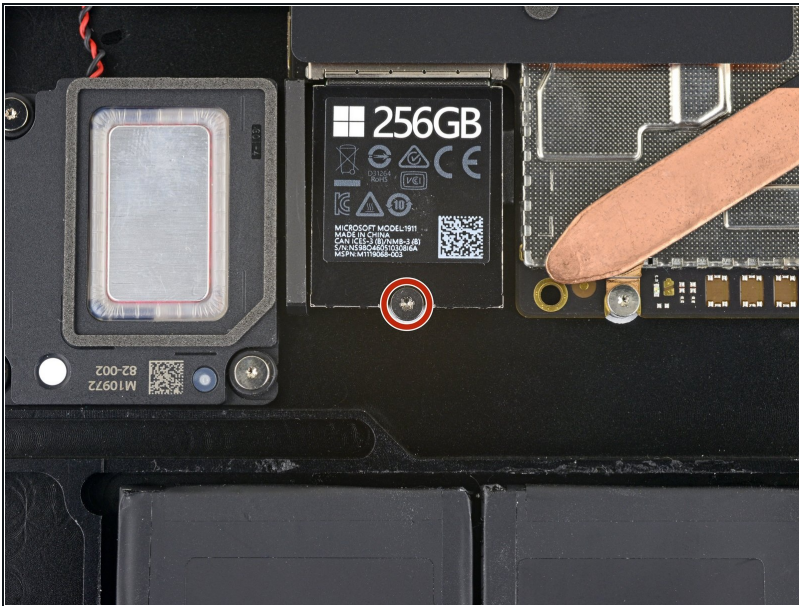


- Use a T5 Torx driver to remove the 2.7 mm screw securing the SSD.
- ⓘ Removing the SSD also [functions as a battery disconnect](#) and should be performed before all major repairs.

## Step 13 — Remove the SSD

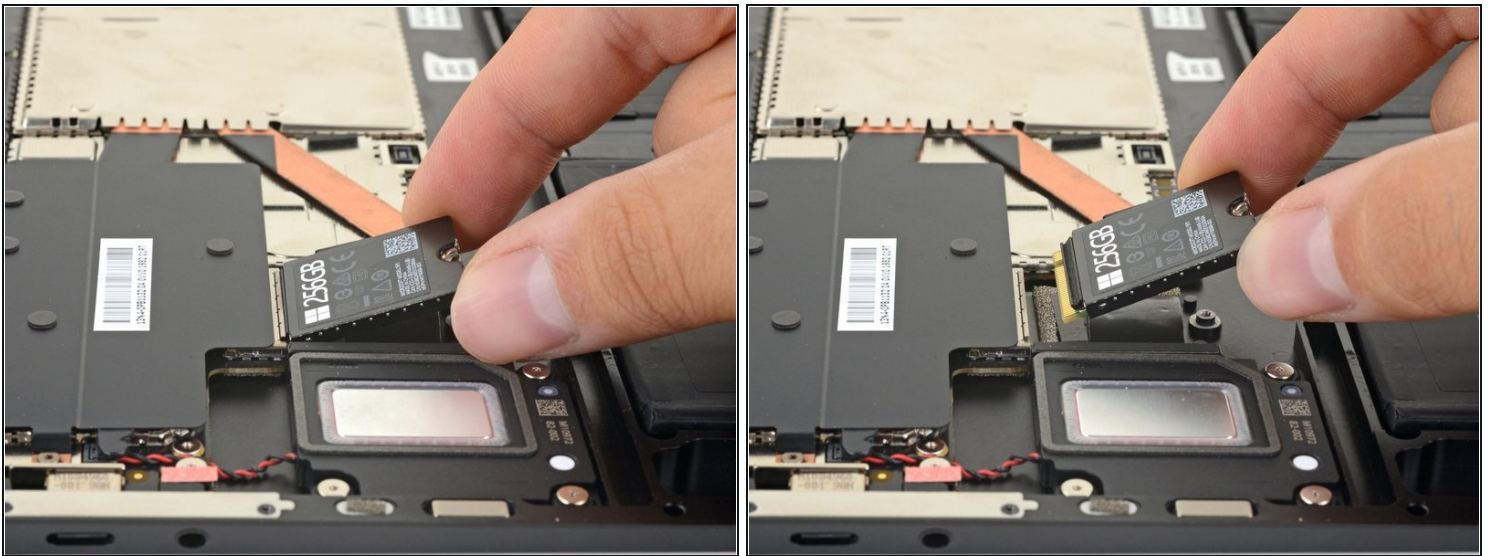


- ⓘ With the SSD screw removed, the SSD will pop up at a shallow angle.
- Grip the end of the SSD and pull it away from its board connector to remove it.
  - ☑ During reassembly, insert the SSD at a shallow angle into its board connector, and secure it back into its horizontal position with the SSD screw.

## Step 14 — Remove the tape

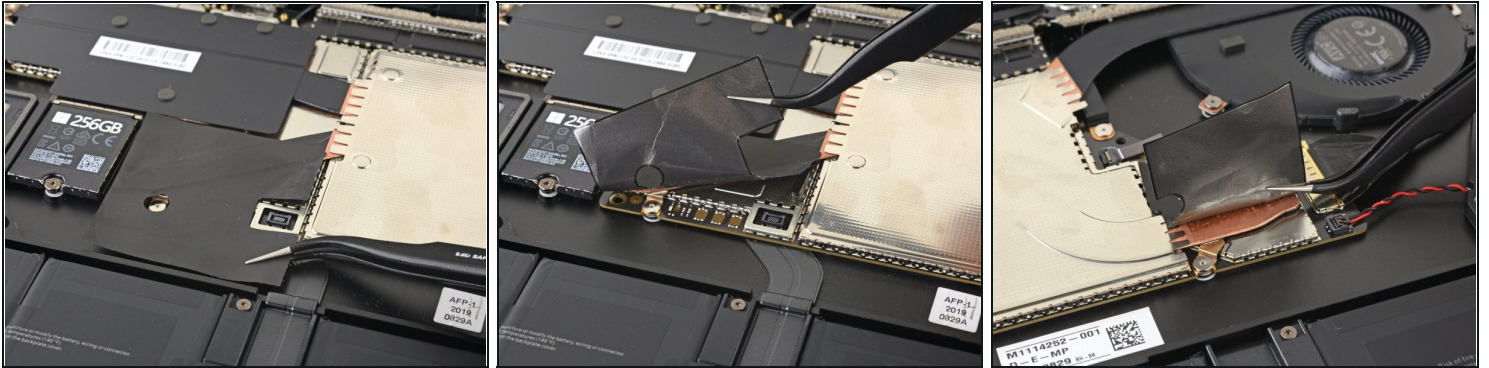

- Use a pair of tweezers to remove the two pieces of black tape covering the bottom left and bottom right corners of the motherboard.
- ☑ During reassembly, reapply the tape if it's sticky enough to be reused.


## Step 15 — Remove the heatsink shield

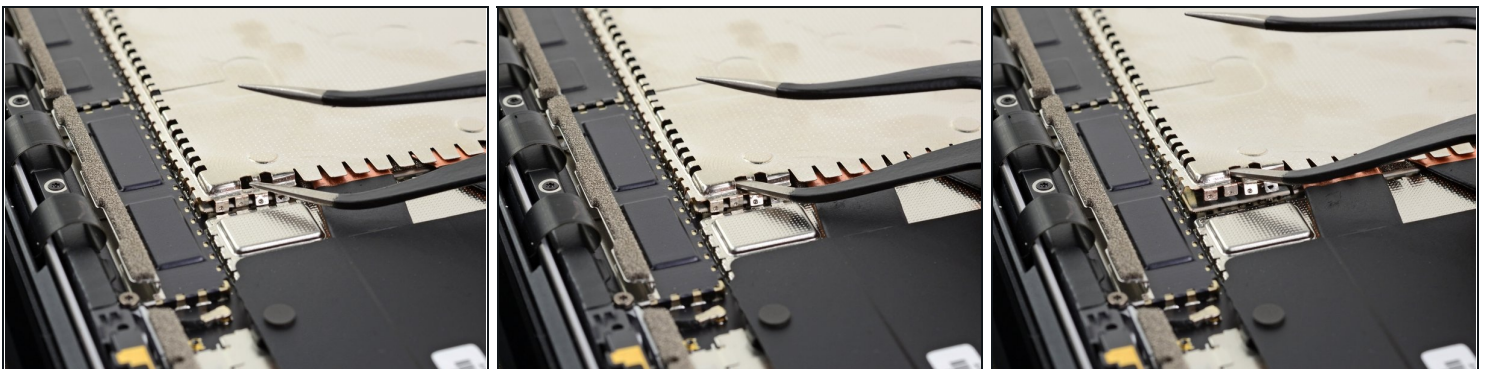

- Insert the tip of one arm of a sharp pair of tweezers into one of the holes near the top left corner of the heatsink shield.
  - Pull upwards to release the top left corner of the shield.
- ⓘ This may require a considerable amount of force, but try not to deform the shield too much—you'll need to reinstall it during reassembly.




## Step 16

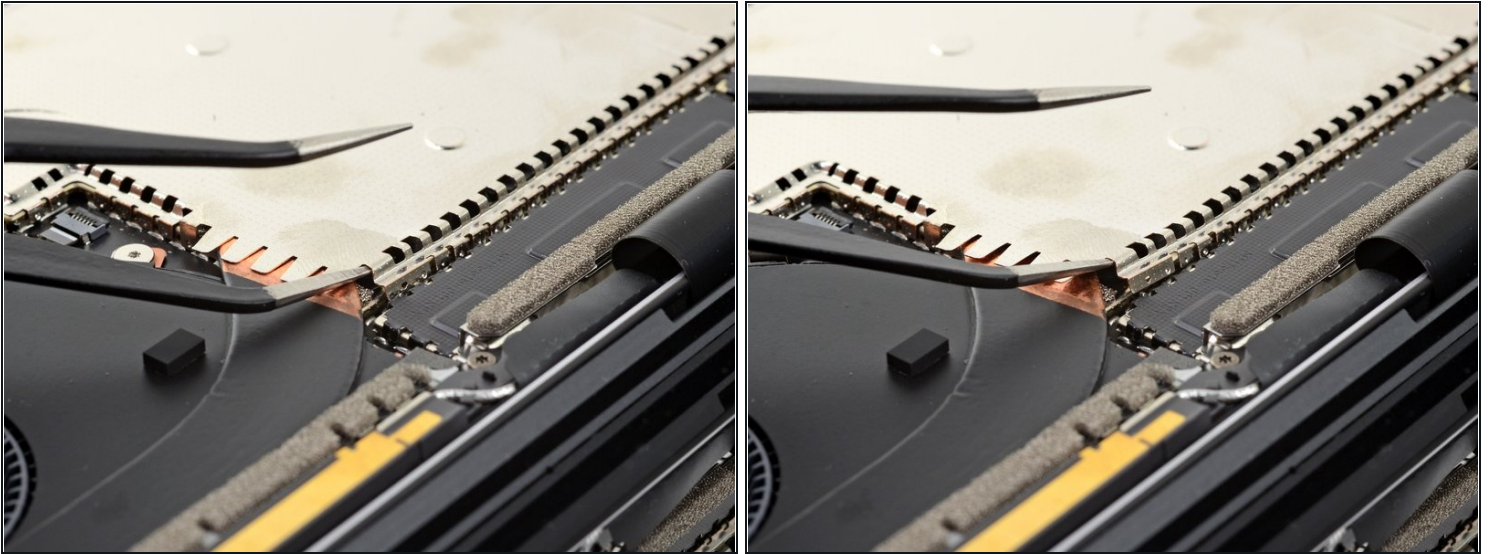

- Repeat the previous step's procedure to release the top right corner of the heatsink shield.

## Step 17

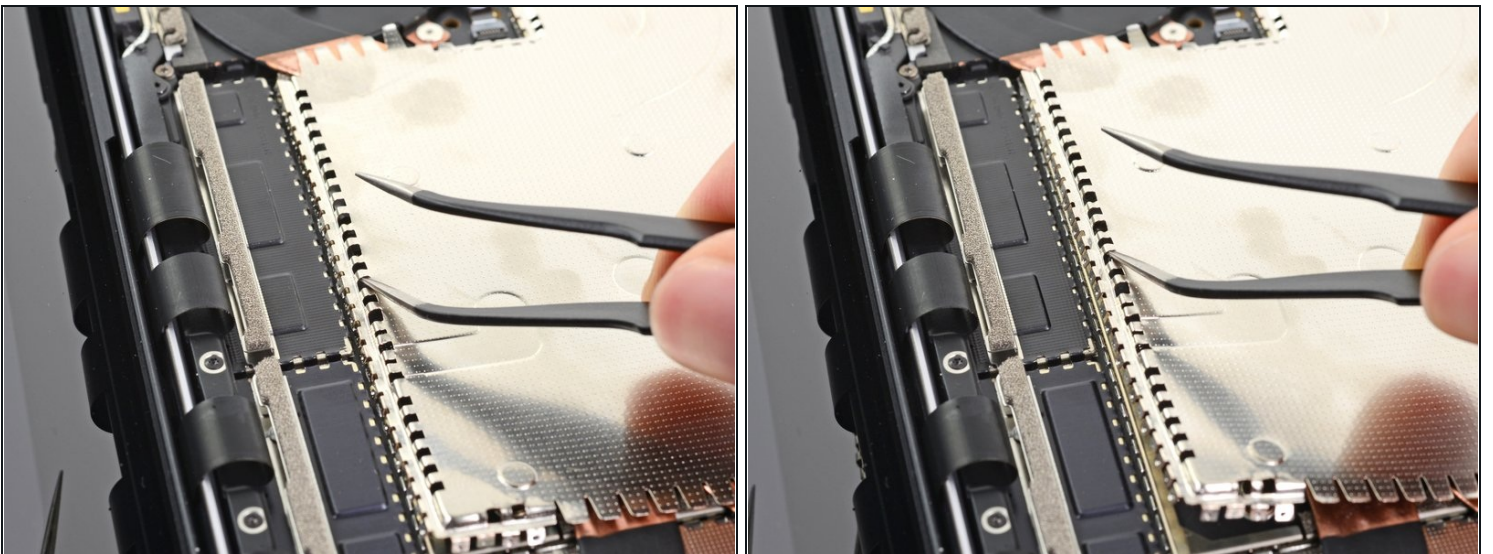


- Continue along the heatsink's top edge, inserting a tweezer arm into the shield holes and prying upwards on each one as you go.

## Step 18



- Once the top edge is loose, use your fingers to grip the top of the shield and pull it up and away from the heatsink to release the remainder of the shield.
- ⓘ Try not to deform the shield too much—you'll need to reinstall it during reassembly.
- Completely remove the heatsink shield.


## Step 19 — Disconnect the cooling fan

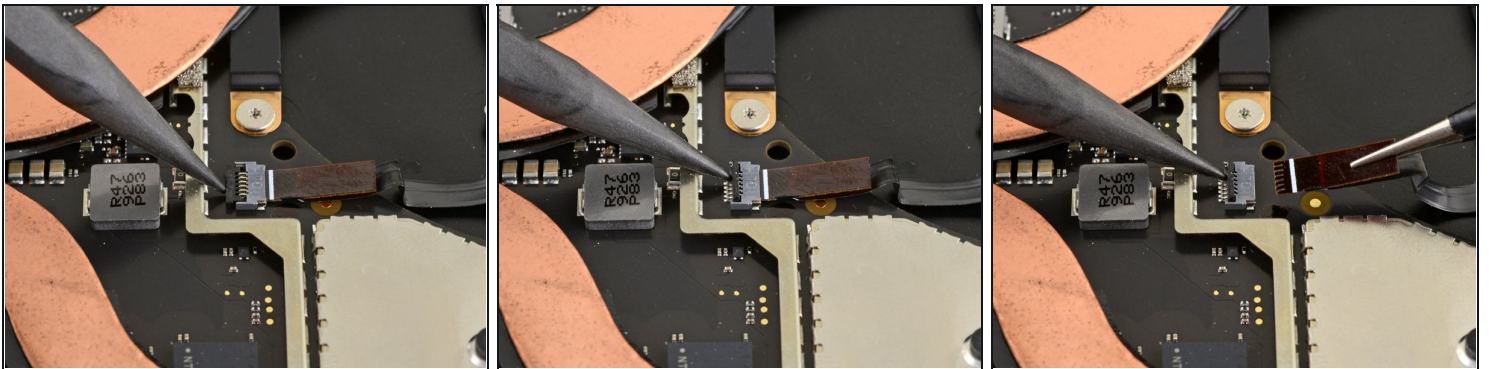

- Use the pointed end of a spudger to flip up the locking flap on the fan cable's [ZIF connector](#).
- Use a pair of tweezers to pull the fan cable straight out of the connector.




## Step 20 — Remove the heatsink screws

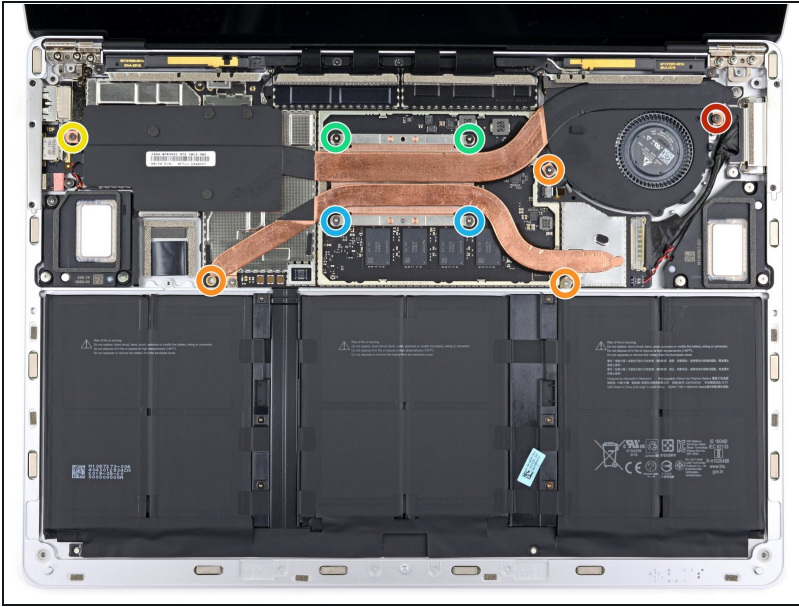

- Use a T3 Torx driver to remove the nine screws securing the heatsink:
  - One 2.5 mm screw
  - Three 2.0 mm screws
  - One 3.0 mm screw
  - Two 4.1 mm screws
  - Two 3.4 mm screws

## Step 21 — Reassembly tip

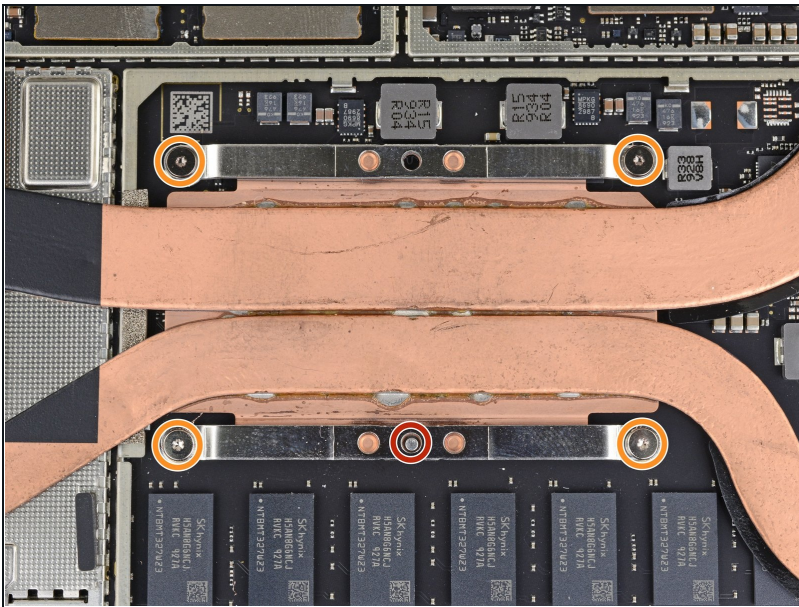


- ★ During reassembly:
  - Align the heatsink with the centering peg on the motherboard.
  - Tighten the four CPU tension screws in an "X" pattern.

## Step 22 — Clear the alignment peg



- Use the tip of your finger to lift the far right edge of the heatsink up and off of the small alignment peg near the right side of the fan on the lower case.
- Once the heatsink has cleared the peg, lightly pull the right edge towards the front of the device.



## Step 23 — Remove the heatsink

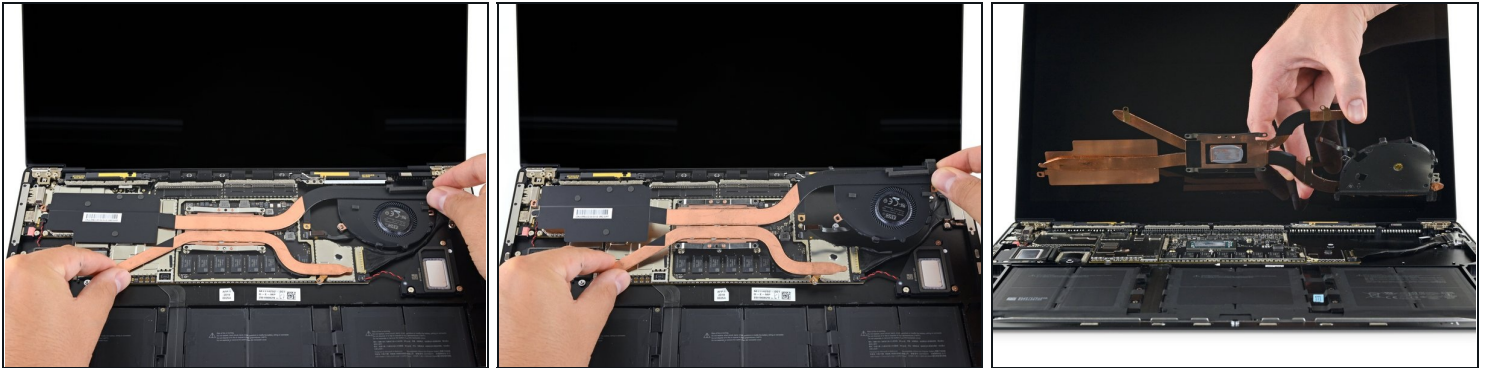

- Remove the heatsink.
  - ⓘ If the heatsink feels stuck to the CPU, gently wiggle it side-to-side to separate it from the thermal paste holding it down.

**⚠ Don't pull on the heatsink too hard; the heat pipes are susceptible to creasing.**


## Step 24 — Reapply thermal paste

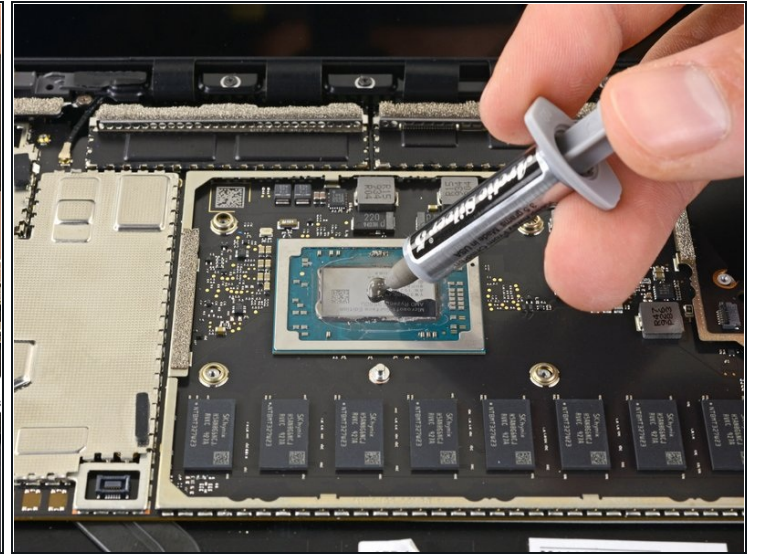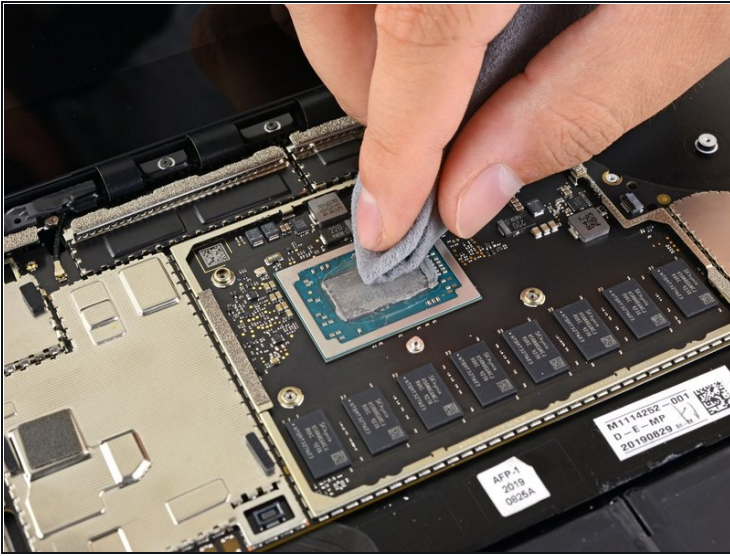

- ★ Before reinstalling the heatsink, follow [this guide](#) to clean the heatsink and CPU and reapply thermal paste.




## Step 25 — Remove the motherboard shields

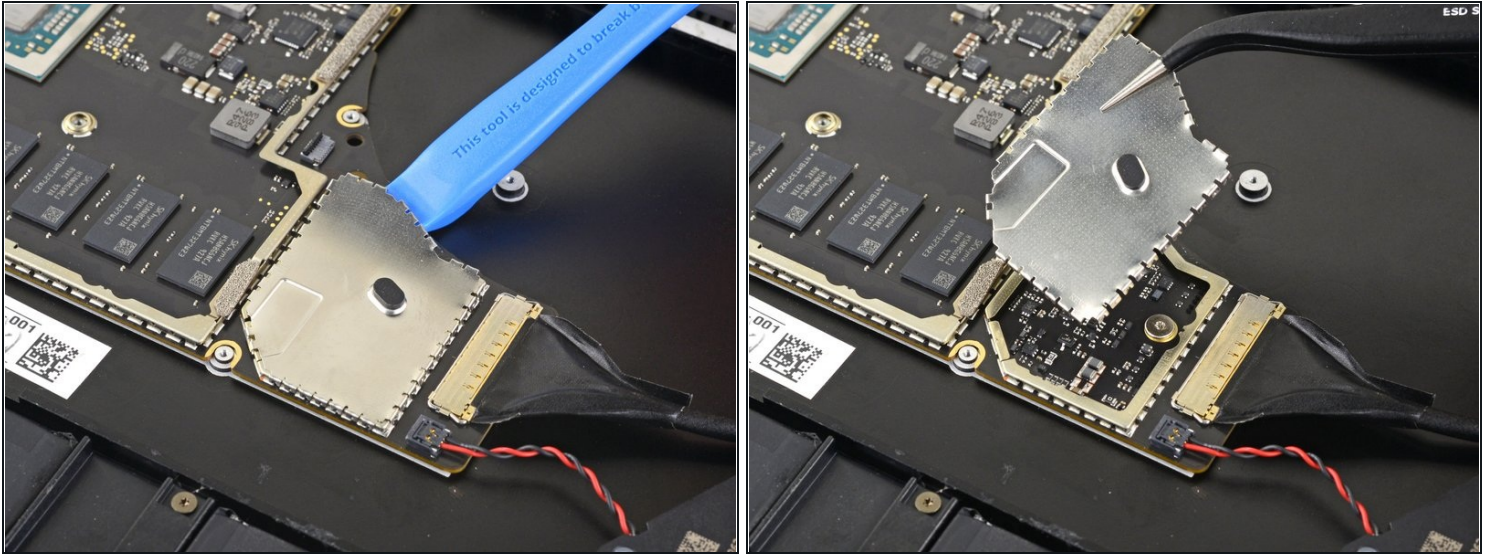

- ① Some motherboard screws are located under two of the metal shields, both of which need to be removed.
- Use an opening tool to pry up an edge of the metal shield covering the right side of the motherboard.
- ① Try not to deform the shield too much—you will need to reinstall it during reassembly.
- Work your way around the perimeter of the shield, prying up intermittently, until you can remove it completely.
- Remove the shield.




## Step 26

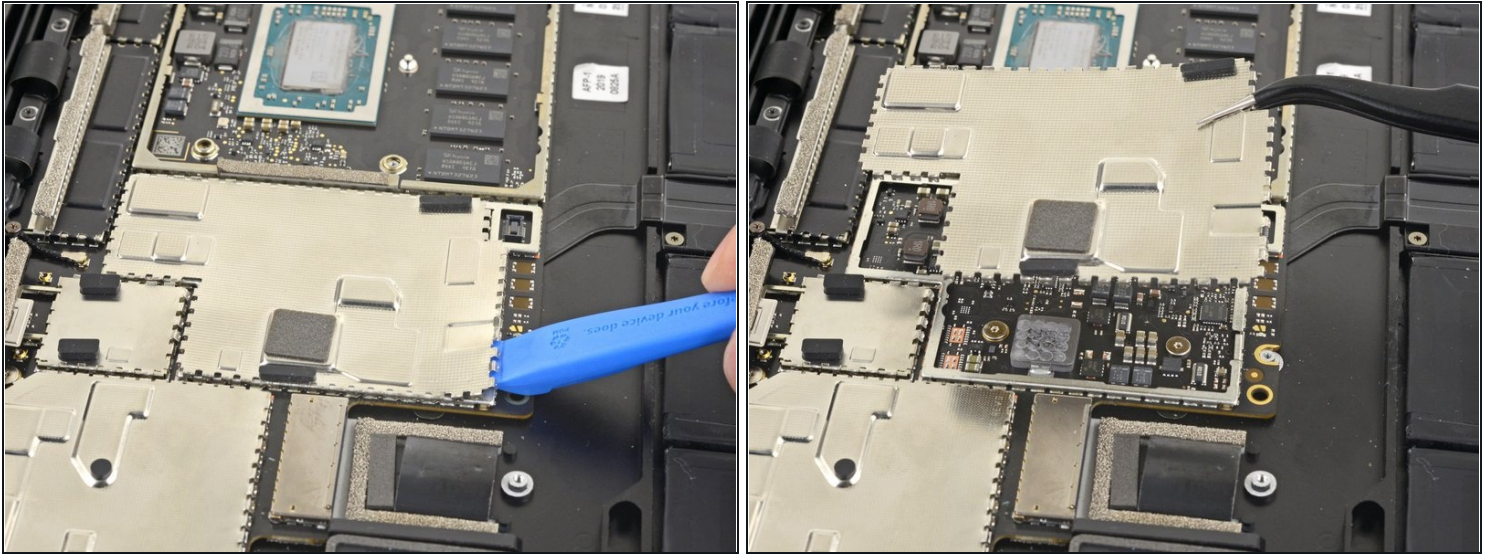


- Repeat the previous step to remove the second shield from the left side of the motherboard, closest to the CPU.

## Step 27 — Disconnect the right speaker

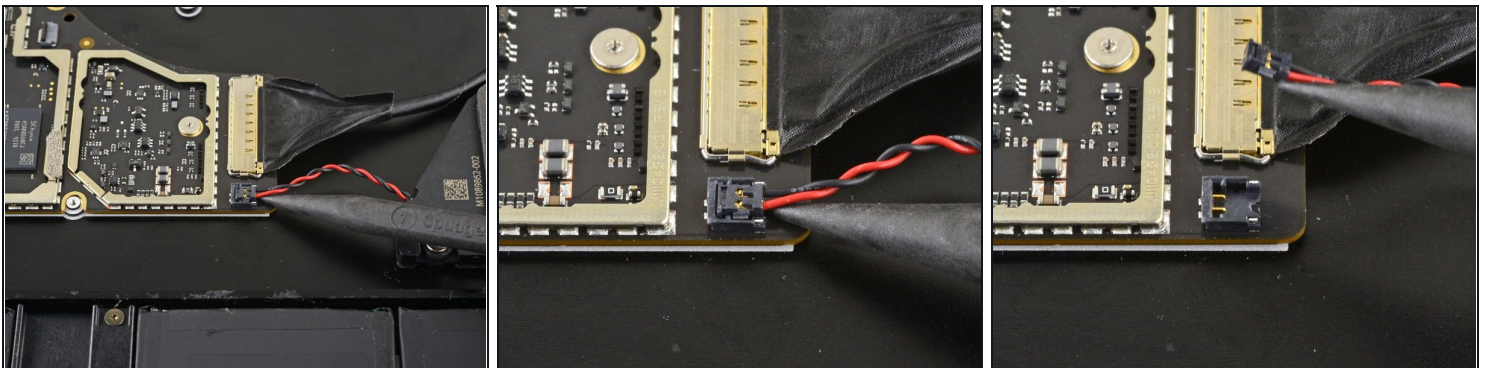


- Use the pointed end of a spudger to lift and disconnect the right speaker wire from its connector on the motherboard.

## Step 28 — Disconnect the Surface Connect port

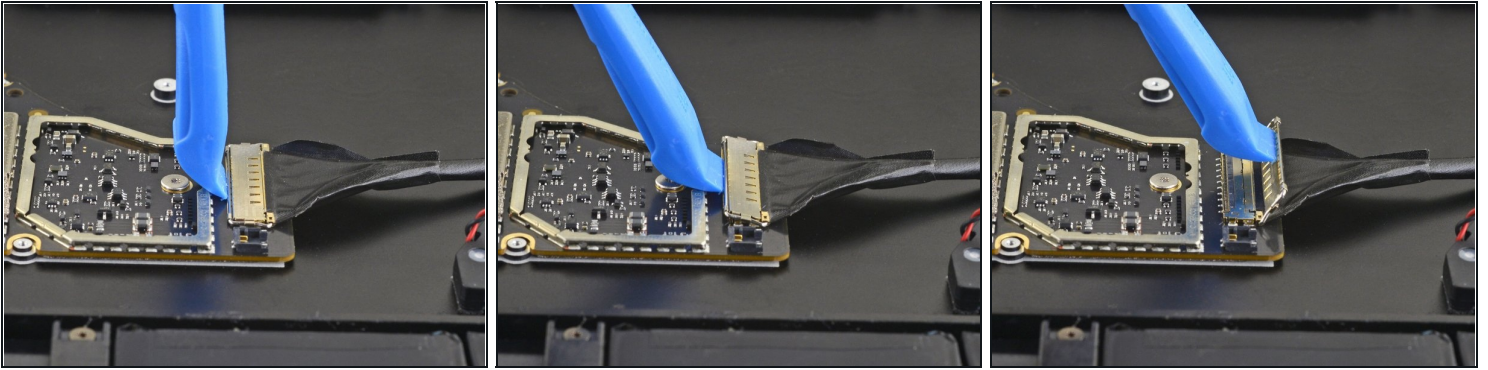

- Use an opening tool to flip open the gold locking arm on the Surface Connect port's motherboard connector.



## Step 29

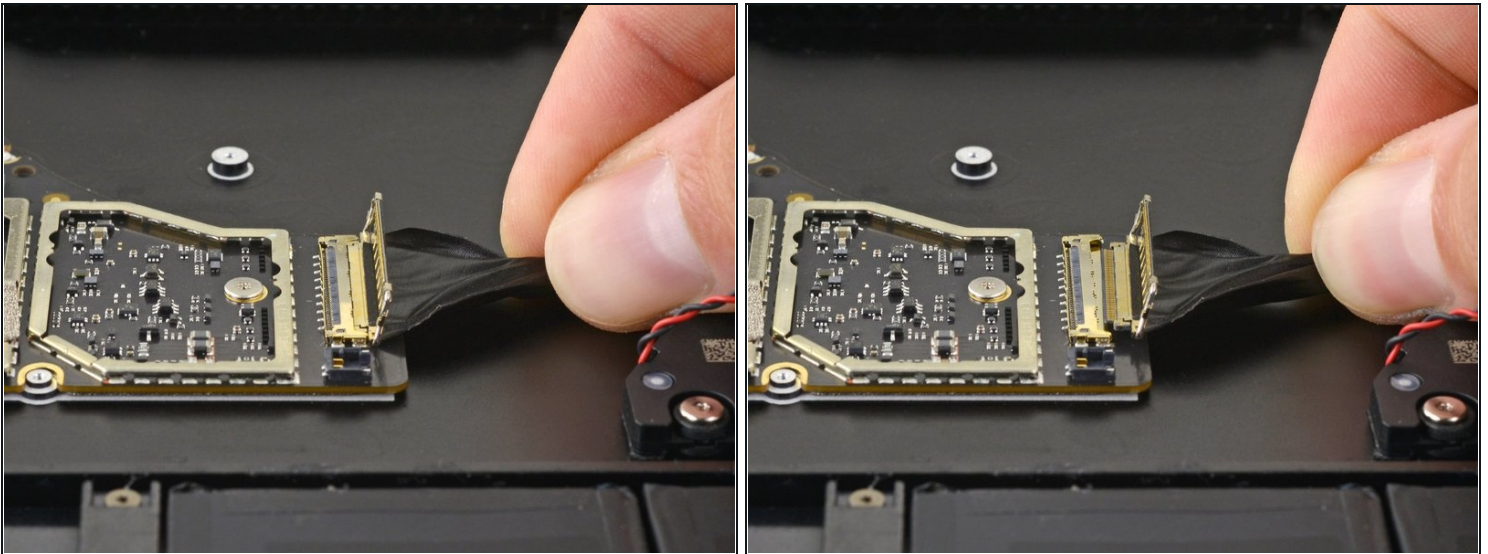

- Grip the Surface Connect port cable and pull it away from its connector to remove it.





### Step 30 — Disconnect the left speaker

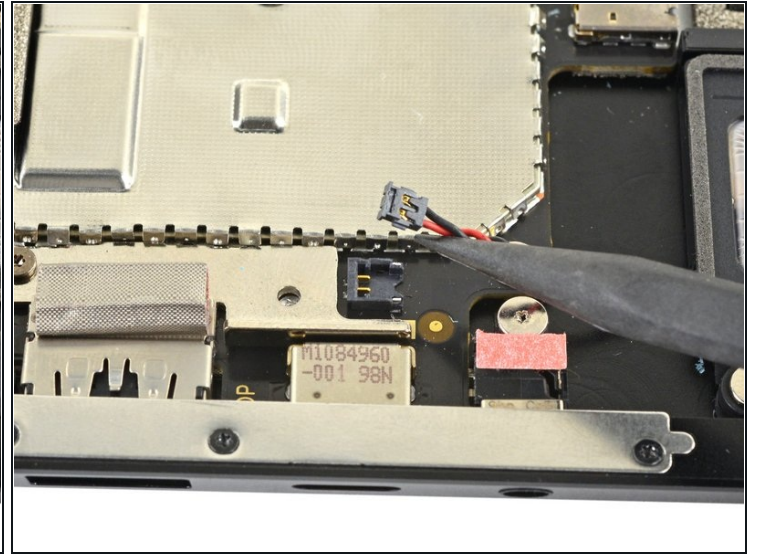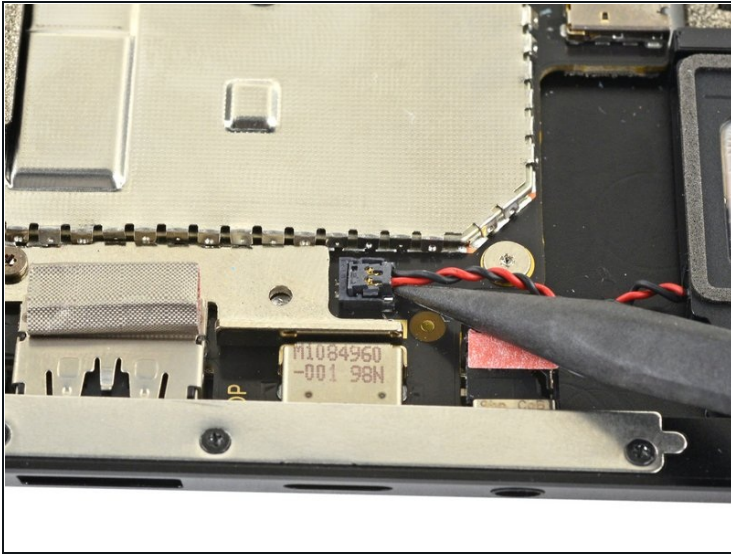

- Use the pointed end of a spudger to lift and disconnect the left speaker wire from its connector on the motherboard.



## Step 31 — Remove the display connector shields

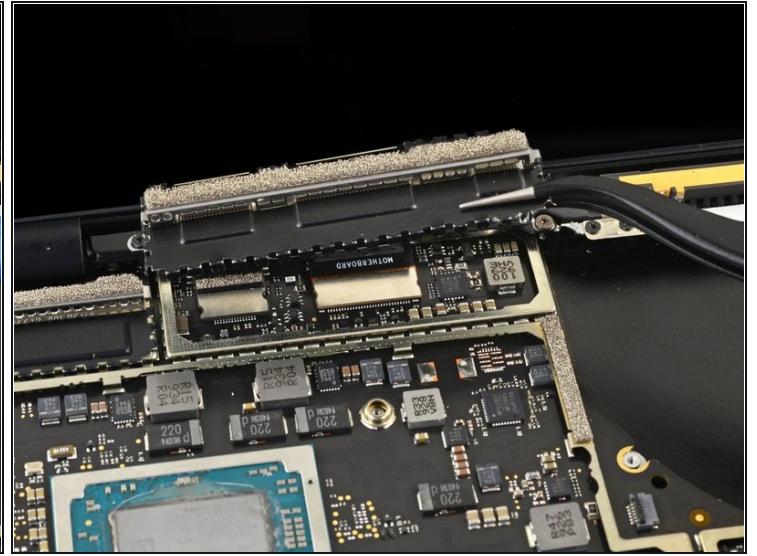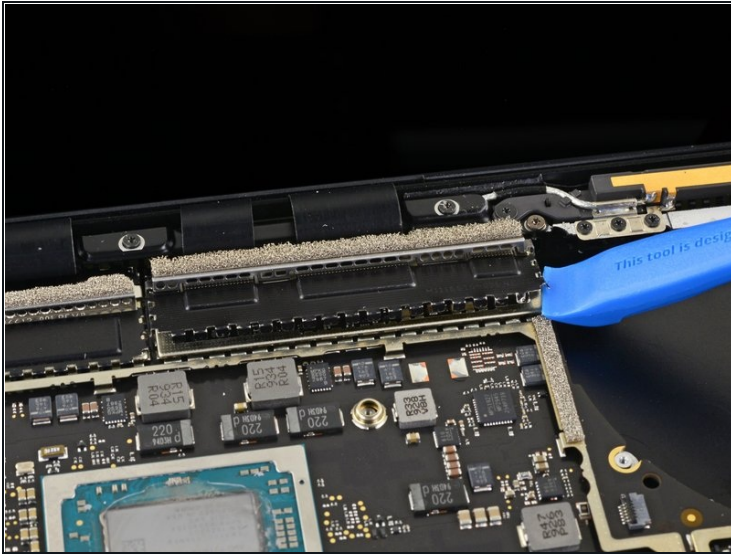

- Use an opening tool to pry up the black shield covering the right bank of display connectors.
  - ① Try not to deform the shield too much—you will need to reinstall it during reassembly.
- Repeat at different points around the shield until it becomes loose.
- Remove the shield.





## Step 32

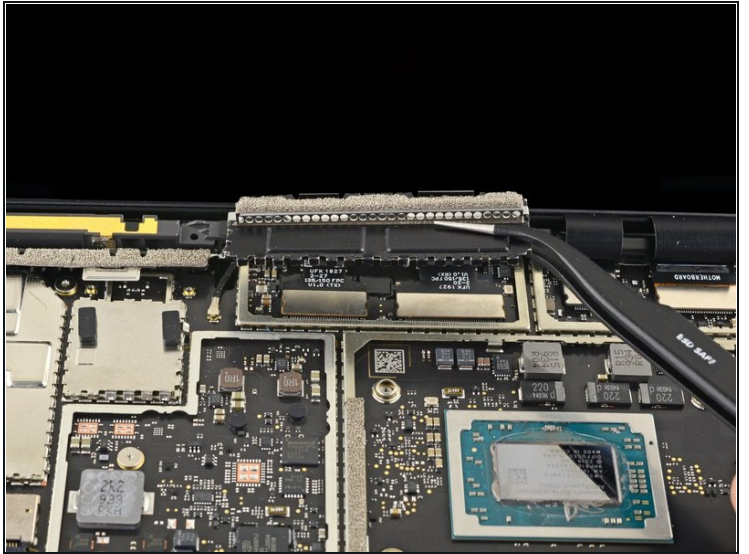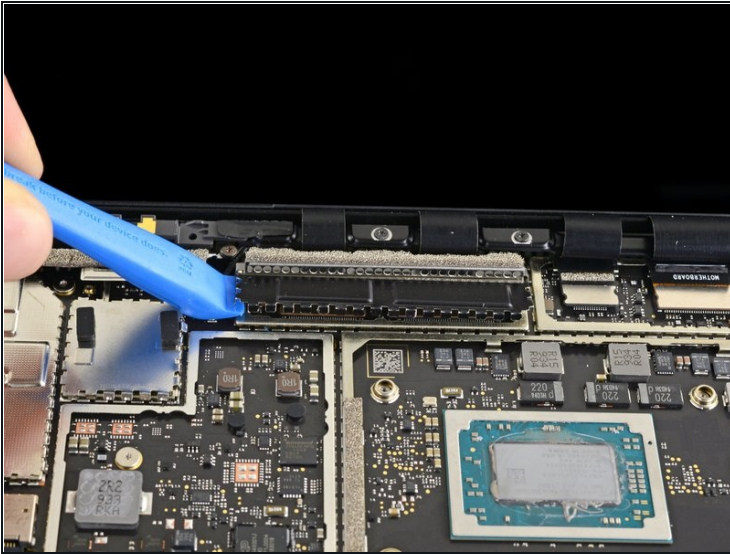


- Repeat the previous step to remove the remaining shield from the left bank of display connectors.

## Step 33 — Disconnect the display cables

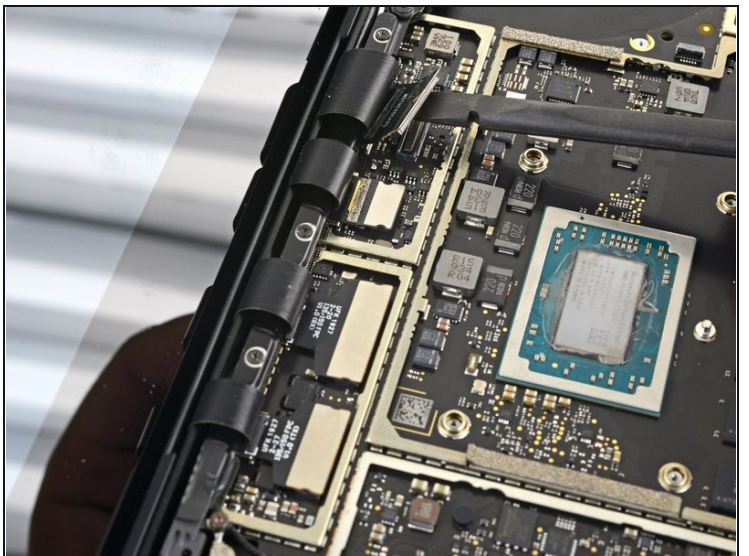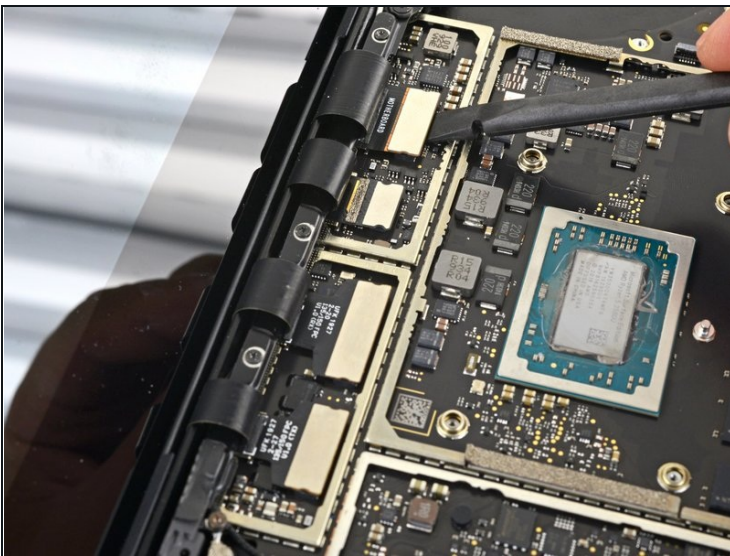


- Use the flat end of a spudger to pry the first display cable up and out of its socket on the motherboard to disconnect it.

## Step 34

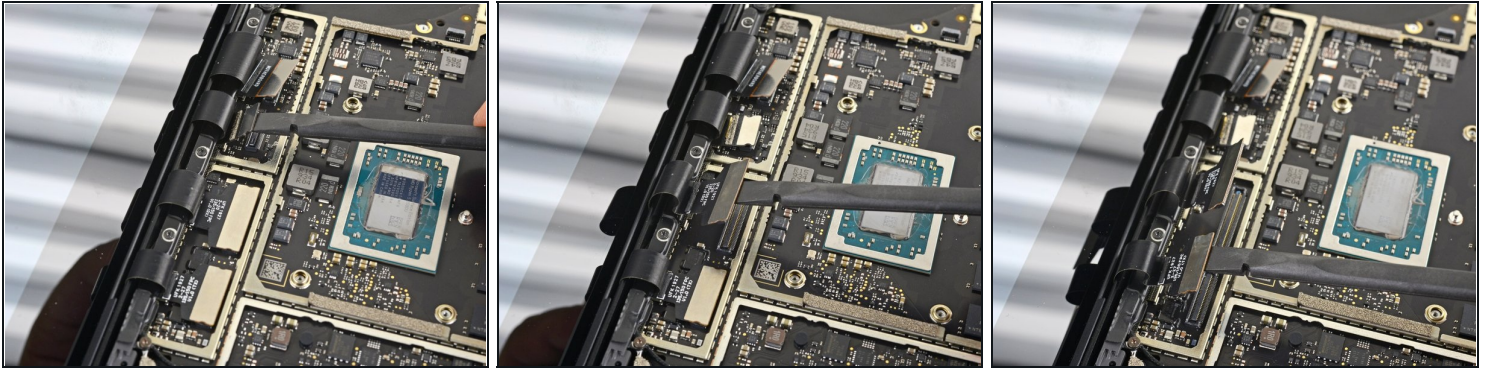

- Disconnect the three remaining display connectors.


## Step 35 — Reassembly tip

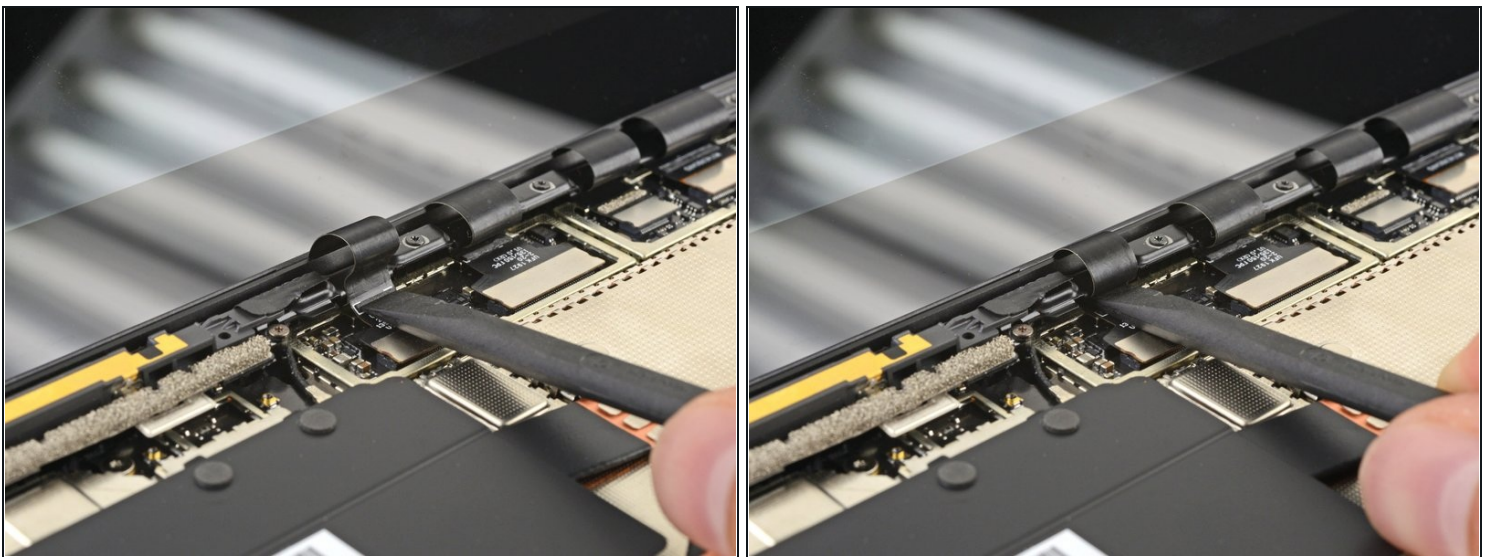

- ☑ During reassembly, use the flat end of a spudger to gently push the display cables back into their cavity in the lower case.




## Step 36 — Disconnect the antenna cable

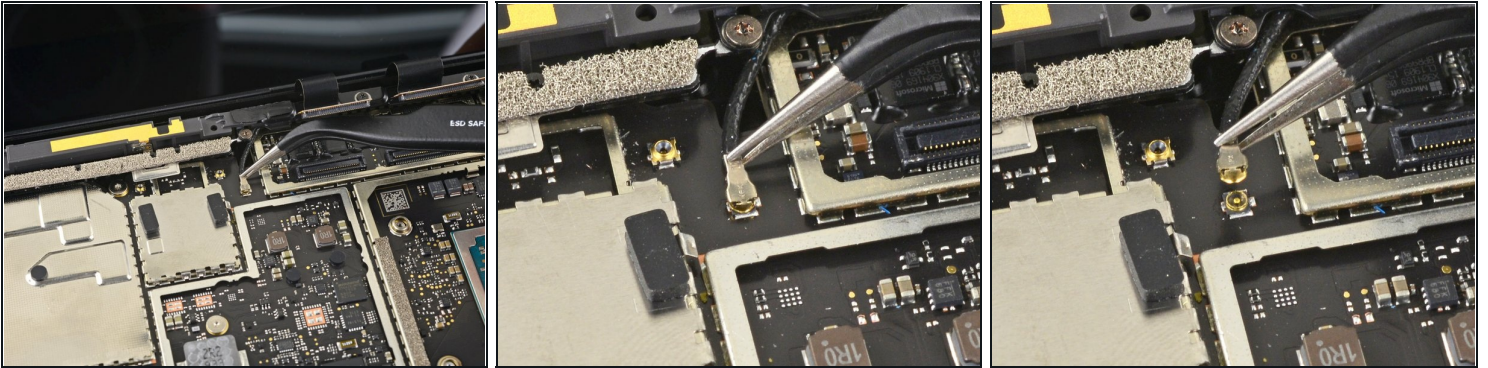

- Use a pair of tweezers to grip the [antenna cable](#) close to its base.
- Pull straight up to disconnect the cable.


## Step 37 — Remove the motherboard bracket

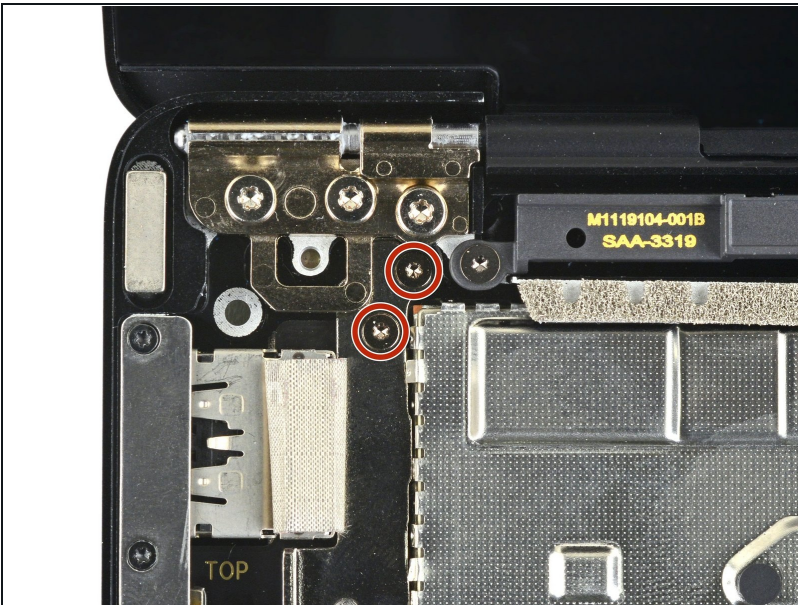

- Use a T3 Torx driver to remove the two 3 mm screws securing the motherboard bracket.




## Step 38

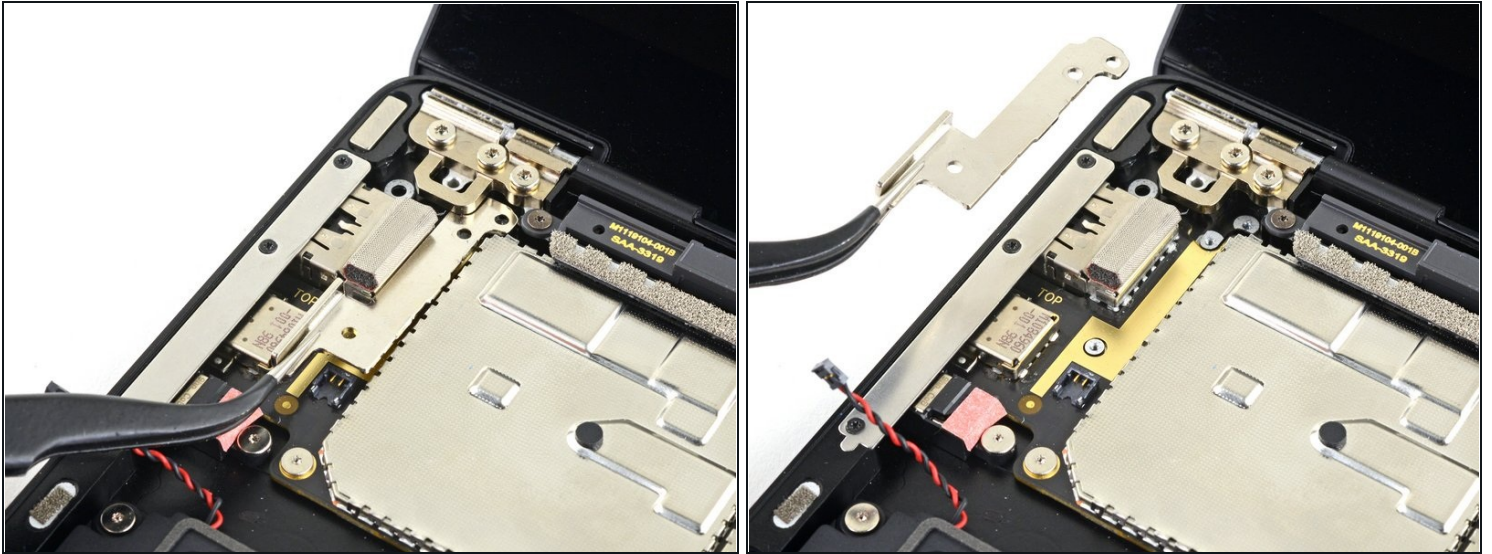

- Use a pair of tweezers to remove the motherboard bracket.

## Step 39 — Remove the motherboard screws

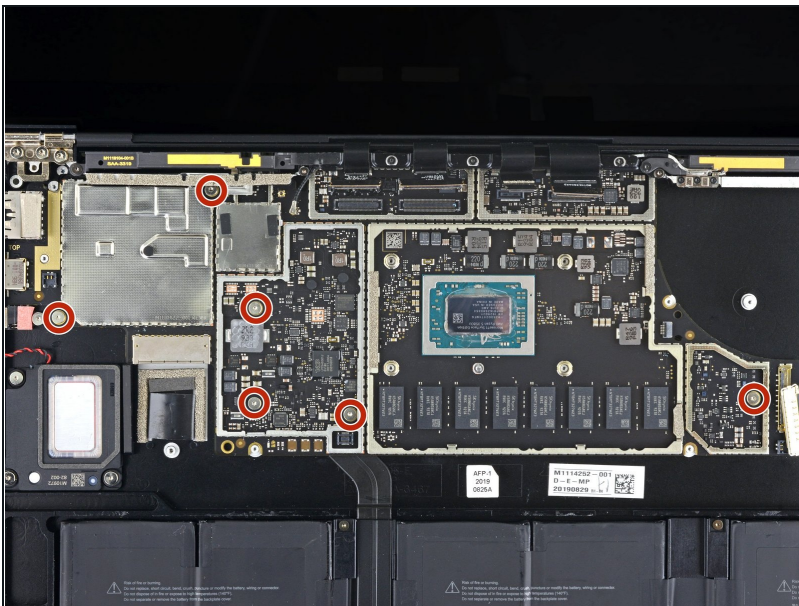


- Use a T3 Torx driver to remove the six 2 mm screws securing the motherboard.

## Step 40 — Remove the motherboard



- Use your fingers to lift and remove the motherboard.
  - ⓘ If the motherboard feels stuck, slide the motherboard to the right so the I/O ports clear their cutouts on the chassis.
- ⓘ Ensure the two [screwpost braces](#) underneath the motherboard don't get lost during removal.


## Step 41 — Check cables during reassembly

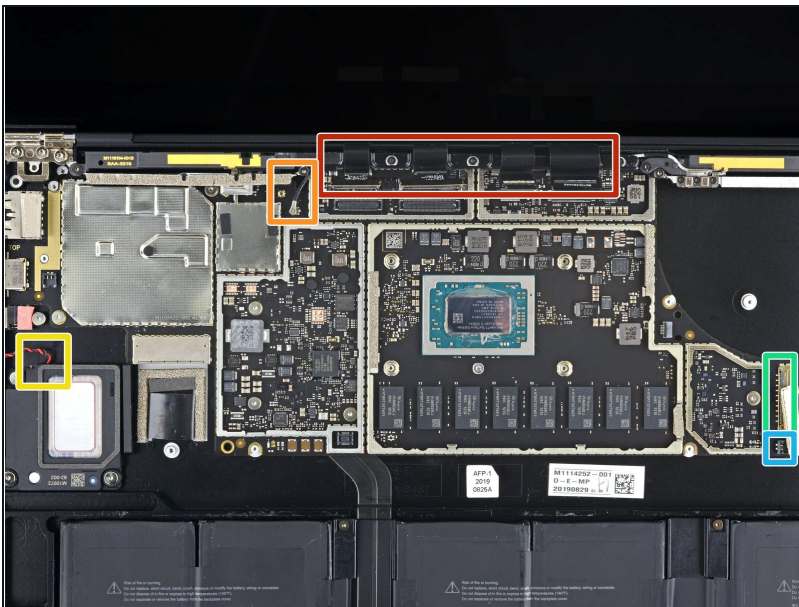

- ★ When you reinstall the motherboard, verify that no cables get trapped under the board as you lower it into place. Check each of the five locations carefully:
  - Four display cables
  - Antenna cable
  - Left speaker cable
  - Surface Connect cable
  - Right speaker cable



## Step 42 — Loosen the battery contact cable adhesive

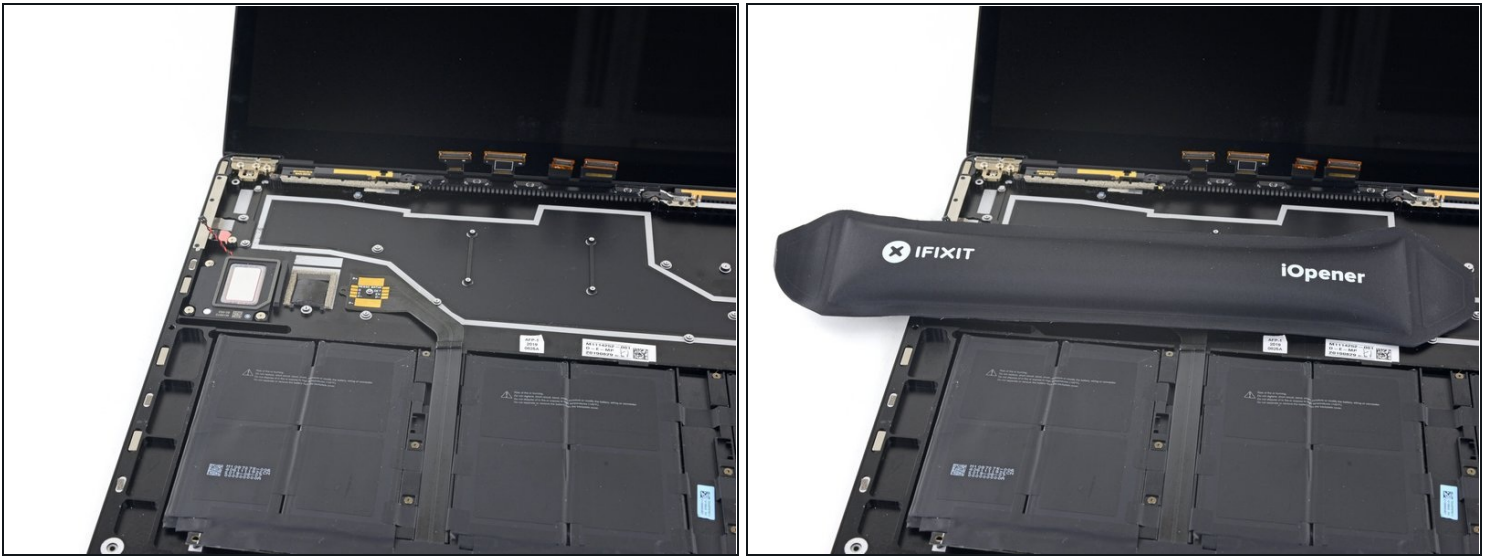

- [Heat an iOpener](#) and lay it on top of the battery contact cable for about a minute, in order to soften the adhesive securing it to the case.
  - ⓘ If you don't have an iOpener, use a hair dryer to warm up the cable instead.


## Step 43 — Separate the battery contact cable



- Slide an opening pick underneath the battery contact cable to separate it from the case.
  - ⓘ If the adhesive is stubborn, don't force the pick. Lightly reheat the cable and try again.
- ★ During reassembly, note that the contact cable is centered in place with both a screwpost and an alignment peg.




## Step 44 — Remove the battery screws

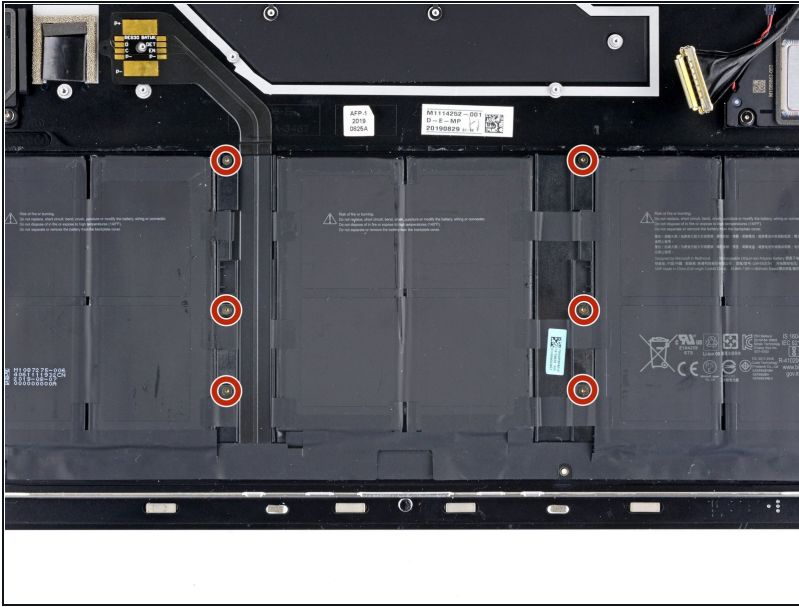

- Use a T3 Torx driver to remove the six 2.7 mm screws securing the battery to the case.

## Step 45 — Loosen the battery adhesive

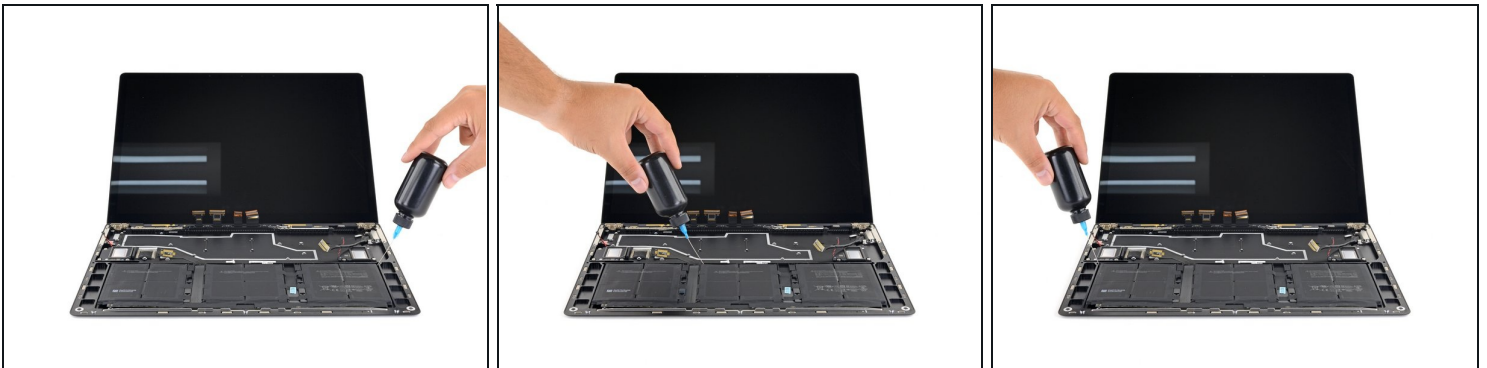

- Apply adhesive remover or high-concentration (90% or higher) isopropyl alcohol to the top edges of all three battery cell groups.
  - ① If you are using adhesive remover, [follow these preparation steps first](#).
- Wait 2–3 minutes for the adhesive remover to penetrate and soften the adhesive before you proceed to the next step.


## Step 46



**⚠ Take care not to puncture or bend the battery with your tools—a punctured or bent battery may leak dangerous chemicals or cause a thermal event.**

- Slide a [plastic card](#) underneath the far left battery cell group to slice through the adhesive holding it to the case.
  - ⓘ If you encounter significant resistance at any point during this procedure, pause and apply more adhesive remover. Wait for it to soak into the adhesive, and try again.
- Wiggle the card from side to side as you insert it under the battery cells to fully separate all adhesive holding them in place.
- Leave the plastic card temporarily underneath the cell to prevent it from re-adhering while you continue.

## Step 47

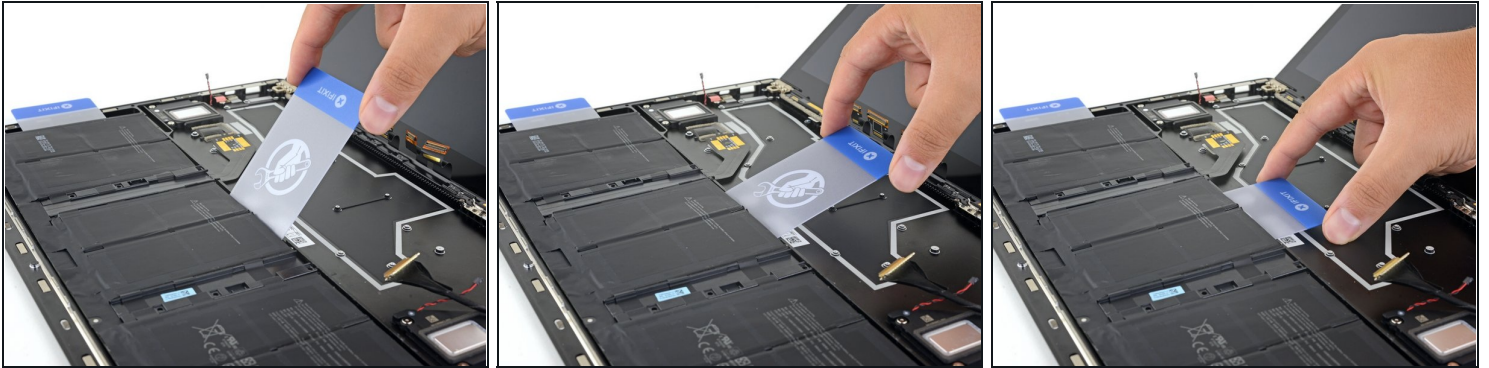

- Slide a second plastic card underneath the middle battery cell group to slice through the adhesive holding it to the case.
- Wiggle the card from side to side as you insert it under the battery cells to fully separate all adhesive holding them in place.


## Step 48



- Slide the card out from under the middle cell group.
  - ① Leave the card that's underneath the left group in place for now.
- Slide the plastic card underneath the far right battery cell group to slice through the adhesive holding it to the case.
- Wiggle the card from side to side as you insert it under the battery cells to fully separate all adhesive holding them in place.
- Leave the plastic card temporarily underneath the right cell group to prevent it from re-adhering while you continue.



## Step 49 — Remove the battery

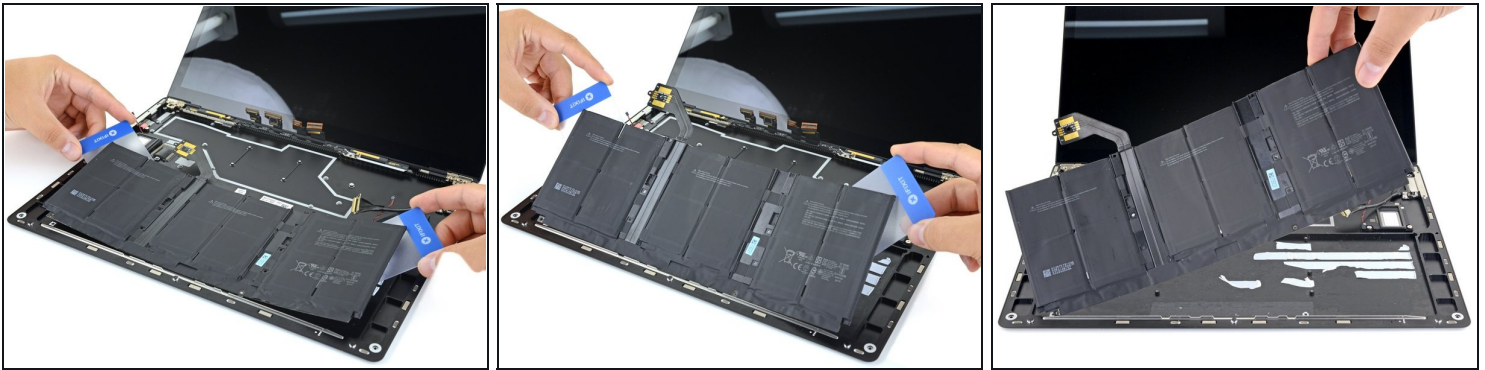

- Use both plastic cards to lift the entire battery assembly up and away from the case.
  - ⓘ If the battery still feels adhered to the case, reapply adhesive remover and use the plastic cards in problem areas to make sure all three cell groups are fully separated from the case.
- Remove the battery.
- ☑ During reassembly, double-check the fit and alignment of your new battery before sticking it down.
  - If your battery came with adhesive pre-installed on the bottom, flip it over and carefully peel away the liner to expose the adhesive. If your battery did not come with adhesive, apply a thin double-sided adhesive tape such as [Tesa 61395](#) to keep your battery in place.
  - Carefully position the battery and set it into place. Press and hold each cell group firmly for 5–10 seconds to secure it to the lower case.

For optimal performance, [calibrate your newly installed battery](#) after completing this guide.

Compare your new replacement part to the original part—you may need to transfer remaining components or remove adhesive backings from the new part before installing.

**To reassemble your device, follow the above steps in reverse order.**

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some basic [troubleshooting](#) or search our [Answers community](#) for help.

