




# Dell OptiPlex FX170 Heat Sink Replacement

The Heat Sink is the metal part with fins that...

Written By: Jess J Cuning

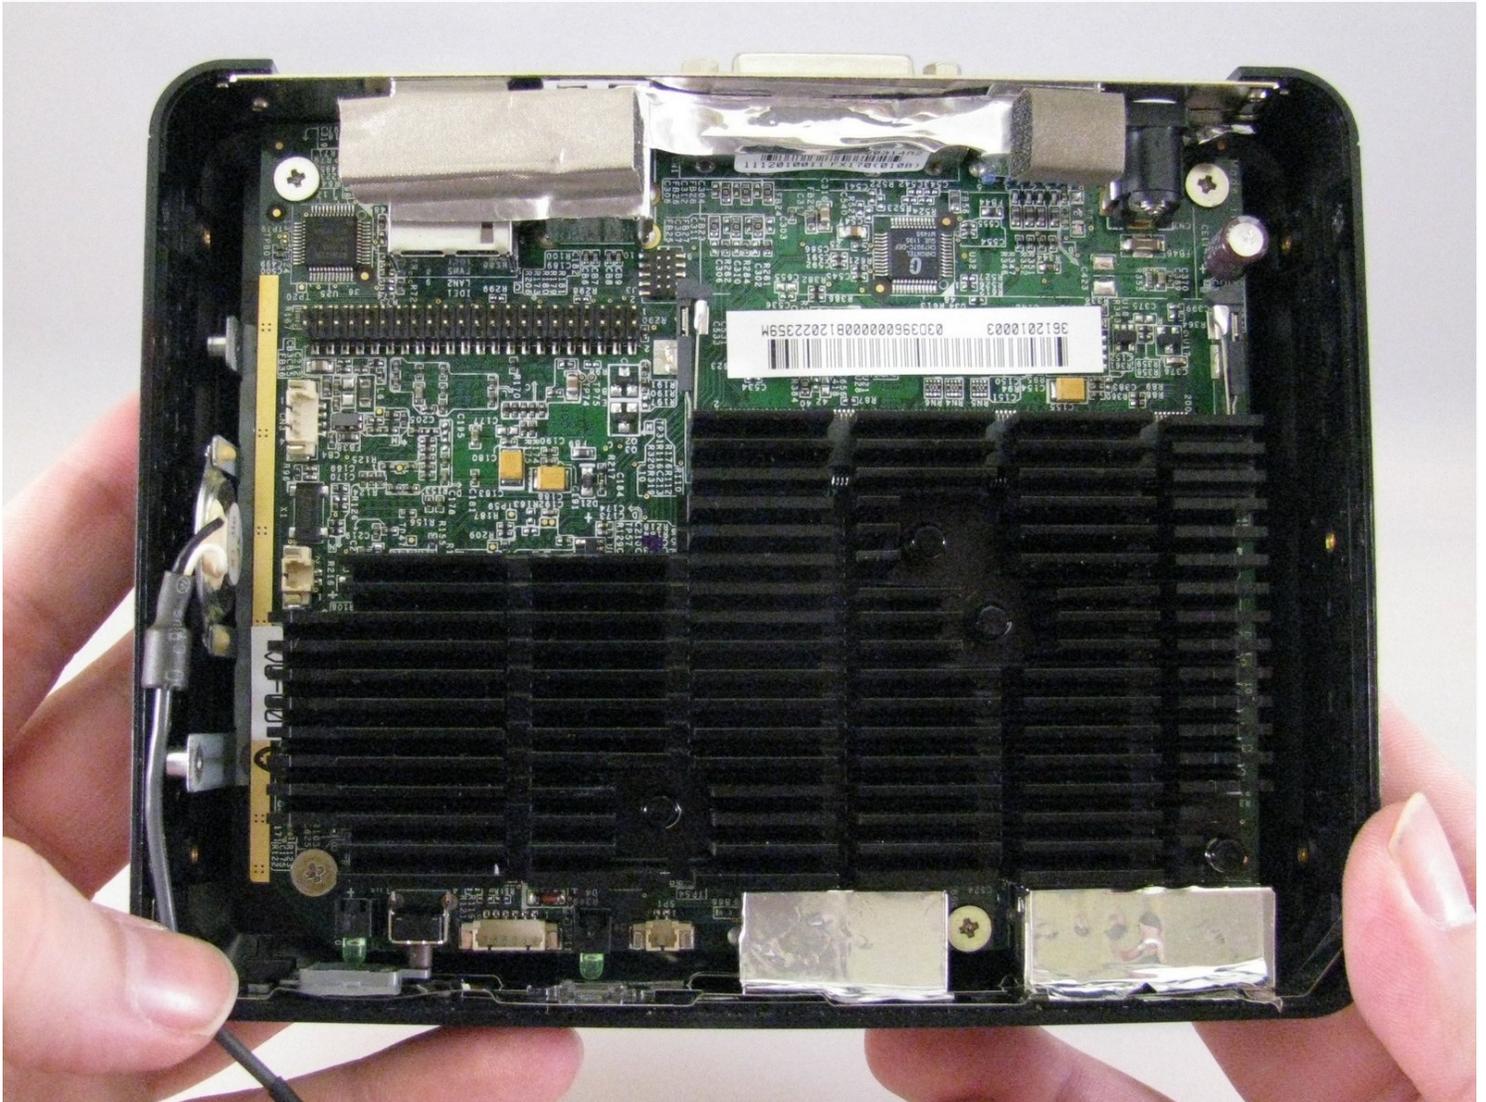

# INTRODUCTION

The Heat Sink is the metal part with fins that is mounted on top of the motherboard.

## TOOLS:

Phillips #0 Screwdriver (1)

Phillips #00 Screwdriver (1)

Spudger (1)

Tweezers (1)

## Step 1 — Case



- With the base stand facing upwards, unscrew the 6mm Phillips #2 screw.
- Pull the base stand straight up from the device.

## Step 2



- Unscrew and remove the eight 4mm Phillips #0 screws (four on top, four on bottom) from the top and bottom of the device.

## Step 3



- Run the flat side of the spudger along the entire line of the case starting from the back where the power plug and a small screw are located.

**⚠ Use care to not apply excessive force that could damage retaining clips while running the spudger along the case.**

## Step 4




- Once the clips have been released, gently disengage the cover from the rest of case by pulling in opposite directions.

## Step 5 — RAM



- Using fingers, push the clips on either side of the RAM. The RAM will pop up at a 45 degree angle when both clips are disengaged.

## Step 6

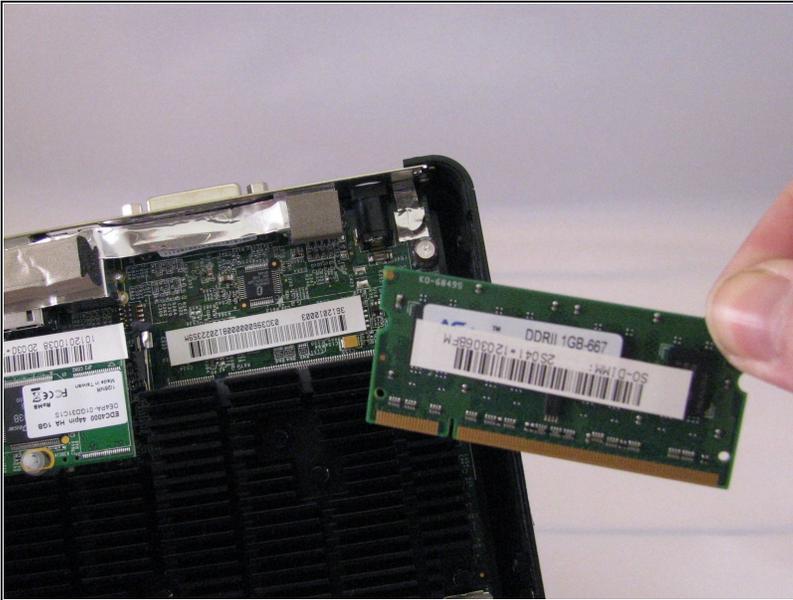


- Lift and pull out the RAM.

## Step 7 — Memory Board



- Using the spudger, gently push on the underside of the memory board to loosen it. Gently grasp each side and pull up to release the memory board.

## Step 8 — CMOS Battery

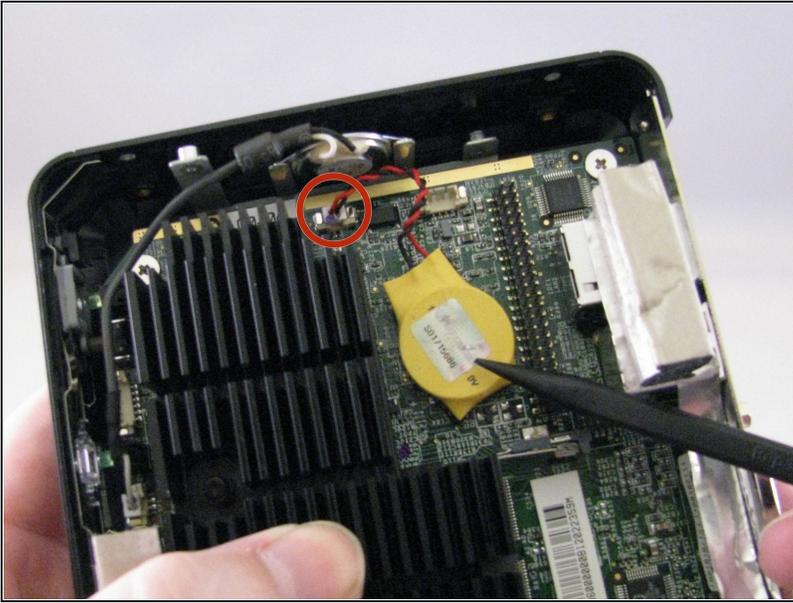


- To remove the battery, pull up on the connector that is plugged into the motherboard.

## Step 9 — Motherboard





- Remove the two 4mm Phillips #00 screws that are along the back of the case.

## Step 10

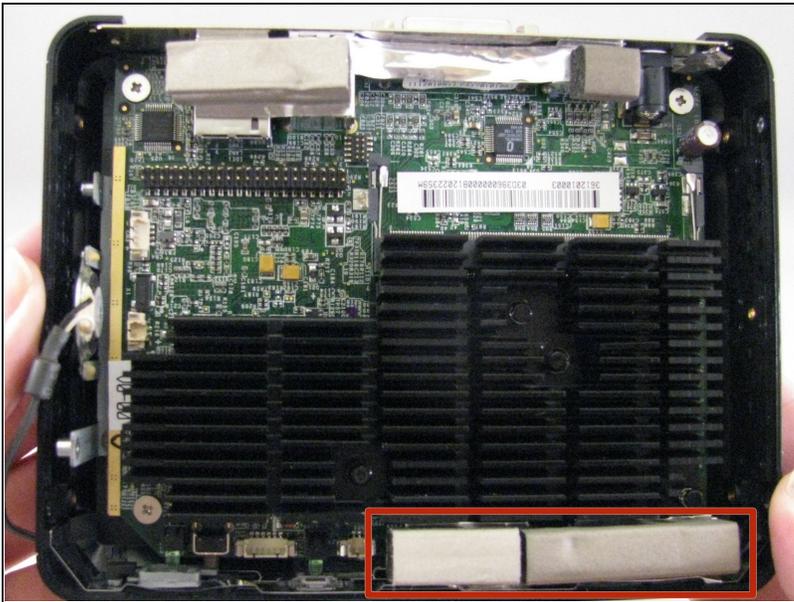

- Remove the two foam bumpers that lie on top of the two front USB ports with fingers. Do not throw them away.

## Step 11

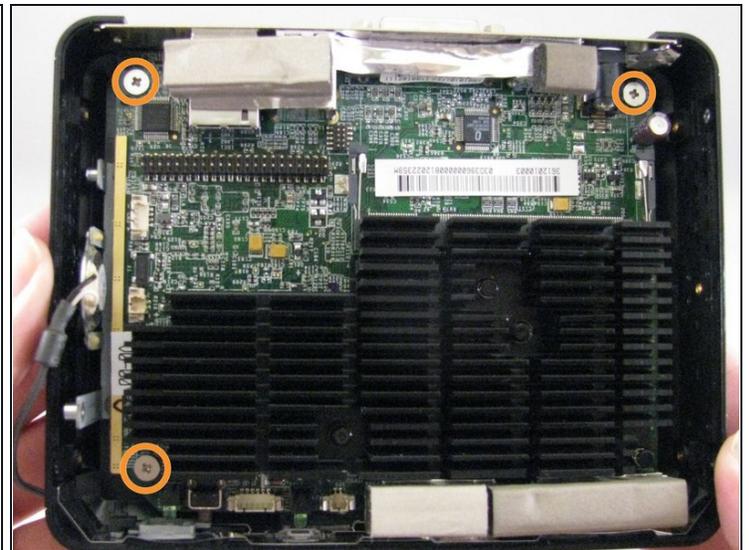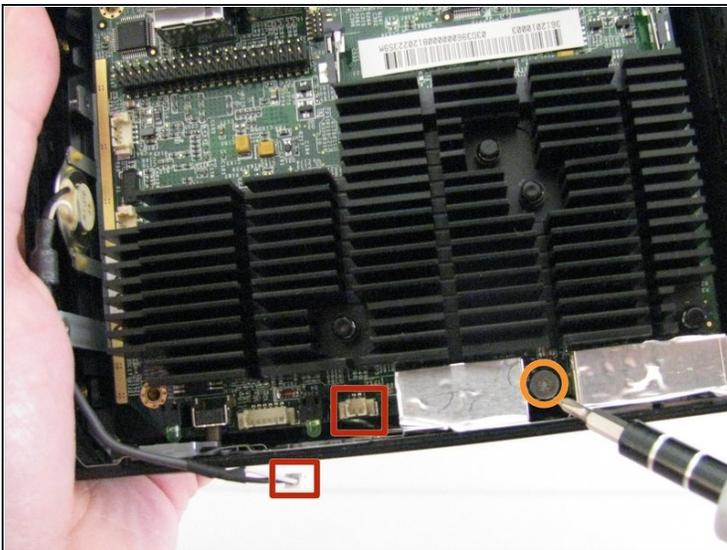

- Disconnect the speaker cable from the motherboard by gently pulling it straight up to disengage it from the port.
- Remove the four 4mm Philips #0 screws that secure the motherboard to the case.
- ⓘ The screw in the corner where the RAM is located is covered by a small piece of Mylar tape, peel this tape back to reveal the screw. The [tweezers](#) can be helpful for this.


## Step 12



- Gently grasp the motherboard by the heat sink (the black finned piece). Lift the motherboard at an angle such that the ports along the back side come up first.
- Continue lifting the motherboard, then slowly tilt the piece off to the right to break the Mylar tape over the front USB ports.

**⚠ Be careful when handling the motherboard to prevent electro-static discharge (ESD) damage. If the motherboard is being removed as part of a prerequisite, place the motherboard into a bag designed to prevent a build up of a static charge (usually referred to as a static bag).**

## Step 13 — Replacing the Heat Sink

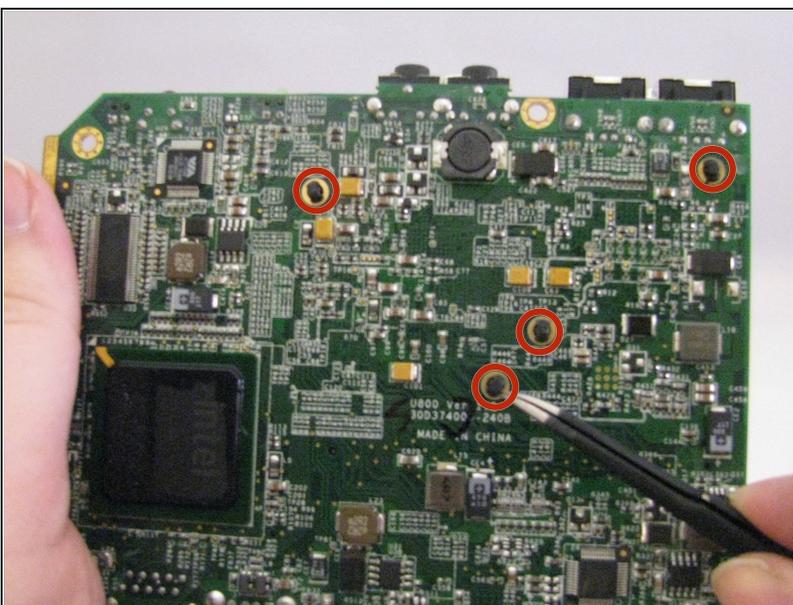

- On the back side of the motherboard, use the [tweezers](#) to squeeze the four protruding clips. These should be in the same position as the four black buttons recessed into the heat sink (when viewed from the front).

## Step 14



- Grab the heat sink and motherboard.
- Gently pull the heat sink away from the board.
- ☑ When replacing the heat sink, be sure to apply a new layer of thermal compound to the CPU to avoid overheating damage.
- ⓘ To reattach the heat sink: line the four clips up with the appropriate holes in the motherboard then simply push down on them to push them through to board. There should be a small click when each one is engaged.

---

To reassemble your device, follow these instructions in reverse order.